

[Manuals.plus](#) /

› [Hasbro](#) /

› Transformers EarthSpark 1-Step Flip Changer Soundwave Action Figure User Manual

Hasbro F6714

Transformers EarthSpark 1-Step Flip Changer Soundwave Action Figure User Manual

Model: F6714

INTRODUCTION

Welcome to the instruction manual for your new Hasbro Transformers EarthSpark 1-Step Flip Changer Soundwave action figure. This toy allows for quick and exciting conversion between robot and jet modes with a unique 1-step flip mechanism. Designed for ages 6 and up, this figure brings the action of Transformers: EarthSpark to life.

SETUP

Unboxing

Your Transformers EarthSpark Soundwave figure comes in plastic-free packaging. Carefully remove the figure from its packaging. Ensure all components are present and undamaged.



Image: Soundwave figure in its retail packaging, displaying both robot and jet forms.

Initial Inspection

Before play, inspect the figure for any loose parts or manufacturing defects. If any issues are found, refer to the warranty and support section.

OPERATING INSTRUCTIONS

Converting from Robot Mode to Jet Mode

1. Hold the Soundwave figure in its robot mode.
2. Gently toss or flip the robot figure into the air.
3. As the figure rotates and lands, its internal mechanism will automatically convert it into jet mode.



Image: Visual guide demonstrating the 1-step flip conversion from robot to jet mode.

Converting from Jet Mode to Robot Mode

To convert Soundwave back to robot mode, manually manipulate the figure. Gently fold and adjust the jet components until the robot form is achieved. This step requires direct manual adjustment.



Image: Soundwave figure displayed in its robot mode.

MAINTENANCE

Cleaning

To clean your Soundwave figure, wipe it with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive cleaners, as these can damage the plastic and paint.

Storage

Store the figure in a cool, dry place away from direct sunlight and extreme temperatures to prevent material degradation and color fading.

TROUBLESHOOTING

- **Figure does not convert smoothly to jet mode:** Ensure the figure is held correctly and flipped with enough momentum for the mechanism to engage. Check for any obstructions in the joints.
- **Parts feel stiff during manual conversion:** Apply gentle, even pressure. Do not force parts, as this may cause damage. If a joint is particularly stiff, try wiggling it gently to loosen.

SPECIFICATIONS

Model Number	F6714
Product Dimensions	1.94 x 5.25 x 6 inches
Weight	1.41 ounces
Recommended Age	Ages 6 and Up
Manufacturer	Hasbro

SAFETY INFORMATION

WARNING: Small parts may be generated. Not for children under 3 years. Choking hazard.
Always supervise young children during play. Keep the toy away from pets.



Image: Back of product packaging detailing safety warnings and age guidelines.

WARRANTY AND SUPPORT

This product is manufactured by Hasbro. For any questions regarding product defects, warranty claims, or support, please contact Hasbro customer service directly. Please retain your proof of purchase.

You can typically find contact information for Hasbro on their official website or on the product packaging.