

[Manuals.plus](#) /

› [Polly Pocket](#) /

› Polly Pocket Rainbow Unicorn Salon Playset HMX18 Instruction Manual

Polly Pocket HMX18

Polly Pocket Rainbow Unicorn Salon Playset HMX18 Instruction Manual

Model: HMX18

INTRODUCTION

This manual provides instructions for the assembly, operation, and care of the Polly Pocket Rainbow Unicorn Salon Playset, Model HMX18. This playset functions as both a unicorn styling head and a multi-level salon playset, designed for portable play.

PRODUCT COMPONENTS

The Polly Pocket Rainbow Unicorn Salon Playset includes the following items:

- 1 Playset (Unicorn compact)
- 2 Micro Dolls
- 2 Hair Clips
- 1 Large Comb
- 1 Small Comb
- 1 Bathtub with lift-up bubbles feature
- 1 Unicorn Figure
- 1 Horse Figure
- 1 Seesaw
- 1 Moon Swing
- 1 Throne
- 1 Vanity
- 1 Rainbow Arch
- 1 Dress Form
- 13 Additional Pop and Swap accessories

Note: Colors and decorations of components may vary.

SETUP INSTRUCTIONS

1. **Unboxing:** Carefully remove all components from the packaging. Ensure all listed items are present.
2. **Opening the Compact:** The playset is designed as a compact unicorn. To open, gently separate the two halves of the unicorn body to reveal the interior playset.
3. **Accessory Placement:** The playset includes various Pop and Swap accessories. These pieces can be placed into designated slots within the playset to customize the environment.



Image: The Polly Pocket Rainbow Unicorn Salon compact in its closed, portable form.

OPERATING INSTRUCTIONS

1. Unicorn Hair Styling

The exterior of the unicorn compact features soft hair. Use the included comb and hair clips to style the unicorn's mane. The hair clips can also be used by children.



Style the soft and colorful unicorn mane with hairclips!

Image: A child styling the soft, colorful mane of the unicorn compact using the provided comb and hair clips.



Remove the yellow comb to brush unicorn hair!

Image: A close-up view of a hand holding the yellow comb, demonstrating how to brush the unicorn's hair.

2. Interior Playset Activities

Once opened, the playset reveals a 3-story interior designed for various activities with the micro dolls and figures.

- **Spa Day:** Utilize the bathtub and vanity for spa-themed play with the micro dolls. The horse and unicorn figures can be groomed in the stable area.
- **Spinning Turret Floor:** Place a micro doll or figure on the spinning turret floor and rotate it for dynamic play.
- **Rotating Star Stage:** Position micro dolls or figures on the star stage and rotate it to move them around the playset.



Spin the magic star to move dolls and unicorns!

Image: The playset interior featuring a pink spinning star mechanism, with micro dolls and a small unicorn figure positioned on it.

- **Rainbow Seesaw:** Micro dolls can interact with the rainbow seesaw.
- **Moon Swing:** Place a micro doll on the moon swing for swinging action.
- **Moving Runway:** Position micro dolls on the runway and slide the mechanism to make them move, simulating a fashion show.



Move dolls along the runway for a fashion show!

Image: The playset interior displaying a moving runway feature, with a micro doll positioned to demonstrate its function.

3. Official Product Video



Video: A demonstration of the Polly Pocket Rainbow Unicorn Salon Compact, showcasing its various features and play possibilities. This video is provided by the manufacturer, MATTEL.

MAINTENANCE

Cleaning

To clean the playset, wipe surfaces with a damp cloth. Avoid using harsh chemicals or abrasive cleaners. For the unicorn's soft hair, gently comb to remove any tangles or debris.

Storage

When not in use, ensure all micro dolls and accessories are placed inside the compact. Close the unicorn compact securely using the latch mechanism. The integrated rainbow carry handle allows for easy transport and storage.

TROUBLESHOOTING

- **Missing Pieces:** Verify all components against the 'Product Components' list. If pieces are missing upon initial unboxing, contact customer support.
- **Difficulty Closing Compact:** Ensure all accessories and dolls are properly stored within the playset and not obstructing the closing mechanism.
- **Stuck Moving Parts:** Check for any small objects or debris that may be interfering with the movement of the spinning stage, runway, or other interactive features.

SPECIFICATIONS

Brand Name	Polly Pocket
Model Number	HMX18
UPC	194735134342
Age Range Description	4 years and older
Item Dimensions (LxWxH)	3.5 x 9.5 x 11.25 inches
Item Weight	750 g
Number of Pieces	26
Material Type	Plastic
Manufacturer	Mattel

WARRANTY INFORMATION

This product is sold without a manufacturer's warranty. Please refer to the retailer's return policy for information regarding returns or exchanges for defective products.

CUSTOMER SUPPORT

For further assistance or inquiries regarding the Polly Pocket Rainbow Unicorn Salon Playset, please contact the retailer where the product was purchased. For general information about Polly Pocket products, you may visit the official Polly Pocket website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question