

## ICE-WATCH 021006

# ICE-WATCH ICE Digit Dino Boy's Wristwatch User Manual

Model: 021006

## INTRODUCTION

Welcome to the user manual for your new ICE-WATCH ICE Digit Dino digital wristwatch. This manual provides detailed instructions to help you set up, operate, and maintain your watch, ensuring optimal performance and longevity. Your watch features a digital display, calendar function (Day-Date), stopwatch, and light function, all designed for ease of use and durability.





Figure 1: Front view of the ICE Digit Dino watch, showcasing its blue strap, green bezel, and digital display.

## SETUP

---

### 1. Initial Battery Information

Your ICE Digit Dino watch comes with one unknown type battery included and pre-installed. The watch is ready for use upon receipt. If the display is dim or not functioning, the battery may need replacement. Refer to the Maintenance section for battery replacement guidelines.

### 2. Setting Time and Date

The ICE Digit Dino watch typically features four buttons: MODE, RESET, ST/STP, and LIGHT. The exact procedure may vary slightly, but the general steps are as follows:

1. Press the **MODE** button repeatedly until the time setting mode is activated (usually indicated by flashing digits).
2. Use the **RESET** button to select the digit you wish to adjust (e.g., hours, minutes, year, month, day).
3. Use the **ST/STP** button to increase the selected digit. Hold it down for faster adjustment.
4. Once all settings are correct, press the **MODE** button again to exit the setting mode.



**Figure 2:** Side view illustrating the watch's control buttons for various functions.

### 3. Adjusting the Strap

The watch features a silicone strap with a buckle closure. To adjust the strap, simply thread the end of the strap through the buckle and secure it in the desired hole for a comfortable fit. Ensure the watch is snug but not too tight on the wrist.



**Figure 3:** The watch with its silicone strap and buckle, ready for adjustment.

## OPERATING INSTRUCTIONS

### 1. Button Functions Overview

- **MODE:** Cycles through different display modes (Time, Date, Stopwatch, Alarm). Also used to confirm settings.
- **RESET:** Used to reset the stopwatch, or to select digits during time/date setting.
- **ST/STP (Start/Stop):** Used to start and stop the stopwatch, or to adjust values during time/date setting.
- **LIGHT:** Activates the backlight for improved visibility in low-light conditions.

### 2. Calendar Function (Day-Date)

The watch automatically displays the current day and date. To view the date, you may need to press the **MODE** button once from the main time display. The date will typically show the month and day, and the day of the week will be indicated (e.g., MO for Monday).

### 3. Stopwatch Function

1. Press the **MODE** button until the stopwatch display appears (usually showing "00:00:00").
2. Press the **ST/STP** button to start the stopwatch.
3. Press the **ST/STP** button again to stop the stopwatch.
4. Press the **RESET** button to clear the stopwatch to zero.

## 4. Light Function

To illuminate the display, press the **LIGHT** button. The backlight will typically stay on for a few seconds, providing temporary visibility in dark environments.

## 5. Water Resistance

This watch is water resistant up to 10 bars (100 meters). This means it is suitable for swimming and snorkeling, but not for high-impact water sports or diving. Avoid pressing buttons while the watch is submerged to prevent water ingress.

## MAINTENANCE

---

### 1. Cleaning Your Watch

To clean your watch, wipe it gently with a soft, damp cloth. For silicone straps, mild soap and water can be used. Ensure the watch is completely dry before wearing it again. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish or seals.

### 2. Water Resistance Precautions

- Do not operate buttons while the watch is underwater.
- Avoid exposing the watch to extreme temperature changes (e.g., hot showers followed by cold water), as this can affect the water-resistant seals.
- Have the water resistance seals checked periodically by a qualified watch technician, especially after battery changes.

### 3. Battery Replacement

When the display becomes dim or the watch stops functioning, the battery may need to be replaced. Battery replacement should ideally be performed by a professional watch technician to ensure the water resistance is maintained. Attempting to replace the battery yourself may void the warranty and compromise the watch's water resistance.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead battery.	Replace the battery (refer to Maintenance section).
Time is incorrect.	Time not set correctly or accidental button press.	Reset the time and date (refer to Setup section).
Buttons are unresponsive.	Watch may be in a locked mode or internal issue.	Try a soft reset by removing and reinserting the battery (if comfortable), or contact support.
Condensation inside the watch.	Water resistance compromised due to impact or seal degradation.	Stop using the watch immediately and take it to a professional watch technician for inspection and repair.

## SPECIFICATIONS

---

- **Brand:** ICE-WATCH
- **Model Name:** ICE Digit Dino
- **Model Number:** 021006
- **ASIN:** B0B63C1MB4
- **Case Diameter:** 32 mm
- **Case Thickness:** 10 mm
- **Case Colour:** Blue
- **Dial Colour:** Green
- **Strap Material:** Silicone
- **Strap Length:** 19 cm
- **Strap Width:** 13 mm
- **Water Resistance:** 10 bars (100 meters)
- **Weight:** 21 g
- **Battery:** 1 Unknown battery (included)
- **Functions:** Digital time display, Calendar (Day-Date), Stopwatch, Light
- **Country of Origin:** China



Figure 4: Rear view of the watch, displaying the model reference number and water resistance rating.

## WARRANTY AND SUPPORT

---

### 1. Warranty Information

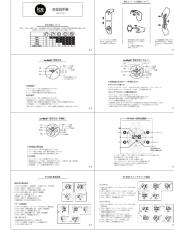
Your ICE-WATCH ICE Digit Dino wristwatch comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper use, accidents, unauthorized repairs, or normal wear and tear (e.g., strap damage, battery depletion).

### 2. Customer Support

For warranty claims, technical assistance, or any questions regarding your watch, please contact your retailer or the official ICE-WATCH customer service. Please have your proof of purchase and the watch model number (021006) available when contacting support.

You can find more information and contact details on the official ICE-WATCH website: [www.ice-watch.com](http://www.ice-watch.com)

## Related Documents - 021006

	<p><a href="#">ICE-WATCH ICE digit retro Digital Watch User Manual</a></p> <p>Comprehensive user manual for the ICE-WATCH ICE digit retro digital watch. Learn how to set time, alarm, use stopwatch functions, and configure dual time. Includes important safety and care instructions.</p>
	<p><a href="#">ICE-WATCH ICE digit ultra Digital Watch User Manual and Instructions</a></p> <p>Comprehensive user manual for the ICE-WATCH ICE digit ultra digital watch. Learn how to set time, alarms, use the stopwatch (lap and split times), and configure dual time. Includes important attention points, care instructions, water resistance, and battery information.</p>
	<p><b>ICE-WATCH</b> ICE-WATCH ICE digit retro/ultra</p>
	<p><a href="#">ICE Watch Size Guide: Find Your Perfect Fit</a></p> <p>A comprehensive guide to help you determine the correct ICE Watch size. This document provides detailed dimensions for various ICE Watch models, including case width, lug-to-lug length, and total band length, to ensure you find the perfect fit for your wrist.</p>
	<p><a href="#">Ice-Watch Sizing Guide: Find Your Perfect Fit</a></p> <p>A comprehensive guide to help you determine the correct size for your Ice-Watch, with detailed measurements and instructions in multiple languages.</p>
	<p><a href="#">Ice-Watch Size Guide: Find Your Perfect Fit</a></p> <p>A comprehensive guide to help you find the correct Ice-Watch size for your wrist. This document provides detailed dimensions and outlines for various Ice-Watch models, including ICE BOLIDAY, ICE SMART, ICE CHRONO, and more, ensuring you select the perfect fit.</p>