

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Berilona](#) /

› [Berilona Kids Smart Watch X38 Instruction Manual](#)

Berilona X38

Berilona Kids Smart Watch X38 Instruction Manual

Model: X38 | Brand: Berilona

1. Introduction

Thank you for choosing the Berilona Kids Smart Watch X38. This innovative smartwatch is designed to provide entertainment and educational features for children aged 4-12 years. It comes equipped with a variety of functions including games, a camera, music player, pedometer, flashlight, and unique educational tools like Time Teacher and Habit Tracking. This manual will guide you through the setup, operation, and maintenance of your new smartwatch.

What's Included:

- Berilona Kids Smart Watch X38
- Instruction Manual
- Charging Cable

Habit Tracking



Figure 1: Berilona Smart Watch X38 features compared to standard watches.

2. Safety Information

- **Choking Hazard:** Keep small parts away from young children.
- **Water Resistance:** The watch is not waterproof. Avoid submersion in water or exposure to heavy rain.
- **Battery Safety:** Do not attempt to replace the battery. Use only the provided charging cable.
- **Screen Care:** Avoid sharp objects that may scratch the screen.
- **Supervision:** Parental supervision is recommended for younger children during use.
- **Flashlight Use:** Do not shine the flashlight directly into eyes.

3. Product Overview

Familiarize yourself with the components of your Berilona Kids Smart Watch X38.



Figure 2: Key components of the Smart Watch X38.

- **HD Camera:** For taking photos and videos.
- **Flashlight:** Located at the top of the watch.
- **USB Charging Port:** For charging the device and transferring files.
- **Camera Button:** Dedicated button for camera functions.
- **Home Button:** Navigates back to the main screen or menu.
- **Comfortable Band:** Adjustable strap for a secure fit.

4. Setup

4.1 Initial Charging

Before first use, fully charge the smartwatch. Connect the provided USB charging cable to the watch's charging port and plug the other end into a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging progress. A full charge typically takes 2-3 hours.

4.2 Power On/Off

- **To Power On:** Press and hold the Home Button (usually on the side) for a few seconds until the screen lights up.
- **To Power Off:** Press and hold the Home Button for a few seconds until a power-off option appears on the screen. Select "Power Off" to shut down the device.

5. Operating Instructions

The Berilona Smart Watch features a smooth touch screen for easy navigation. Swipe left or right to browse through different applications and settings.

5.1 Time and Date

The main screen displays the time and date. You can customize the watch face by swiping on the main screen or by accessing the 'Wallpaper' option in Settings.

Practical Function



-  **Timer**
-  **Torch**
-  **Alarm**
-  **Calculator**
-  **Pedometer**
-  **Camera Sticker**

Digital clock faces



Figure 3: Customizable Analog Clock Faces.



Figure 4: Customizable Digital Clock Faces.

5.2 Camera, Video, and Photos

The watch features a built-in HD camera. Tap the 'Camera' icon to take pictures or the 'Video' icon to record videos. All captured media can be viewed in the 'Photos' or 'Player' applications. Use the 'Camera Sticker' feature to add fun filters and effects to your photos.

5.3 Games

Enjoy 15 pre-installed puzzle games designed to entertain and engage children. Access them via the 'Games' icon.

5.4 Music Player

The watch supports music playback. Connect the watch to a computer using the USB cable to transfer MP3 audio files to the watch's internal storage. Play music through the 'Music' or 'Player' application.

5.5 Pedometer

The integrated pedometer tracks your child's steps throughout the day, encouraging physical activity. View step count in the 'Pedometer' application.

5.6 Flashlight

Activate the flashlight function from the main menu for convenient illumination in dark environments.

Multifunction Watch

Stunning New Features



Audiobook



Time Teacher



Sound Teacher



Habit Tracking



Camera Sticker

General Function



Camera



Video



Photos



Player



Music



Games



Pedometer



Torch



Time Tools



Calculator



Calendar

Setting



Wallpaper



Date Time



Time Format



Advanced



Parental Control



Brightness



Time



Volume

Figure 5: Practical Functions of the Smart Watch.

5.7 Educational and Utility Features

- **Alarm Clock:** Set multiple alarms for reminders.
- **Calculator:** Basic arithmetic functions.
- **Calendar:** View dates and plan activities.
- **Audiobook:** Access 8 pre-loaded audiobook stories.
- **Time Teacher:** Helps children learn to tell time.
- **Sound Teacher:** Educational tool for sounds.
- **Habit Tracking:** A unique feature to help cultivate good habits (e.g., breakfast time, walk the dog, go to school, lunch, sports, go home, dinner, housework, homework, reading, go to bed, get up, brush your teeth).

Analog Clock Faces



Figure 6: Habit Tracking and Audiobook features.



Figure 7: Overview of Multifunction Watch features.

5.8 Parental Control

Parents can access the parental control settings to manage watch usage and game playing time, ensuring a balanced experience for children.

5.9 Settings

Customize your watch experience through the 'Settings' menu. Options include adjusting brightness, volume, changing wallpaper, and setting time format.

6. Maintenance

- **Cleaning:** Wipe the watch with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the watch in a cool, dry place when not in use.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the watch regularly.

7. Troubleshooting

Problem	Solution
Watch does not power on.	Ensure the watch is fully charged. If the battery is completely drained, it may take a few minutes for the screen to respond after connecting to power.

Problem	Solution
Screen is unresponsive.	Restart the watch by holding the Home Button until it powers off, then power it back on. Ensure the screen is clean and dry.
Cannot transfer music/files.	Ensure the USB cable is securely connected to both the watch and the computer. Try a different USB port or cable. Check if the watch is recognized as a removable drive on your computer.
Games are not loading.	Ensure sufficient storage space. Restart the watch. If parental controls are active, check if game time limits have been reached.

8. Specifications

Feature	Detail
Product Dimensions	1.97 x 1.57 x 0.39 inches
Item Weight	2.12 ounces (60 Grams)
Item Model Number	X38
Batteries	1 Lithium Polymer batteries required (included)
Battery Capacity	400 Milliamp Hours
Standing Screen Display Size	1.54 inches
Memory Storage Capacity	512 MB
Connectivity Technology	USB
Special Features	Camera, Games, Music, Flashlight, Alarm Clock, Video, Pedometer, Audiobook, Time Teacher, Sound Teacher, Habit Tracking, Camera Sticker, Parental Control
Manufacturer	Berilona
Country of Origin	China

9. Warranty and Support

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Berilona website. Keep your purchase receipt as proof of purchase for any warranty claims.