

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [soges](#) /
- › [soges Modern TV Stand \(Model 10FJTRTC02BR\) Instruction Manual](#)

soges 10FJTRTC02BR

soges Modern TV Stand (Model 10FJTRTC02BR) Instruction Manual

For TVs up to 60 Inches

INTRODUCTION

Thank you for purchasing the soges Modern TV Stand. This manual provides essential information for the safe assembly, proper use, and maintenance of your new entertainment center. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Image: The soges Modern TV Stand, Model 10FJTRTC02BR, positioned in a living room environment, showcasing its design and functionality beneath a wall-mounted television.

SAFETY INFORMATION

Please observe the following safety precautions during assembly and use:

- Keep all small parts and packaging materials away from children and pets to prevent choking hazards.
- Ensure all connections are securely tightened before use. Periodically check and re-tighten fasteners as needed.
- Do not overload the TV stand. Refer to the Specifications section for weight capacity limits.
- Place the TV stand on a flat, level surface to prevent tipping.
- Use caution when moving the assembled unit to avoid injury or damage.
- This product is intended for indoor use only.

PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please

contact customer support.

- Top Panel
- Side Panels (Left & Right)
- Bottom Panel
- Back Panel
- Shelf Panels
- Drawer Components
- Cabinet Doors (2)
- Metal Legs (6)
- Hardware Pack (screws, dowels, hinges, drawer slides, handles, etc.)
- Assembly Tool (e.g., Allen wrench)

ASSEMBLY INSTRUCTIONS

Assembly is required for this product. It is recommended to have two people for assembly. Please follow these steps carefully:

1. **Prepare the Area:** Clear a spacious, clean, and level area for assembly. Lay down a blanket or cardboard to protect the floor and furniture components.
2. **Identify All Parts:** Unpack all components and hardware. Compare them with the parts list to ensure everything is present.
3. **Attach Legs:** Secure the six metal legs to the bottom panel using the provided screws. Ensure they are firmly attached.
4. **Assemble the Frame:** Attach the side panels to the bottom panel, then connect the shelf panels and internal dividers. Use dowels and screws as indicated in the diagram.
5. **Install Drawer Slides:** Attach the drawer slides to the designated internal panels. Ensure they are aligned correctly for smooth drawer operation.
6. **Assemble the Drawer:** Construct the drawer box using the drawer panels and hardware. Install the drawer handle.
7. **Insert Drawer:** Carefully slide the assembled drawer into its designated slot on the installed drawer slides.
8. **Attach Cabinet Doors:** Install the hinges onto the cabinet doors and the corresponding side panels. Attach the doors, ensuring they open and close smoothly. Adjust hinges if necessary for proper alignment.
9. **Attach Back Panel:** Secure the back panel to the rear of the unit using small nails or screws.
10. **Attach Top Panel:** Place the top panel onto the assembled frame and secure it with screws.
11. **Final Check:** Verify that all screws are tightened and the unit is stable.



Image: A detailed diagram illustrating the overall dimensions and internal compartment measurements of the soges Modern TV Stand.

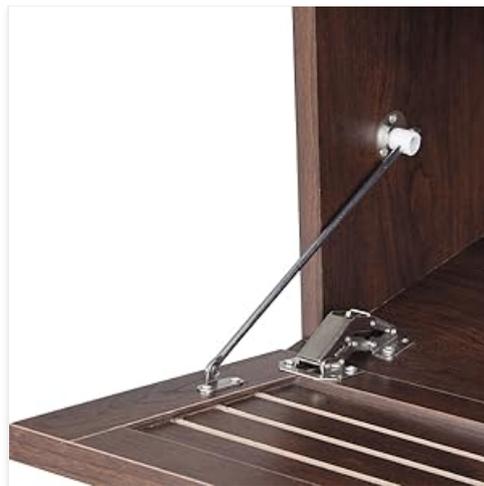


Image: A close-up view of a hinge mechanism, highlighting its construction and attachment point on the TV stand's cabinet door.

OPERATING INSTRUCTIONS

The soges Modern TV Stand is designed for convenient storage and display of your entertainment devices and media.

- **Placing Your TV:** The spacious tabletop is suitable for televisions up to 60 inches. Ensure the TV's base is centered and stable on the stand.
- **Using Open Shelves:** The three open display shelves are ideal for media players, gaming consoles, soundbars, or decorative items.
- **Utilizing Cabinets:** The two cabinets with flip doors provide concealed storage for items you wish to keep out of sight, such as DVDs, games, or accessories.
- **Drawer Storage:** The central drawer offers additional enclosed storage for smaller items like remote controls, cables, or manuals.



Image: The soges Modern TV Stand with its two cabinet doors flipped open and the central drawer extended, demonstrating the available storage compartments.



Image: The Soges Modern TV Stand with a graphic overlay indicating its compatibility with televisions up to 60 inches in size.

MAINTENANCE

Proper care will extend the life and appearance of your TV stand.

- **Cleaning:** Wipe the surfaces with a dry, soft cloth. For stubborn marks, a slightly damp cloth followed immediately by a dry cloth can be used. Avoid harsh chemicals or abrasive cleaners.
- **Spills:** Promptly wipe up any spills to prevent staining or damage to the wood finish.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration.
- **Heat:** Do not place hot items directly on the surface. Use coasters or protective pads.
- **Fasteners:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten as necessary.

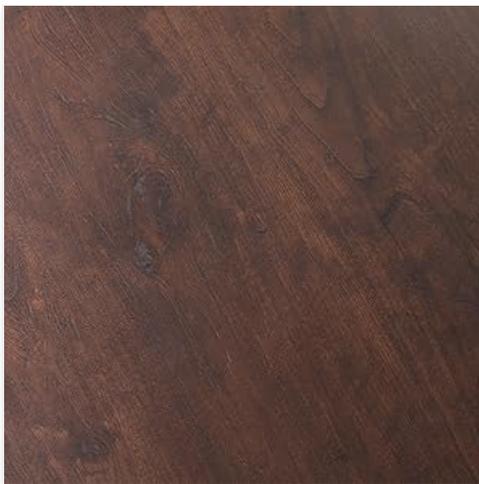


Image: A detailed view of the TV stand's tabletop, emphasizing its smooth, durable, and water-resistant surface.

TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions:

- **Unit is Wobbly:**

Solution: Ensure the TV stand is on a level surface. Check and tighten all assembly screws. If adjustable feet are present, adjust them to stabilize the unit.

- **Drawer Does Not Slide Smoothly:**

Solution: Verify that the drawer slides are correctly installed and aligned. Ensure no debris is obstructing the slides. Lubricate slides with a silicone-based spray if necessary.

- **Cabinet Doors Are Misaligned:**

Solution: Adjust the hinges on the cabinet doors. Most hinges allow for minor adjustments to align the doors vertically, horizontally, and in depth. Refer to hinge manufacturer instructions if available.

- **Missing Parts or Damaged Components:**

Solution: Do not proceed with assembly. Contact customer support immediately with your purchase details and a description of the issue.

SPECIFICATIONS

Feature	Detail
Model Number	10FJTRTC02BR
Overall Dimensions (W x D x H)	56.6" x 15.7" x 25.5"
Weight	79 Pounds
Material	High-quality E1 MDF, Acacia Wood, Engineered Wood
Color	Brown
TV Size Compatibility	Up to 60 inches
Weight Capacity	Approximately 176 lbs (top surface)
Storage Features	2 Cabinets with flip doors, 1 Drawer, 3 Open Display Shelves

Feature	Detail
Assembly Required	Yes
Care Instructions	Wipe with Dry Cloth

WARRANTY INFORMATION

soges products are manufactured with quality and durability in mind. For specific warranty details regarding your TV stand, please refer to the documentation included with your purchase or contact soges customer support. Generally, warranties cover manufacturing defects under normal use.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please do not hesitate to contact our customer support team. We are committed to providing a solution within 24 hours.

Contact Information:

Please refer to your purchase invoice or the official soges website for the most current contact methods (email, phone, or online chat).