

[manuals.plus](#) /› [VINABTY](#) /› [VINABTY AXD7681 Replacement Remote Control User Manual for Pioneer CD Receiver X-EM21 X-EM11](#)

VINABTY AXD7681

VINABTY AXD7681 Replacement Remote Control User Manual

For Pioneer CD Receiver Models X-EM21 & X-EM11

INTRODUCTION

This manual provides instructions for the VINABTY AXD7681 Replacement Remote Control, specifically designed for use with Pioneer CD Receiver models X-EM21 and X-EM11. Please read this manual thoroughly before using the remote control to ensure proper operation and longevity.

SETUP

1. Battery Installation

The VINABTY AXD7681 remote control requires two (2) AAA alkaline batteries (not included) for operation.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Back of the remote control with the battery cover removed, illustrating the battery insertion process. Note the correct orientation for AAA batteries.

OPERATING INSTRUCTIONS

The VINABTY AXD7681 remote control provides full functionality for your Pioneer CD Receiver models X-

EM21 and X-EM11. Point the remote control directly at the receiver's infrared sensor for optimal performance.

Button Functions Overview



Image: Front view of the VINABTY AXD7681 remote control, highlighting the layout of all control buttons.

- **STANDBY/ON ()**: Powers the receiver on or off (standby mode).
- **DISC**: Selects the CD player as the input source.
- **USB**: Selects the USB input source.
- **TUNER**: Selects the radio tuner as the input source.
- **OPEN/CLOSE**: Opens or closes the CD tray.
- **iPod**: Selects the iPod input source.
- **MODE**: Cycles through different playback modes (e.g., repeat, shuffle).
- **PROGRAM**: Enters program mode for CD playback.
- **AUX**: Selects the auxiliary input source.
- **DOCK MENU**: Accesses the menu for a connected iPod dock.
- **SLEEP/TIMER**: Sets the sleep timer or accesses timer functions.
- **Navigation Buttons (Up, Down, Left, Right, ENTER)**: Used for menu navigation and selection.
- **PLAY/PAUSE (▶/||)**: Starts or pauses playback.
- **STOP (■)**: Stops playback.
- **SKIP (/)**: Skips to the previous or next track/station.
- **REWIND/FAST FORWARD (/)**: Rewinds or fast forwards during playback.
- **P.BASS**: Activates or deactivates the P.BASS (Powerful Bass) function.
- **EQ**: Cycles through equalizer presets.
- **DISPLAY/CLOCK**: Changes display information or sets the clock.
- **MUTE ()**: Mutes or unmutes the audio output.
- **VOL (+ / -)**: Increases or decreases the volume level.
- **Number Buttons (0-9)**: Direct track selection or radio station input.
- **RDS**: Activates or deactivates Radio Data System functions.
- **PTY/ASPM**: Accesses Program Type or Automatic Station Preset Memory functions.

MAINTENANCE

1. Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

2. Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops functioning. Always replace both batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Dispose of used batteries according to local regulations. Do not dispose of batteries in household waste.

3. Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control does not work.	Batteries are dead or incorrectly inserted.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity.
Remote control range is poor.	Obstruction between remote and receiver; low battery power.	Ensure a clear line of sight to the receiver's IR sensor. Replace batteries if necessary.
Specific buttons do not respond.	Button malfunction or receiver not in correct mode.	Check if the receiver is in the appropriate input mode (e.g., DISC for CD functions). If problem persists, contact support.

SPECIFICATIONS

- Model:** VINABTY AXD7681
- Compatible Pioneer CD Receiver Models:** X-EM21, X-EM11
- Connectivity Technology:** Infrared (IR)
- Power Source:** 2 x AAA Alkaline Batteries (not included)
- Weight:** Approximately 47 Grams

WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the terms provided by your retailer at the time of purchase. For technical assistance or inquiries, please contact the seller directly through the platform where the purchase was made.

VINABTY Manufacturer does not provide direct end-user support for this replacement item. Please direct all support requests to your point of purchase.