

[Manuals.plus](#) /

› [MEDION](#) /

› MEDION E50 XL MD10532 Air Fryer User Manual

MEDION MD10532

MEDION E50 XL MD10532 Air Fryer User Manual

Model: MD10532

1. INTRODUCTION

Thank you for purchasing the MEDION E50 XL MD10532 Air Fryer. This appliance utilizes rapid hot air circulation technology to cook your favorite foods with little to no added oil, resulting in healthier and crispy meals. Please read this manual thoroughly before operating the appliance and retain it for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your air fryer.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse the cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls or other appliances to allow for proper ventilation.
- Never fill the basket with oil.

3. PRODUCT OVERVIEW

The MEDION E50 XL Air Fryer is designed for efficient and healthy cooking. Familiarize yourself with its components and digital control panel.

3.1 Components

- Main Unit
- Digital Control Panel
- Frying Basket (5.7 L capacity)
- Non-stick Coating
- Cool Touch Handle
- Non-slip Feet



Figure 1: The MEDION E50 XL Air Fryer with its frying basket containing cooked fries, demonstrating its primary function.

3.2 Digital Control Panel

The intuitive digital control panel allows for easy adjustment of cooking settings and selection of pre-set programs.

- **Temperature Control:** Adjust temperature up to 200 °C.
- **Timer:** Set cooking time up to 60 minutes.
- **8 Automatic Programs:** Dedicated settings for various foods like fries, chicken, steak, vegetables, shrimp, pork, fish, and muffins.

Wenig bis gar kein Öl notwendig

Endlich gesund genießen



Figure 2: The digital control panel displaying various program icons for different food types, simplifying cooking selection.

360° Wärmezirkulation

Rotierender Heißluftstrom garantiert knusprige Ergebnisse



Figure 3: An internal view diagram highlighting the 360° hot air circulation system, which ensures even cooking and crispiness.

4. SETUP

4.1 Unpacking

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Check that all components are present and undamaged.

4.2 Cleaning Before First Use

1. Wipe the exterior of the appliance with a damp cloth.
2. Clean the frying basket and any removable parts with hot water, dish soap, and a non-abrasive sponge.
3. Rinse thoroughly and dry all parts completely before use.

4.3 Placement

Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm of free space around the appliance to allow for adequate ventilation.



Figure 4: The air fryer's removable design, showing the basket and inner tray separated from the main unit, facilitating thorough cleaning.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

1. Plug the power cord into a grounded wall outlet. The appliance will beep, and the digital display will illuminate.
2. Carefully pull the frying basket out of the air fryer.
3. Place the food you wish to cook into the basket. Do not exceed the MAX fill line.
4. Slide the frying basket back into the appliance until it clicks into place.

5. Press the power button to turn on the appliance.
6. Use the temperature and time adjustment buttons to set your desired cooking parameters, or select one of the 8 automatic programs.
7. Press the start button to begin cooking.
8. During cooking, you can pull out the basket to shake or turn the food. The appliance will pause automatically and resume when the basket is reinserted.
9. Once the timer reaches zero, the appliance will beep, indicating cooking is complete.
10. Carefully pull out the basket and empty the cooked food. Use heat-resistant tongs or utensils.



Figure 5: The air fryer in operation, demonstrating its capacity to prepare crispy foods like fries with significantly less oil than traditional methods.

5.2 Using Automatic Programs

The MEDION E50 XL Air Fryer features 8 pre-set programs for common dishes. To use:

1. After turning on the appliance, press the program selection button (usually indicated by a menu icon).
2. Cycle through the programs until the desired food icon is displayed.
3. The appliance will automatically set the optimal temperature and time for that program.
4. Press the start button to begin cooking.

6. COOKING GUIDE

The following are general guidelines. Actual cooking times and temperatures may vary based on food quantity, size, and desired crispiness.

- **Fries:** For best results, shake the basket halfway through cooking.
- **Chicken:** Ensure chicken is cooked through to a safe internal temperature.
- **Vegetables:** Toss with a small amount of oil and seasoning for enhanced flavor.
- **Preheating:** For some foods, preheating the air fryer for 3-5 minutes at the desired temperature can improve results.

7. CLEANING AND MAINTENANCE

Regular cleaning ensures hygiene and prolongs the life of your air fryer.

7.1 Cleaning

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners.
3. Remove the frying basket and clean it with hot water, dish soap, and a non-abrasive sponge. The non-stick coating allows for easy cleaning.
4. For stubborn food residue, soak the basket in hot water with dish soap for about 10 minutes.
5. Ensure all parts are completely dry before reassembling or storing the appliance.

7.2 Storage

Store the cleaned and dried air fryer in a cool, dry place.

8. TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on	Not plugged in; Power outlet malfunction; Basket not inserted correctly	Check power cord connection; Test outlet with another appliance; Ensure basket is fully pushed in until it clicks
Food not cooked evenly	Too much food in basket; Food not shaken/turned	Reduce food quantity; Shake or turn food halfway through cooking
White smoke from appliance	Grease residue from previous use; Fatty food cooking	Clean basket thoroughly; Remove excess fat from food before cooking

Problem	Possible Cause	Solution
Food not crispy	Not enough cooking time/high temperature; Too much moisture in food	Increase cooking time or temperature; Pat food dry before cooking; Use a small amount of oil for crispiness

9. SPECIFICATIONS

- **Model:** MD10532
- **Power:** 1700 Watts
- **Capacity:** 5.7 Liters
- **Voltage:** 240 Volts
- **Temperature Control:** Up to 200 °C
- **Timer:** Digital 60 minutes
- **Dimensions (L x W x H):** 30 x 34.5 x 28.4 cm
- **Weight:** 6 Kilograms
- **Special Features:** Automatic shut-off, Hot air circulation, Cool-Touch housing, Digital display, Overheat protection, Non-stick frying basket, Non-slip feet.

Abnehmbares Design

Für kinderleichte Nutzung



Figure 6: A visual representation of the air fryer's dimensions, providing clarity on its physical size.

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official MEDION website. Information regarding the availability of spare parts is not provided in this manual. For any service or repair needs, please contact MEDION customer service directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B63YQJ3X>

More documents and user manuals: **<https://manuals.plus/>**