

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Philips Beauty](#) /

› [Philips Beauty Lady Electric Shaver Series 6000, Cordless with 4 Accessories, BRL136/00, White Latest Version Shaver + 4 Accessories](#)

Philips Beauty BRL136/00

Philips Beauty Lady Electric Shaver Series 6000 Instruction Manual

Brand: Philips Beauty

Model: BRL136/00

1. INTRODUCTION AND OVERVIEW

The Philips Lady Shaver Series 6000 is engineered for gentle and comfortable hair removal across various body areas. Its design prioritizes skin comfort, with many users reporting no razor burns or redness. The floating foil that adapts to your body's contours, ensuring a close and even shave. It supports both wet and dry use, making it versatile for in-shower or on-the-go sessions, thanks to its anti-slip grip. This cordless device offers up to 40 minutes of use on a single charge and includes a USB-A charging cable for convenience.

2. PRODUCT FEATURES

- Designed for gentle and comfortable use on various body areas.
- Features rounded trimmer tips in front of and behind the shaving foil for smooth gliding.
- Suitable for both wet and dry use, with an anti-slip grip for optimal handling in the shower or bath.
- Equipped with a rechargeable battery providing up to 40 minutes of cordless operation.
- Includes a USB-A charging cable (power adapter not included).
- Recognized as a Women's Health Editor's Choice 2022.

3. SETUP

Before first use, or if the battery is low, ensure your Philips Lady Shaver Series 6000 is fully charged. Use the provided USB-A charging cable. Note that a power adapter is not included, so you will need to use a compatible USB power adapter (e.g., from a smartphone charger) to connect the cable to a power outlet. A full charge provides up to 40 minutes of cordless use. To charge, insert the USB-A cable into a compatible power adapter and connect the other end to the shaver's charging port. The charging indicator will show the charging status.

4. OPERATING INSTRUCTIONS

The Philips Lady Shaver Series 6000 can be used on various body areas for effective hair removal. It is designed for both

wet and dry use.

4.1. Dry Shaving

For dry shaving, ensure your skin is clean and completely dry. Turn on the shaver and gently glide the floating foil head over the skin. Move the shaver slowly against the direction of hair growth for optimal results. The rounded trimmer tips help the shaver glide smoothly without irritation.

4.2. Wet Shaving

For a more gentle and comfortable experience, especially for sensitive skin, use the shaver during your shower or bath routine. Apply foam or gel to the skin before shaving. The anti-slip grip ensures secure handling even when wet. Glide the shaver over your skin, moving against the hair growth. Rinse the shaver head under water during and after use to remove hair and foam/gel residue.

4.3. Using Accessories

Your shaver comes with 4 accessories to enhance your shaving experience:

- **Exfoliation glove:** Use prior to shaving to help prevent ingrown hairs and prepare the skin.
- **Skin stretcher cap:** Helps to stretch the skin for a closer shave, particularly useful on areas with loose skin.
- **Soft glide cap:** Provides an extra layer of comfort and smooth gliding for sensitive areas.
- **Trimming comb:** Attach this to the shaver head to trim hair to a desired length before a closer shave, or for maintaining specific areas.

Refer to the specific accessory instructions for attachment and optimal use.

5. MAINTENANCE

Regular cleaning of your Philips Lady Shaver ensures optimal performance and hygiene. The shaver is designed for easy cleaning.

- After each use, especially with foam or gel, rinse the shaver head thoroughly under running water.
- The parts of the shaver head can be easily detached for more thorough cleaning. Remove any accumulated hair using the small cleaning brush provided.
- Ensure all parts are completely dry before reassembling the shaver or storing it.
- Store the shaver in a dry place, ideally in its travel bag, to protect it from dust and damage.

6. TROUBLESHOOTING

Problem	Possible Cause / Solution
Shaver stops or has short battery life.	The battery may be low. Ensure the shaver is fully charged before use. A full charge provides up to 40 minutes of cordless operation.
Shaver does not provide a close shave or pulls hair.	Ensure the shaver head is clean and free of hair buildup. Try shaving against the direction of hair growth. For a closer shave, ensure skin is taut. Consider using the skin stretcher cap. If using dry, ensure skin is completely dry. For wet shaving, use with foam or gel.
Power adapter not included.	The product is designed to be charged with a standard USB-A power adapter (not supplied). You can use a USB power adapter from another device, such as a smartphone charger. For further assistance, contact Philips customer support.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	2.36 x 4.72 x 7.28 inches; 9.52 ounces
Item Model Number	BRL136/00
Batteries	1 Lithium Ion batteries required (included)
UPC	075020102324
Manufacturer	Norelco
Country of Origin	China
Recommended Uses For Product	Body
Special Feature	Designed to be gentle and comfortable on skin in different body areas
Power Source	Battery Powered
Model Name	Philips Lady Electric Shaver Series 6000, Cordless with 4 Accessories

8. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Philips Beauty website or the comprehensive user manual provided with your product. A digital version of the user manual can be accessed via the following link:

[Download User Manual \(PDF\)](#)

9. VISUAL GUIDE

9.1. Product Images



Philips Lady Shaver Series 6000 shown with its main body and four included accessories: an exfoliation glove, skin stretcher cap, soft glide cap, and trimming comb.



A woman demonstrating the use of the Philips Lady Shaver on her armpit, highlighting its ergonomic design for various body areas.

Floating foil glides naturally over skin and curves



Detailed view of the shaver's floating foil head, designed to glide naturally over skin and contours for an even shave.



Illustration of wet shaving: a woman using the Philips Lady Shaver on her leg while in a bathtub, emphasizing its suitability for use with foam or gel.

Rounded trimmer tips for a skin-friendly shave



A close-up shot highlighting the rounded trimmer tips of the shaver, designed for a skin-friendly and comfortable shave.



The retail packaging for the Philips Lady Shaver Series 6000, showcasing the product and its key features.



Front view of the Philips Lady Shaver Series 6000, displaying its ergonomic design and power button.



Back view of the Philips Lady Shaver Series 6000, showing its smooth contour.



An angled view of the Philips Lady Shaver Series 6000, highlighting its compact and user-friendly shape.



A detailed close-up of the shaver head, showing the foil and trimmer elements.



Another close-up of the shaver head, providing a different perspective on its design.

0

PHILIPS

Philips
www.philips.com

The Philips Lady Shaver Series 6000 displayed with its various accessories, including the exfoliation glove and caps, on a clean marble surface.



The Philips Lady Shaver Series 6000 covered in water droplets, illustrating its waterproof design for wet shaving.



A woman performing dry shaving on her leg using the Philips Lady Shaver Series 6000, showcasing its convenience for quick touch-ups.



Another perspective of a woman dry shaving her leg, demonstrating the shaver's ease of use outside of the shower.

9.2. Official Product Videos

This video provides a brief overview of the Philips Lady Electric Shaver Series 6000, highlighting its cordless design and included accessories. It demonstrates the product's appearance and basic features.

This video showcases the Philips Beauty Lady Electric Shaver Series 6000 (Model BRL136/00), demonstrating its use and key functionalities for effective hair removal.