

[Manuals.plus](#) /

› [Vicco](#) /

› Vicco R-Line Goldkraft Oak Anthracite 60 cm Glass Wall Cabinet Instruction Manual

Vicco Hängeschrank 60 cm

Vicco R-Line Goldkraft Oak Anthracite 60 cm Glass Wall Cabinet Instruction Manual

Model: Hängeschrank 60 cm

INTRODUCTION

This manual provides essential information for the safe and proper assembly, operation, and maintenance of your Vicco R-Line Goldkraft Oak Anthracite 60 cm Glass Wall Cabinet. Please read these instructions carefully before beginning assembly and retain them for future reference.

The Vicco R-Line glass wall cabinet is designed to provide practical storage in your kitchen. It features two glass doors and an internal shelf, offering space for dishes and glassware. The cabinet is constructed from 16 mm easy-care particle board with a melamine resin coating.



Image: Front view of the Vicco R-Line Goldkraft Oak Anthracite 60 cm Glass Wall Cabinet.

SETUP AND ASSEMBLY

Your cabinet is supplied as a kit and requires assembly. Ensure all components are present before starting. A detailed assembly guide and mounting hardware are included with your purchase.

Required Tools (Not Included):

- Screwdriver (Phillips head and flathead)
- Hammer
- Drill (for wall mounting)
- Measuring tape
- Level
- Pencil

Assembly Steps:

1. **Unpack Components:** Carefully unpack all parts and check against the included parts list.
2. **Assemble Cabinet Frame:** Follow the step-by-step diagrams in the provided assembly instructions to connect the side panels, top, and bottom panels.
3. **Install Back Panel:** Secure the back panel using the provided nails or screws. Ensure it is flush and square.
4. **Insert Shelf Supports:** Place the shelf supports at the desired height for the internal shelf.
5. **Install Doors:** Attach the hinges to the cabinet frame and then to the glass doors. Adjust hinges for proper door alignment.
6. **Attach Handles:** Secure the handles to the doors.
7. **Wall Mounting:**
 - Identify a suitable wall location, ensuring it can support the cabinet's weight and contents.
 - Mark drilling points on the wall using a level and the cabinet's mounting brackets as a guide.

- Drill pilot holes and insert appropriate wall anchors (ensure anchors are suitable for your wall type).
- Secure the mounting brackets to the wall.
- Carefully lift and hang the cabinet onto the wall brackets. Ensure it is securely fastened and level.

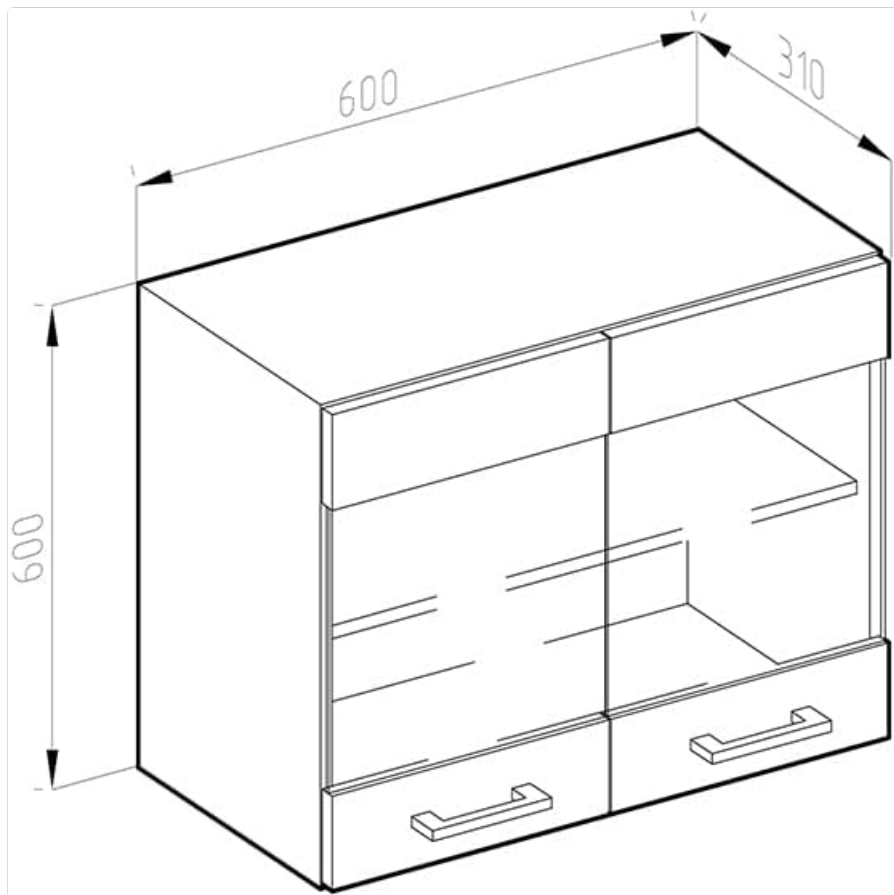


Image: Dimensional drawing showing the cabinet's width, height, and depth (600mm x 600mm x 310mm).

OPERATING INSTRUCTIONS

The Vicco R-Line Glass Wall Cabinet is designed for straightforward use.

Opening and Closing Doors:

Gently pull the handles to open the glass doors. Push the doors firmly until they close completely. Avoid slamming the doors to prevent damage to hinges and glass.



Image: The glass wall cabinet with its doors open, revealing the internal shelf.

Adjusting Shelves:

The internal shelf is adjustable. To change its height, carefully remove the shelf and reposition the shelf supports to the desired level. Ensure all four supports are at the same height before placing the shelf back.

Loading the Cabinet:

Distribute weight evenly on the shelf. Avoid overloading the cabinet, as this can compromise its stability and potentially damage the unit or wall mounting.

MAINTENANCE

Regular cleaning and care will help maintain the appearance and longevity of your cabinet.

Cleaning the Cabinet:

- Wipe surfaces with a soft, damp cloth.
- For stubborn marks, use a mild, non-abrasive cleaning agent.
- Avoid harsh chemicals, abrasive cleaners, or scouring pads, as these can damage the melamine coating and glass.
- Dry all surfaces thoroughly after cleaning.

Glass Care:

- Clean glass doors with a standard glass cleaner and a lint-free cloth.
- Immediately wipe away any spills on the glass to prevent stains.

Hardware Check:

Periodically check all screws and fittings to ensure they are tight. Retighten if necessary to maintain stability and safety.

TROUBLESHOOTING

If you encounter any issues with your cabinet, refer to the following common solutions:

Problem	Possible Cause	Solution
Doors do not close properly or are misaligned.	Loose hinges or incorrect hinge adjustment.	Tighten hinge screws. Adjust hinge settings as per the assembly guide to align doors.
Cabinet feels unstable after wall mounting.	Improper wall anchors or loose mounting screws.	Ensure appropriate wall anchors are used for your wall type. Retighten all mounting screws. If instability persists, consult a professional.
Shelf sags or is not level.	Unevenly placed shelf supports or overloaded shelf.	Verify all shelf supports are at the same height. Reduce weight on the shelf.

If the problem persists or you encounter an issue not listed here, please contact customer support.

SPECIFICATIONS

- Brand:** Vicco
- Model:** Hängeschränk 60 cm
- Color:** Goldkraft Oak / Anthracite
- Material:** Engineered Wood (16 mm particle board with melamine resin coating)
- Product Dimensions (W x H x D):** 60 cm x 60 cm x 31 cm
- Special Features:** Glass doors, adjustable shelf
- Mounting Type:** Wall Mount
- Room Type:** Kitchen
- Door Style:** Swing Door

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the manufacturer directly. Keep your proof of purchase for any warranty claims.

Manufacturer Contact: [Visit the Vicco Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question