

Livex 49275-46

Livex Lighting Clarion 5-Light Linear Chandelier Instruction Manual

Model: **49275-46**

Brand: **Livex**

PRODUCT OVERVIEW

The Livex Lighting Clarion 5-Light Linear Chandelier (Model 49275-46) is a contemporary lighting fixture designed to enhance various indoor spaces. This chandelier features a black chrome finish, an angular frame, and clear cylinder glass shades, providing a sleek and sophisticated aesthetic. It is designed for dry rated indoor use and accommodates five incandescent bulbs.



Figure 1: Front view of the Livex Lighting Clarion 5-Light Linear Chandelier. This image displays the fixture's black chrome finish, linear bar, and five clear cylindrical glass shades with exposed incandescent bulbs.

IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before beginning installation. Failure to do so may result in electric shock, fire, or other injuries that could be fatal or cause property damage. All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). If you are unfamiliar with electrical wiring, consult a qualified electrician.

- **ALWAYS** disconnect power at the main circuit breaker or fuse box before installation or servicing.
- Do not install this fixture in wet or damp locations. It is rated for dry indoor use only.
- Ensure all wiring connections are secure and properly insulated.
- Do not exceed the maximum wattage specified for the bulbs.
- Handle glass components with care to prevent breakage.

SETUP AND INSTALLATION

Unpacking and Inspection

Carefully unpack the fixture and its components. Retain all packaging materials until installation is complete and the fixture is operating correctly. Inspect the fixture for any damage that may have occurred during shipping. If any parts are missing or damaged, do not attempt to install the fixture. Contact Livex Lighting customer support immediately.

Required Tools (Not Included)

- Phillips head screwdriver
- Flathead screwdriver
- Wire strippers
- Pliers
- Electrical tape
- Ladder

Installation Steps

1. **Turn off Power:** Locate the circuit breaker or fuse box that supplies power to the installation location and turn off the power. Verify that the power is off using a voltage tester.
2. **Prepare Mounting:** Attach the mounting bracket to the electrical junction box in the ceiling. Ensure it is securely fastened.
3. **Wire Connections:** Connect the fixture's electrical wires to the corresponding house wires (black to black, white to white, ground to ground) using wire nuts. Secure connections with electrical tape.
4. **Secure Fixture:** Carefully lift the fixture and attach it to the mounting bracket, securing it with the provided screws or nuts. Ensure the fixture is stable and level.
5. **Install Glass Shades and Bulbs:** Gently attach the clear cylinder glass shades to the fixture. Insert five E26 Medium base incandescent bulbs (up to 60 watts each, 300 watts total) into the sockets.



Figure 2: The Livex Lighting Clarion Chandelier installed above a dining table, demonstrating its linear design and how it complements a modern interior.

OPERATING INSTRUCTIONS

Once installed, the Livex Lighting Clarion Chandelier operates via a standard wall switch. Ensure the wall switch connected to the fixture is in the "ON" position to provide power to the chandelier.

- **Turning On/Off:** Use the wall switch to control the power to the chandelier.
- **Bulb Replacement:** To replace a bulb, first turn off power at the circuit breaker. Allow bulbs to cool completely. Unscrew the old bulb and screw in a new E26 Medium base incandescent bulb, ensuring it does not exceed 60 watts.
- **Control Methods:** While primarily controlled by a wall switch, some installations may integrate with app-based or push-button control systems. Consult your electrician or smart home system manual for specific integration details if applicable.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your chandelier.

- **Cleaning:** To clean the fixture, ensure power is off. Wipe the metal surfaces with a soft, dry cloth. For the glass shades, use a mild glass cleaner applied to a cloth, then wipe the glass. Avoid abrasive cleaners or harsh chemicals that may damage the finish or glass.
- **Bulb Check:** Periodically check bulbs for signs of wear or dimming. Replace as needed with bulbs of the correct type and wattage.
- **Connection Check:** Annually, or if issues arise, have a qualified electrician check electrical connections for tightness and integrity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture; loose wiring; faulty bulb; tripped circuit breaker.	Check wall switch and circuit breaker. Ensure power is on. Verify all wire connections are secure. Replace bulb.
Light flickers.	Loose bulb; incorrect bulb type; loose wiring connection.	Tighten bulb. Ensure correct bulb type and wattage. Check wiring connections (with power off).
Humming noise from fixture.	Incompatible dimmer switch; loose components.	Ensure dimmer switch is compatible with incandescent bulbs. Check for any loose parts within the fixture.

If troubleshooting steps do not resolve the issue, contact a qualified electrician or Livex Lighting customer support.

SPECIFICATIONS

Attribute	Detail
Model Number	49275-46
Brand	Livex Lighting
Collection	Clarion
Finish Color	Black Chrome
Material	Steel, Alloy Steel, Glass
Dimensions (L x W x H)	42 x 4.5 x 14.75 inches
Item Weight	22 Pounds
Number of Lights	5
Light Source Type	Incandescent
Bulb Base	E26 Medium
Max Wattage (Total)	300 Watts
Voltage	120 Volts

Attribute	Detail
Moisture Rating	Dry Rated (Indoor Use Only)
Installation Type	Semi Flush Mount
Control Method	App, Push Button (typically via wall switch)

WARRANTY AND SUPPORT

Manufacturer's Warranty

This Livex Lighting product is covered by a manufacturer's warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the documentation included with your purchase or visit the official Livex Lighting website. Retain your proof of purchase for warranty claims.

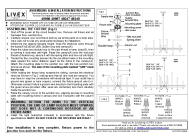
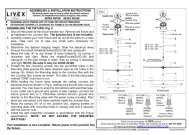

Customer Support

For technical assistance, replacement parts, or any questions not covered in this manual, please contact Livex Lighting customer support. Contact information can typically be found on the manufacturer's website or on the product packaging.

You can visit the Livex Store for more information: [Livex Lighting Store](#)

© 2023 Livex Lighting. All rights reserved.

Related Documents - 49275-46

	<p>Livex Lighting Fixture Assembly and Installation Instructions</p> <p>Detailed assembly and installation guide for Livex lighting fixtures, including model numbers 49996, 49997, 49347, and 49349. Covers safety precautions, step-by-step assembly, and wiring.</p>
	<p>LIVEX Lighting Fixture Assembly and Installation Instructions</p> <p>Detailed assembly and installation guide for LIVEX lighting fixtures, models 48784, 48786, 46164, and 46166. Includes wiring instructions and safety warnings.</p>
	<p>32/36/46/52 Inch Ceiling Fan with Light User Manual - Model 8922</p> <p>User manual for the 32/36/46/52 inch ceiling fan with light, model 8922. Includes safety precautions, installation guide, parts list, remote control operation, and app instructions.</p>



[Kenmore Elite 25 cu. ft. Bottom Freezer Refrigerator Specifications & Installation Guide](#)

Explore the Kenmore Elite 25 cu. ft. bottom freezer refrigerator (models 46-71032, 46-71033, 46-71036, 46-71039) featuring GeniusCool™ Technology, Multi Air Flow, integrated dispenser, and ENERGY STAR® qualification. Includes detailed dimensions and installation clearances.



[Sennheiser HMD 46, HME 46, HME 46-3S Instruction Manual](#)

This document provides instructions for the Sennheiser HMD 46, HME 46, and HME 46-3S headsets, covering safety, intended use, features, operation, care, accessories, product variants, and specifications.