

GOODTEL G10

GOODTEL G10 10-inch Android 12 Tablet User Manual

Model: G10

1. INTRODUCTION

Welcome to the user manual for your GOODTEL G10 10-inch Android 12 Tablet. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your device. The G10 tablet is designed for versatility, featuring an Octa-Core processor, 4GB RAM, 64GB internal storage (expandable), a 10-inch IPS display, and an 8000mAh battery. It comes with a suite of accessories including a Bluetooth keyboard, mouse, stylus, protective case, and screen protector, allowing it to function as a portable workstation.

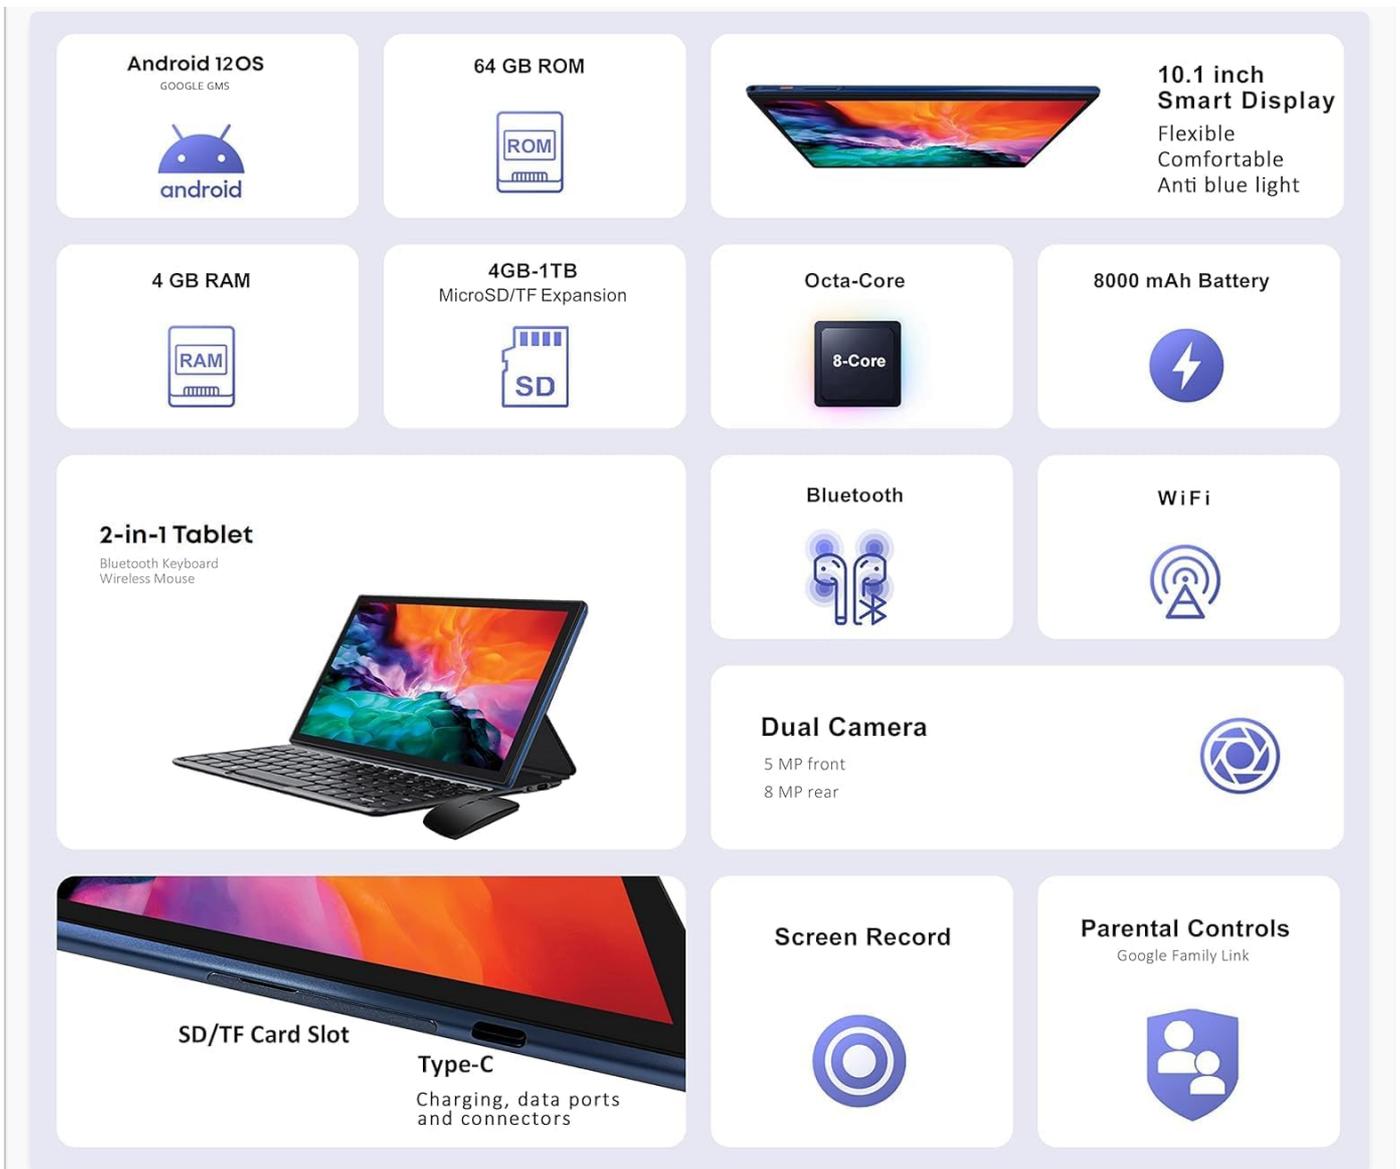


Image 1.1: Overview of GOODTEL G10 Tablet key features including Android 12 OS, 64GB ROM, 10.1-inch Smart Display, 4GB RAM, 4GB-1TB MicroSD/TF Expansion, Octa-Core processor, 8000mAh Battery, 2-in-1 Tablet functionality with Bluetooth Keyboard and Wireless Mouse, Bluetooth, WiFi, Dual Camera (5MP front, 8MP rear), Screen Record, Parental Controls, SD/TF Card Slot, and Type-C charging/data ports.

2. SETUP

2.1 Unboxing and Initial Inspection

Carefully remove all items from the packaging. Verify that all accessories are present:

- GOODTEL G10 Tablet
- Bluetooth Keyboard
- Wireless Mouse
- OTG Adapter
- Charger
- USB Type-C Cable
- Screen Protector (pre-applied or spare)

- Protective Case
- Stylus

2.2 Charging the Tablet and Keyboard

Before first use, fully charge the tablet and the Bluetooth keyboard. Connect the charger to the tablet's Type-C port and to a power outlet. The keyboard typically charges via a Micro USB cable (included).

2.3 Powering On/Off

- **To Power On:** Press and hold the Power button (usually on the side) until the screen lights up.
- **To Power Off:** Press and hold the Power button, then select 'Power off' from the on-screen options.
- **To Restart:** Press and hold the Power button, then select 'Restart' from the on-screen options.

2.4 Initial Setup Wizard

Upon first power-on, the tablet will guide you through the initial setup process:

1. Select your preferred language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google account or create a new one. This is essential for downloading apps from the Google Play Store.
4. Review and accept the terms and conditions.
5. Set up screen lock (PIN, pattern, or password).

2.5 Connecting Accessories

Bluetooth Keyboard and Mouse:

1. Ensure the keyboard and mouse are charged and powered on.
2. On the tablet, go to **Settings > Connected devices > Bluetooth**.
3. Turn Bluetooth on.
4. The tablet will scan for available devices. Select the keyboard and mouse from the list to pair. Follow any on-screen prompts.

Stylus: The included stylus is typically a passive capacitive stylus and does not require pairing. Simply use it directly on the screen.

OTG Adapter: The OTG adapter allows you to connect USB devices (like flash drives) to your tablet's Type-C port.

2.6 Inserting a MicroSD/TF Card

To expand storage, locate the MicroSD/TF card slot on the side of the tablet. Gently insert the card with the gold contacts facing down until it clicks into place. The tablet supports up to 256GB expansion.

3. OPERATING INSTRUCTIONS

3.1 Basic Navigation and Android 12 Features

The G10 tablet runs on Android 12, offering an intuitive user experience. Use touch gestures for navigation:

- **Tap:** Select an item.

- **Swipe:** Scroll through pages or lists.
- **Pinch-to-zoom:** Zoom in or out on images and web pages.
- **Long press:** Access contextual menus or move icons.

Android 12 includes features like multi-user support, multi-window mode for multitasking, and enhanced parental controls via Google Family Link.

OCTA-CORE Android 12 OS

Android 12 OS and octa-core processor provide stability and synchronous response for system running application processing.

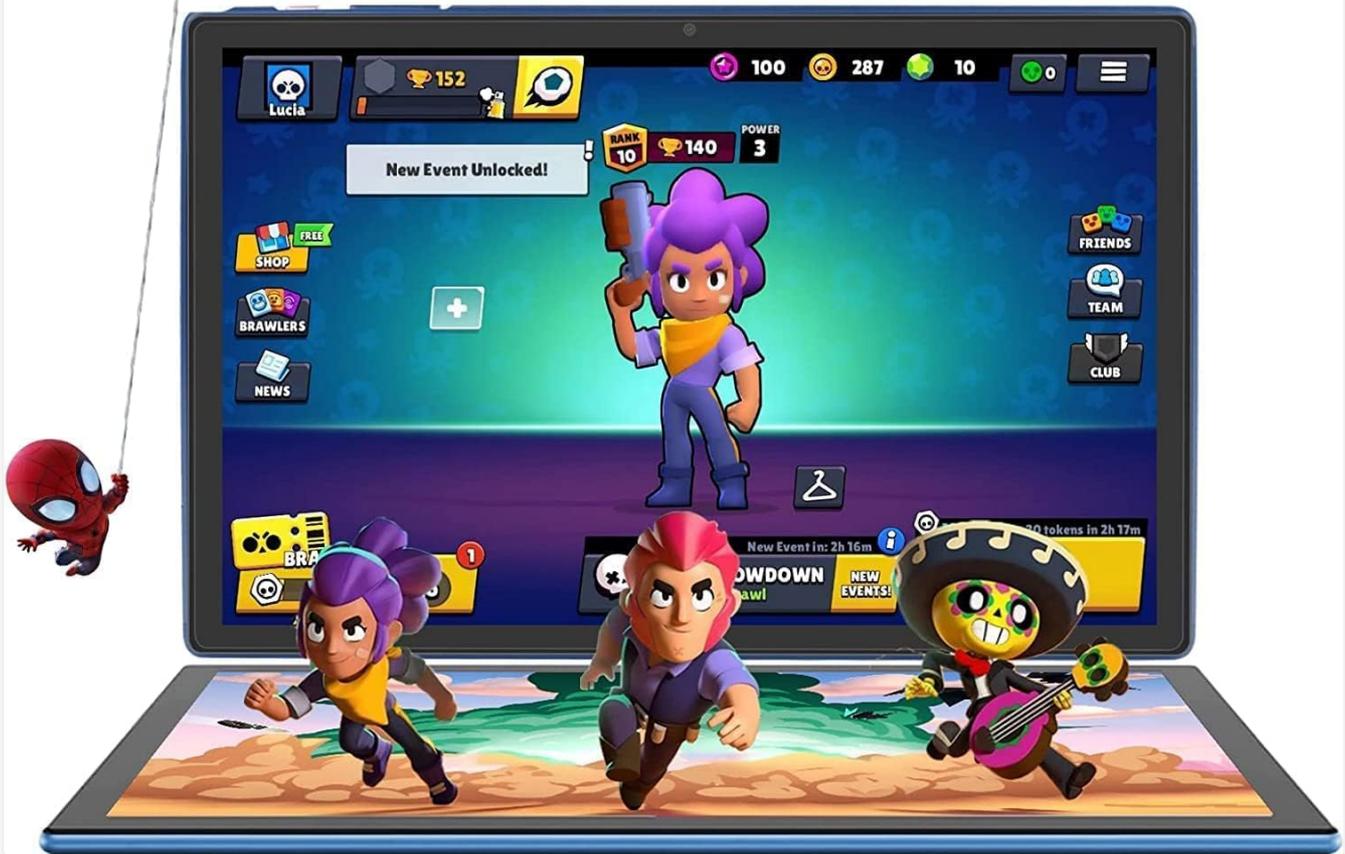


Image 3.1: The GOODTEL G10 Tablet displaying a game, illustrating the smooth performance provided by the Octa-Core processor and Android 12 OS for application processing.

3.2 Display and Visuals

The 10-inch IPS display provides clear and rich colors. It features flexible response and anti-blue light technology for comfortable viewing.

10-inch Smart IPS Display

The screen of the G10 is a 10-inch smart IPS screen with flexible response, comfortable touch and bright colors, and anti blue light



Image 3.2: The 10-inch Smart IPS Display of the GOODTEL G10 Tablet, showcasing its ability to render applications like PDF readers, communication apps, and media players with clarity and vibrant colors.

3.3 Connectivity (Wi-Fi and Bluetooth)

Wi-Fi: The tablet supports both 2.4GHz and 5GHz Wi-Fi for faster and more stable internet access. To connect, go to **Settings > Network & internet > Wi-Fi**, turn it on, and select your network.

2.4G/5G WiFi for faster internet access

Our tablets support both 2.4GHZ WiFi and 5.0GHZ WiFi for greater adaptability. 5.0GHZ WiFi allows the apps being used to become faster and smoother to use. Make the experience better

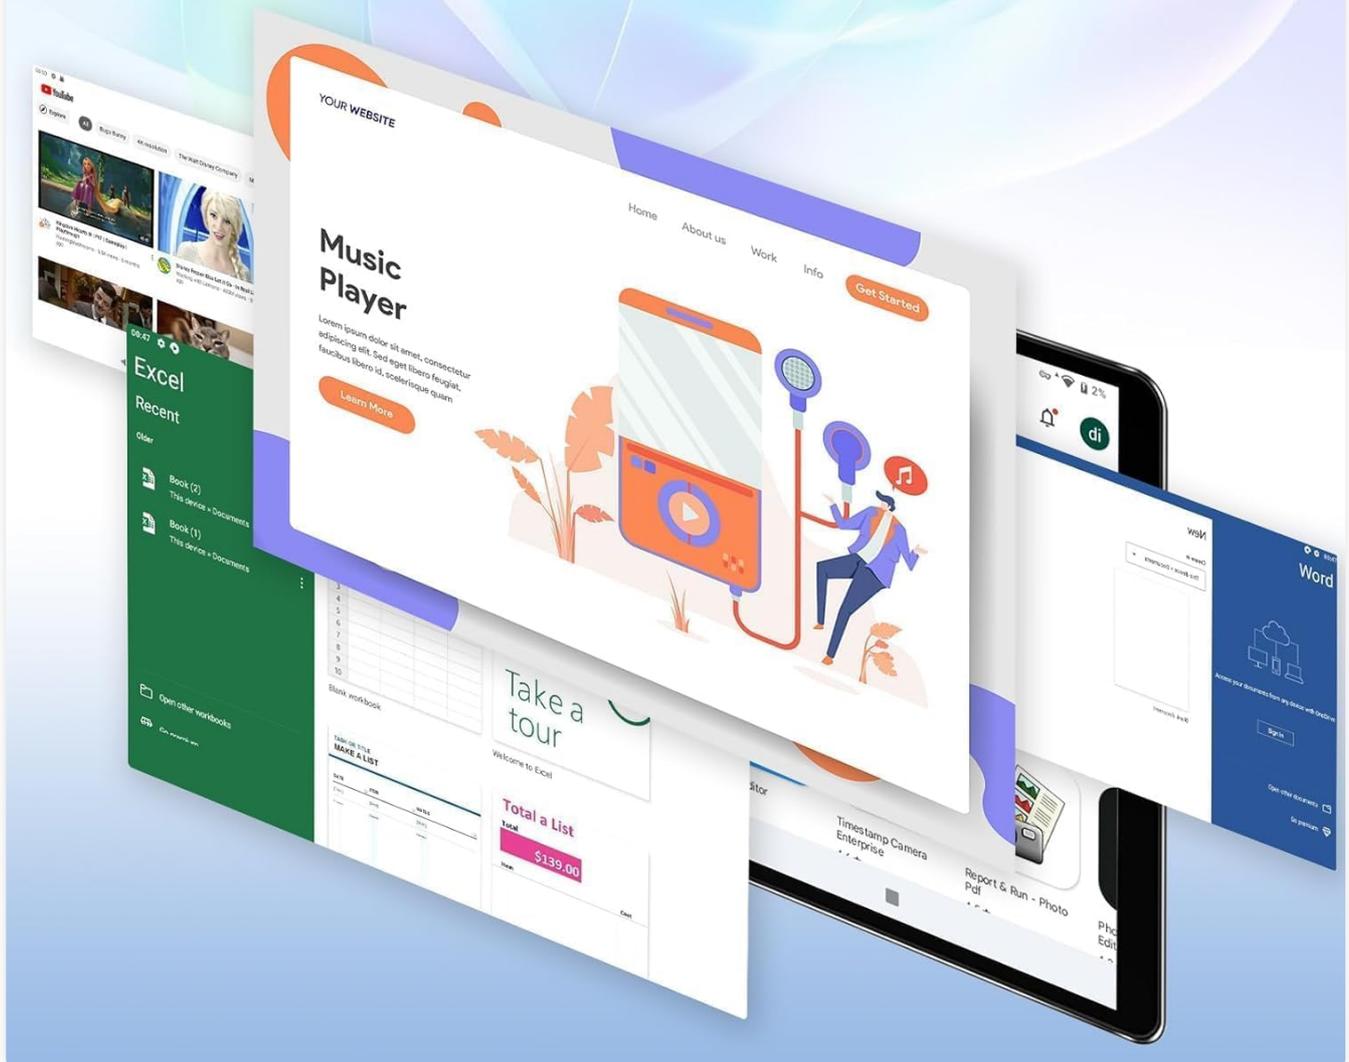


Image 3.3: The GOODTEL G10 Tablet highlighting its 2.4G/5G WiFi support for faster internet access, enabling smoother browsing and application usage.

Bluetooth: For connecting wireless headphones, speakers, or other Bluetooth devices, go to **Settings > Connected devices > Bluetooth**, turn it on, and pair with your desired device.

3.4 Cameras

The tablet features a 5MP front camera and an 8MP rear camera. Open the Camera app to take photos or record videos. These are suitable for video calls and casual photography.

3.5 Storage Management

The tablet comes with 64GB of internal storage. You can expand this by inserting a MicroSD/TF card (up to 256GB, sold separately). To manage storage, go to **Settings > Storage**. Here you can see storage usage and free up space.

64 GB ROM + 4GB-1TB MicroSD/TF Card Expansion

G10 tablet is equipped with 64GB ROM and supports 4GB - 1TB SD/TF card memory expansion, Provide ample space for desktop study materials, work files, pictures, video,movies, music and applications, etc. (SD/TF card needs to be purchased separately).



Image 3.4: The GOODTEL G10 Tablet illustrating its 64GB ROM and 4GB RAM, with support for 4GB-1TB MicroSD/TF card expansion for additional storage of documents, media, and applications.

3.6 Parental Controls

Utilize Google Family Link to set up parental controls. This allows remote management of the device, setting usage limits, and content filtering for children's profiles.

4. MAINTENANCE

4.1 Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaning solution. Avoid harsh chemicals or abrasive materials.

4.2 Battery Care

The G10 tablet is equipped with an 8000mAh battery. To prolong battery life:

- Avoid extreme temperatures.
- Do not let the battery drain completely regularly.
- Use the provided charger for optimal charging.

- Unplug the charger once the tablet is fully charged.

8000mAh Long-lasting Battery

The 8000mAh long-lasting lithium battery and automatic dynamic adjustment function improve the overall use time of the tablet, and use the tablet to work hassle-free



Image 4.1: The GOODTEL G10 Tablet highlighting its 8000mAh long-lasting battery, with estimated usage times for various activities such as gaming (5.5H), video playback (6H), web browsing (7.5H), standby (30H), call time (35H), and music playback (600H).

4.3 Software Updates

Regularly check for system updates to ensure your tablet has the latest features and security patches. Go to **Settings > System > System update**.

4.4 Storage Optimization

Periodically clear cache data from apps, uninstall unused applications, and transfer large files (photos, videos) to your MicroSD card or cloud storage to maintain optimal performance.

5. TROUBLESHOOTING

5.1 Common Issues and Solutions

- **Tablet not powering on:** Ensure the battery is charged. Connect the charger and try again. If unresponsive, press and hold the power button for 10-15 seconds to force a restart.
- **Wi-Fi connectivity issues:** Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Forget the

network and reconnect.

- **Slow performance:** Close unused apps, clear app caches, free up storage space, and restart the tablet.
- **Apps crashing or freezing:** Clear the app's cache and data in **Settings > Apps**. If the issue persists, uninstall and reinstall the app.
- **Touchscreen unresponsive:** Restart the tablet. If the issue continues, ensure the screen is clean and free of debris.

5.2 Factory Reset (Last Resort)

If persistent issues cannot be resolved, a factory reset may be necessary. **Warning: This will erase all data on your tablet. Back up important files before proceeding.**

1. Go to **Settings > System > Reset options**.
2. Select **Erase all data (factory reset)**.
3. Confirm your decision and follow the on-screen instructions.

6. SPECIFICATIONS

Feature	Specification
Model	G10
Operating System	Android 12 OS
Processor	Octa-Core, 2 GHz
RAM	4GB
Internal Storage (ROM)	64GB
Expandable Storage	MicroSD/TF card up to 256GB
Display Size	10 inches
Display Technology	IPS Smart Touchscreen
Display Resolution	1280 x 800 pixels
Front Camera	5MP
Rear Camera	8MP
Battery Capacity	8000mAh Lithium-ion
Wi-Fi	2.4G/5G (802.11ac)
Bluetooth	Bluetooth 5.0
Ports	1x Type-C, 1x 3.5mm AUX, 1x MicroSD/TF slot

Feature	Specification
Other Connectivity	Hotspot, AGPS, Gravity Sensor, FM Radio
Dimensions (L x W x H)	26 x 17.6 x 0.9 cm
Weight	450 Grams

7. WARRANTY AND SUPPORT

Specific warranty details are not available in the provided product information. For warranty claims, technical support, or service inquiries, please refer to the documentation included with your purchase or contact GOODTEL customer support directly through their official website or the retailer where the product was purchased.