

## Nestle SPM9639

# Nestle Nescafe Gold Blend Barista 50 [Fifty] Coffee Maker (SPM9639) User Manual

## 1. INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient operation of your Nestle Nescafe Gold Blend Barista 50 [Fifty] Coffee Maker, model SPM9639. Please read this manual thoroughly before first use and keep it for future reference. This appliance is designed to prepare various coffee beverages using Nescafe Gold Blend products.

## 2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.

- Do not use appliance for other than intended use.

### 3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Barista 50 [Fifty] coffee maker.



Image 3.1: Front view of the Nestle Nescafe Gold Blend Barista 50 [Fifty] Coffee Maker, showcasing its sleek design and control panel.



Image 3.2: The coffee maker positioned alongside different varieties of Nescafe Gold Blend coffee, illustrating compatible products.

## Key Components:

- **Water Tank:** Located at the back, for filling with fresh water.
- **Coffee Container:** For Nescafe Gold Blend soluble coffee.
- **Control Panel:** Buttons for power, menu selection, and volume adjustment.
- **Dispensing Spout:** Where the coffee is dispensed.
- **Drip Tray:** Collects any drips and supports your cup.
- **Bluetooth Indicator:** Lights up when connected via Bluetooth.

## 4. SETUP

---

### 4.1 Unpacking and Initial Placement

1. Carefully remove the coffee maker from its packaging.
2. Remove all packaging materials, stickers, and protective films.
3. Place the appliance on a stable, flat, heat-resistant surface, away from water sources and heat.

### 4.2 Initial Cleaning

1. Wash the water tank, coffee container, and drip tray with warm soapy water. Rinse thoroughly and dry.
2. Wipe the exterior of the machine with a damp cloth.

### 4.3 Filling the Water Tank

1. Remove the water tank from the back of the machine.
2. Fill the tank with fresh, cold drinking water up to the 'MAX' level indicator. Do not exceed the maximum fill line.
3. Securely place the water tank back into the machine.

### 4.4 First Use (Rinsing Cycle)

Before making your first coffee, perform a rinsing cycle to clean the internal system.

1. Ensure the water tank is filled.
2. Place an empty cup under the dispensing spout.
3. Press the power button to turn on the machine.
4. Select a coffee menu (e.g., Black Coffee) without adding any coffee powder to the container.
5. Press the start button. Hot water will be dispensed.
6. Discard the hot water. Your machine is now ready for use.

## 5. OPERATION

---

### 5.1 Preparing Coffee

1. Ensure the water tank is filled with fresh water.
2. Open the lid of the coffee container and pour in your desired Nescafe Gold Blend soluble coffee powder. Close

the lid securely.

3. Place your cup on the drip tray under the dispensing spout.
4. Press the power button to turn on the machine. The power indicator will light up.
5. Select your desired coffee menu from the available options.



Image 5.1: The control panel illustrating the five available coffee menu options and their corresponding buttons.

### Available Coffee Menus:

- **Black Coffee (Mug Size):** Standard black coffee.
- **Espresso Type Coffee:** A concentrated coffee shot.
- **Cappuccino:** Coffee with frothed milk.
- **Cafe Latte:** Coffee with steamed milk.
- **Iced Coffee:** Cold coffee (requires ice in cup).
- **Iced Latte:** Cold latte (requires ice in cup).

6. Press the selected menu button. The machine will begin preparing your coffee.
7. Once preparation is complete, the machine will stop automatically. Remove your cup.

### 5.2 Bluetooth Connectivity

The Barista 50 [Fifty] can connect to your smartphone via Bluetooth for enhanced control and customization.

1. Download the official Nescafe Barista app from your smartphone's app store.
2. Ensure Bluetooth is enabled on your smartphone.
3. Follow the in-app instructions to pair your smartphone with the coffee maker. The Bluetooth indicator on the machine will light up when connected.
4. Through the app, you can customize drink recipes, set brewing times, and monitor machine status.

## 6. MAINTENANCE

Regular cleaning and maintenance ensure optimal performance and longevity of your coffee maker.

## 6.1 Daily Cleaning

1. **Drip Tray:** Empty and rinse the drip tray after each use or when the indicator shows it's full.
2. **Water Tank:** Rinse the water tank daily and refill with fresh water.
3. **Dispensing Spout:** Wipe the dispensing spout with a damp cloth to remove any coffee residue.
4. **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## 6.2 Coffee Container Cleaning

Clean the coffee container regularly, especially when changing coffee types.

1. Remove the coffee container from the machine.
2. Empty any remaining coffee powder.
3. Wash the container with warm soapy water, rinse thoroughly, and dry completely before reinserting.

## 6.3 Descaling

Descaling is essential to remove mineral buildup and maintain machine performance. The frequency depends on water hardness and usage. Refer to the Nescafe Barista app or manufacturer's website for specific descaling instructions and recommended descaling solutions.

1. Use only descaling solutions recommended by Nestle.
2. Follow the instructions provided with the descaling solution carefully.
3. Typically, this involves filling the water tank with the descaling solution and running several cycles through the machine, followed by rinsing cycles with fresh water.

## 7. TROUBLESHOOTING

If you encounter issues with your coffee maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outage.	Check power cord connection; check power outlet.
No coffee is dispensed.	Water tank empty; coffee container empty; dispensing spout blocked.	Fill water tank; fill coffee container; clean dispensing spout.
Coffee tastes weak.	Insufficient coffee powder; incorrect water volume setting.	Add more coffee powder; adjust water volume via app or machine settings.
Machine leaks.	Water tank not properly seated; drip tray full.	Ensure water tank is correctly inserted; empty drip tray.
Bluetooth connection fails.	Bluetooth off on phone; app not installed; machine not in pairing mode.	Enable Bluetooth; install app; follow app pairing instructions.

If the problem persists after trying these solutions, please contact Nestle customer support.

## 8. SPECIFICATIONS

Detailed technical specifications for the Nestle Nescafe Gold Blend Barista 50 [Fifty] Coffee Maker (SPM9639).



Image 8.1: Dimensional overview of the coffee maker, including its height, width, depth, and water tank capacity.

Feature	Specification
Brand	Nestlé
Model Number	SPM9639
Color	Red
Product Dimensions (D x W x H)	15.5 cm x 30.6 cm x 32.3 cm
Package Dimensions	38 cm x 37 cm x 23.5 cm
Package Weight	4.59 kg
Coffee Maker Type	Espresso Machine
Human Interface Input	Buttons
Connectivity	Bluetooth
Number of Items	1

