

FineMade Mini Waffle Bites Maker

FineMade Mini Waffle Maker Instruction Manual

1. INTRODUCTION

Thank you for purchasing the FineMade Mini Waffle Maker. This appliance is designed to quickly and easily prepare 8 mini waffle bites, perfect for breakfast, snacks, or desserts. Please read this manual thoroughly before use to ensure safe and efficient operation.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

3. PACKAGE CONTENTS

- FineMade Mini Waffle Maker
- Brush
- Recipe Booklet

4. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	FineMade
Model Number	Mini Waffle Bites Maker
Special Feature	Lightweight, Non Stick Coating
Color	Black
Material	Metal
Product Dimensions	8.3"D x 8.3"W x 3"H
Wattage	750 watts
Item Weight	2.54 Pounds
Voltage	120 Volts
Number of Settings	1
Cable Length	2 Inches

5. SETUP

1. **Unpack:** Carefully remove the waffle maker and all accessories from the packaging. Retain packaging for future storage or shipping.
2. **Initial Cleaning:** Before first use, wipe the non-stick cooking plates with a damp cloth or sponge. Dry thoroughly.
3. **Placement:** Place the waffle maker on a stable, heat-resistant, and dry surface. Ensure there is adequate ventilation around the appliance.
4. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet. The indicator light will illuminate, signaling that the appliance is preheating.

Note: During the first few minutes of initial use, a slight odor and smoke may be noticed. This is normal and will disappear with continued use.

6. OPERATING INSTRUCTIONS

6.1 Preheating

Allow the waffle maker to preheat completely. The indicator light will change from red to green (or illuminate green) when the appliance has reached the optimal cooking temperature. This typically takes 1-2 minutes.



SUPERIOR HEAT CAPABILITY

8 Crispy-Golden Results Every Time

Image: The FineMade Mini Waffle Maker open, showing the heating elements and the red and green indicator lights, indicating preheating and readiness.

6.2 Cooking Mini Waffles

1. **Prepare Batter:** Prepare your favorite waffle batter. For best results, use the included recipe booklet.
2. **Apply Batter:** Once the green indicator light is on, carefully open the waffle maker. Using the provided brush or a spoon, pour approximately 1 teaspoon of batter into each of the 8 waffle molds. Avoid overfilling to prevent overflow.

SAY GOODBYE TO WAITING

8 Fresh Waffle Bites Ready Together



Image: The FineMade Mini Waffle Maker open, with batter being carefully spooned into the individual waffle molds.

3. **Close and Latch:** Gently close the lid and secure the locking lid latch. The red indicator light will turn on, signifying that the waffles are cooking.
4. **Cook Time:** Cook for approximately 1 to 2 minutes, or until the green indicator light illuminates again, indicating the waffles are done. Cooking time may vary based on batter consistency and desired crispness.
5. **Remove Waffles:** Carefully open the lid. Use a heat-resistant, non-metallic utensil (like the provided brush/scraper) to remove the cooked mini waffles. Avoid using metal utensils, which can damage the non-stick coating.
6. **Repeat:** Close the lid to allow the appliance to reheat for the next batch. The green light will indicate readiness.

6.3 Tips for Best Results

- For extra crispy waffles, cook for an additional 30 seconds after the green light illuminates.
- Lightly grease the cooking plates with cooking spray or oil before the first batch, even with the non-stick coating, for easier release.
- Experiment with different batters and ingredients. The included recipe booklet offers various sweet and savory options.

Your browser does not support the video tag.

Video: An official product video demonstrating the use of the FineMade Mini Waffle Maker, showing batter being added and waffles cooking.

7. MAINTENANCE AND CLEANING

1. **Unplug and Cool:** Always unplug the waffle maker from the power outlet and allow it to cool completely before cleaning.
2. **Wipe Plates:** Use a soft, damp cloth or sponge to wipe the non-stick cooking plates. For stubborn residue, use a small amount of mild dish soap. The included brush can help remove any stuck-on batter.



FAMILY-SIZED DELIGHT

Fuel Your Family's Day the Wholesome Way

Image: The FineMade Mini Waffle Maker open, showing a hand using the provided brush to clean the non-stick cooking plates.

3. **Clean Exterior:** Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
4. **Do NOT Immerse:** Never immerse the waffle maker, its cord, or plug in water or any other liquid.
5. **Storage:** Once clean and dry, store the waffle maker in an upright position to save space. The cord can be wrapped around the base for neat storage.

FREE YOUR KITCHEN

Compact Design for Effortless Storage



Image: The FineMade Mini Waffle Maker stored vertically in a kitchen drawer, demonstrating its compact design.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Waffle maker does not heat up.	Not plugged in or power outlet issue.	Ensure the appliance is securely plugged into a working 120V AC outlet. Check circuit breaker.
Waffles stick to the plates.	Plates not sufficiently greased or batter too thick.	Lightly grease plates with cooking spray before each use. Adjust batter consistency if too thick. Ensure plates are fully preheated.
Waffles are not crispy.	Insufficient cooking time.	Increase cooking time by 30-60 seconds. Ensure the waffle maker is fully preheated before adding batter.
Batter overflows from the sides.	Too much batter added.	Reduce the amount of batter per mold. Approximately 1 teaspoon per mold is recommended.

9. WARRANTY AND CUSTOMER SUPPORT

This FineMade Mini Waffle Maker comes with a **Limited Warranty**. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included in your product packaging or contact FineMade customer support.

For any questions, technical assistance, or warranty claims, please contact FineMade Customer Support through the following channels:

- **Website:** Visit the official FineMade website for FAQs and support contact information.
- **Email:** Refer to your product packaging for the customer support email address.
- **Phone:** Refer to your product packaging for the customer support phone number.

Please have your model number (Mini Waffle Bites Maker) and purchase date ready when contacting support.