

[manuals.plus](#) /

› [OCOOPA](#) /

› [OCOOPA ZLS-118D Rechargeable Hand Warmer User Manual](#)

**OCOOPA ZLS-118D**

# **OCOOPA ZLS-118D Rechargeable Hand Warmer User Manual**

Model: ZLS-118D | Brand: OCOOPA

## **1. INTRODUCTION**

The OCOOPA ZLS-118D is a portable, rechargeable hand warmer designed to provide warmth in cold conditions. Crafted from high-tech aircraft-grade aluminum and ABS material, it offers a smooth, comfortable, and anti-skid grip. This versatile device features multiple heating levels and can also function as a power bank for charging other electronic devices.



Image: The OCOOPA ZLS-118D hand warmer, highlighting its compact and ergonomic design.

## 2. IMPORTANT SAFETY INFORMATION

To ensure safe operation and prolong the life of your OCOOPA hand warmer, please observe the following precautions:

- Do not expose the device to extreme temperatures (above 131°F or below 0°F).
- Do not disassemble, open, chop, pierce, or attempt to repair the device.
- Keep the device away from water, fire, and highly flammable materials.
- Supervise children when they are using the device.
- Do not use the heating function while simultaneously charging an external device.
- Charge the device at least every three months if not in regular use to maintain battery health.

## 3. PACKAGE CONTENTS

Please check the box for the following items:

- OCOOPA ZLS-118D Hand Warmer
- USB-C Charging Cable
- User Manual

- Storage Pouch

## 4. PRODUCT OVERVIEW

Familiarize yourself with the key components and indicators of your hand warmer:

- **Power/Warm Switch Button:** Used to turn the device on/off and adjust heating levels.
- **LED Battery Indicator:** Displays remaining battery capacity.
- **Temperature Light Indicator:** Shows the current heating level.
- **USB-C Charging Port:** For charging the hand warmer.
- **USB-A Output Port:** For charging external devices (power bank function).



Image: Detailed view of the hand warmer's controls and ports.

## 5. SETUP: INITIAL CHARGING

Before first use, fully charge your OCOOPA hand warmer.

1. Connect the provided USB-C charging cable to the hand warmer's USB-C port.

2. Plug the other end of the cable into a DC 5V power source (e.g., wall adapter, computer USB port).
3. The LED battery indicator lights will illuminate to show charging progress. Blue lights indicate power capacity (1 light: 0-30%, 2 lights: 30-66%, 3 lights: 66-100%). The highest indicator light will flash blue during charging.
4. Once all three blue lights are solid, the device is fully charged.

---

## 6. OPERATING INSTRUCTIONS

### 6.1. Turning On/Off and Adjusting Heat Levels

The OCOOPA ZLS-118D offers multiple heating modes for customizable warmth.

- **To Turn On:** Long press the Power/Warm Switch button for 3 seconds. The device will power on with red lights, indicating it is in warmer mode.
- **To Adjust Heat Level:** Short press the Power/Warm Switch button once to cycle through the available heating levels.
- **To Turn Off:** Long press the Power/Warm Switch button for 3 seconds. The indicator lights will turn off.

### 6.2. Heating Temperature Levels

The device features 3 main temperature levels, with options for single or double-sided heating:

- **Low Temperature:** One red light. Approximately 95-107.5°F.
- **Medium Temperature:** Two red lights. Approximately 104-118.5°F.
- **High Temperature:** Three red lights. Approximately 118.5-131°F.

# Double or Single

According to your needs.

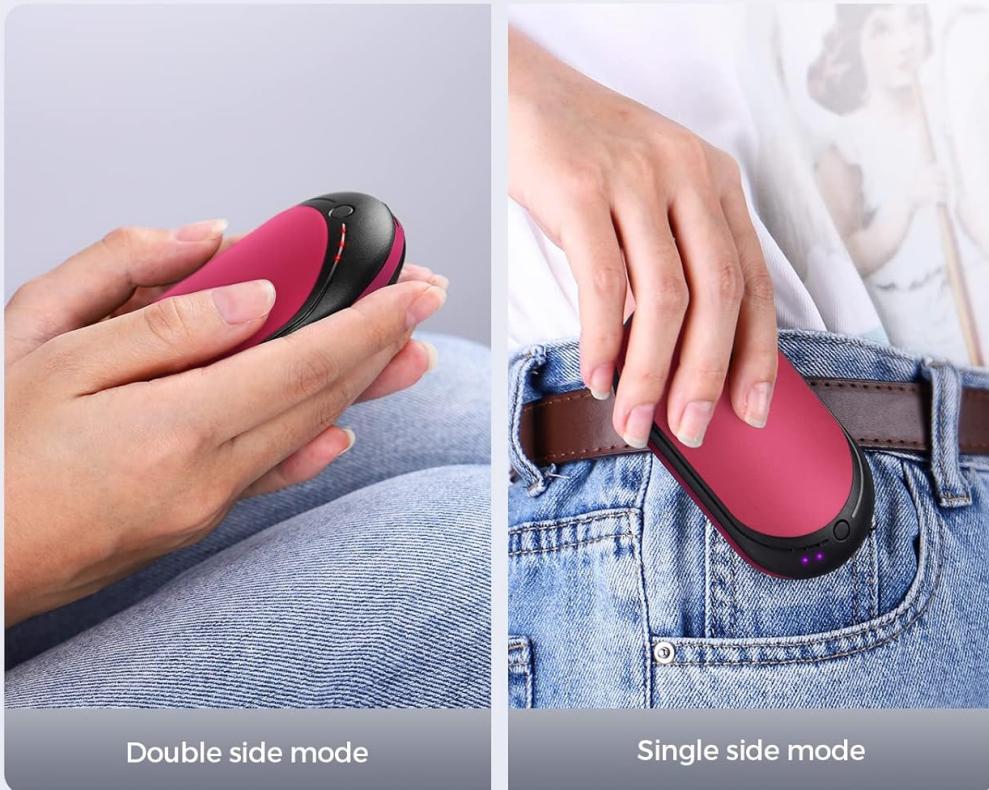


Image: The hand warmer illustrating its single and double-sided heating capabilities.

## 7. CHARGING FUNCTION (POWER BANK)

Your OCOOPA hand warmer can also serve as a portable power bank to charge other electronic devices.

1. Connect your electronic device's charging cable to the hand warmer's USB-A output port.
2. The hand warmer will automatically begin charging your device.
3. **Note:** The heating function will automatically switch off when the device is used as a power bank. It does not support simultaneous heating and external device charging.

## 8. MAINTENANCE

- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the hand warmer in a cool, dry place when not in use.
- If storing for extended periods, charge the device at least once every three months to prevent battery degradation.

## 9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or device is off.	Charge the device fully. Long press the power button for 3 seconds.
Device is not heating.	Heating function is off or in power bank mode.	Ensure heating mode is activated (red lights). Disconnect any external devices from the USB-A port.
Device is not charging.	Faulty cable or power source.	Try a different USB-C cable or power adapter. Ensure the power source is active.
Device gets too hot.	High heat setting selected.	Cycle to a lower heat setting. The device has built-in safety to prevent overheating.

## 10. SPECIFICATIONS

Feature	Detail
Product Name	Hand Warmer
Model Name	ZLS-118D
Brand	OCOOPA
Battery Capacity	5200 mAh
Input/Output	5V/2A
Charging Time	4-5 hours
Working Time	6-12 hours (tested at 20°C ambient temperature)
Temperature Levels	Low: 95-107.5°F, Medium: 104-118.5°F, High: 118.5-131°F
Material	Pure Imported Aluminum + Imported flame retardant ABS material + Lithium Battery
Dimensions	117 x 66 x 31 mm
Net Weight	6.7 OZ (190g)
Gross Weight	10.22 OZ (290g)

## 11. WARRANTY AND SUPPORT

The OCOOPA ZLS-118D Hand Warmer comes with a **1-Year Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use conditions.

For warranty claims, technical support, or any questions regarding your product, please contact OCOOPA customer service through the official channels provided at the point of purchase or on the OCOOPA website.

Please retain your proof of purchase for warranty validation.

## Related Documents - ZLS-118D

	<p><a href="#"><u>Ocoopa ZLS-118S Rechargeable Hand Warmer User Manual</u></a> Comprehensive user manual for the Ocoopa ZLS-118S rechargeable hand warmer, detailing specifications, operating instructions, charging methods, and safety information.</p>
	<p><a href="#"><u>Ocoopa DuoHeat UT5 Hand Warmer User Manual</u></a> User manual for the Ocoopa DuoHeat UT5 rechargeable hand warmer, providing instructions on operation, charging, safety, troubleshooting, and specifications.</p>
	<p><a href="#"><u>Ocoopa UT3 Lite Hand Warmer User Manual - Model UT3053</u></a> Official user manual for the Ocoopa UT3 Lite hand warmer (Model UT3053). Learn about features, usage, charging, specifications, and safety precautions.</p>
	<p><a href="#"><u>Ocoopa UT2s mini Rechargeable Hand Warmer User Manual</u></a> User manual for the Ocoopa UT2s mini rechargeable hand warmer, detailing operation, charging, specifications, and safety precautions.</p>
	<p><a href="#"><u>Ocoopa UT5 Sway Hand Warmer User Manual</u></a> Comprehensive user manual for the Ocoopa UT5 Sway (UT3043) rechargeable hand warmer. Provides detailed safety instructions, operating procedures, specifications, battery disposal guidelines, and customer support information.</p>
	<p><a href="#"><u>Ocoopa UT2s Rechargeable Hand Warmer User Manual</u></a> Comprehensive user manual for the Ocoopa UT2s rechargeable hand warmer, detailing safety warnings, operating instructions, charging, specifications, and customer support information.</p>