

Tastyle 2210IC

Tastyle Iced and Hot Coffee Maker User Manual

Model: 2210IC

[Introduction](#) [Safety Precautions](#) [Product Components](#) [Setup & First Use](#) [Operating Instructions](#) [Cleaning & Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Tastyle Iced and Hot Coffee Maker, Model 2210IC. This versatile single-serve coffee machine is designed to brew both delicious hot coffee and refreshing iced coffee using either K-Cups or your favorite ground coffee. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting to ensure you get the best experience from your new coffee maker.



The Tastyle Iced and Hot Coffee Maker, Model 2210IC, capable of brewing both hot and iced beverages. The image displays the coffee maker alongside various coffee drinks, including iced coffee in tall glasses and hot coffee in a mug.

2. IMPORTANT SAFETY PRECAUTIONS

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- This appliance is for household use only. Do not use outdoors.
- Always unplug the coffee maker from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep the appliance and its cord out of reach of children.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Use only cold water in the water reservoir.
- Do not open the brew chamber during the brewing process. Hot water may spray out.
- Ensure the drip tray is properly in place before brewing.
- This coffee maker is made from BPA-free materials for your health and safety.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Tastyle coffee maker:

- **Water Reservoir:** For adding water for brewing.
- **Lid:** Covers the water reservoir and brew chamber.
- **Brew Chamber:** Holds the K-Cup pod or reusable ground filter.
- **K-Pod Holder:** Specifically designed for K-Cup capsules.
- **Reusable Ground Basket:** For brewing with ground coffee.
- **Brew Buttons:** 'REGULAR' for hot coffee, 'OVER ICE' for iced coffee.
- **Drip Tray:** Collects drips and supports your cup.
- **Power Cord:** Connects to an electrical outlet.

2 in 1 for K-pod and Ground



Detailed view of the coffee maker's brew chamber components, including the K-Pod holder and the large reusable ground basket. The reusable basket is shown to hold up to 25g of ground coffee, promoting an eco-friendly and economical brewing method.

4. SETUP & FIRST USE

Before using your coffee maker for the first time, follow these steps:

1. **Unpack:** Carefully remove all packaging materials and inspect the coffee maker for any damage.
2. **Clean:** Wash the reusable ground basket, K-Pod holder, and drip tray in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffee maker with a damp cloth.
3. **Rinse Cycle:** Perform a rinse cycle to clean the internal components. Fill the water reservoir with clean water (do not add coffee). Place an empty mug on the drip tray. Press the 'REGULAR' button

to run a brew cycle. Discard the water. Repeat this process 2-3 times.

4. **Placement:** Place the coffee maker on a stable, flat surface. Ensure it is away from the edge of the counter and out of reach of children.

5. OPERATING INSTRUCTIONS

5.1 Brewing Hot Coffee

1. **Prepare:** Place a mug on the drip tray.
2. **Add Coffee:**
 - **For K-Cup:** Open the lid, insert a K-Cup pod into the K-Pod holder, and close the lid firmly.
 - **For Ground Coffee:** Open the lid, place your desired amount of ground coffee (up to 25g) into the reusable ground basket, and insert it into the brew chamber. Close the lid firmly.
3. **Add Water:** Open the water reservoir lid and pour fresh, cold water into the reservoir. Do not exceed the 'MAX' fill line. For optimal flavor, use the recommended water amount for your desired cup size.
4. **Brew:** Press the 'REGULAR' button. The button will illuminate, indicating brewing has started. The coffee maker will automatically shut off once brewing is complete (approximately 4 minutes).
5. **Enjoy:** Carefully remove your hot coffee.

5.2 Brewing Iced Coffee

For best iced coffee results, use 6oz of water with a K-Cup capsule and a 1:1 ratio of water to ice.

1. **Prepare Ice:** Fill your cup with ice cubes. Place the cup on the drip tray.
2. **Add Coffee:**
 - **For K-Cup:** Open the lid, insert a K-Cup pod into the K-Pod holder, and close the lid firmly.
 - **For Ground Coffee:** Open the lid, place your desired amount of ground coffee into the reusable ground basket, and insert it into the brew chamber. Close the lid firmly.
3. **Add Water:** Open the water reservoir lid and pour fresh, cold water into the reservoir. For iced coffee, it is recommended to use 6oz of water with a K-Cup for a strong brew that won't be watered down by ice.
4. **Brew:** Press the 'OVER ICE' button. The button will illuminate, indicating brewing has started. The coffee maker will automatically shut off once brewing is complete.
5. **Enjoy:** Carefully remove your iced coffee.



Easy to Use with One-Button Operation

This image illustrates the simple, one-button operation for brewing iced coffee. It shows a hand pressing the 'OVER ICE' button, with a glass of iced coffee being brewed. Insets depict the steps: 1) Put ice in your cup, 2) Place capsule or ground coffee, 3) Add water.

6. CLEANING & MAINTENANCE

6.1 Daily Cleaning

- Always unplug the coffee maker before cleaning.
- Remove and wash the K-Pod holder, reusable ground basket, and drip tray after each use with warm, soapy water. Rinse thoroughly and dry.
- Wipe the exterior of the coffee maker with a damp, soft cloth. Do not use abrasive cleaners or scouring pads.

- Do not immerse the coffee maker in water or any other liquid.

6.2 Descaling Procedure

Mineral deposits (scale) can build up in your coffee maker over time, affecting performance and coffee taste. The built-in descaling reminder will alert you when descaling is needed by displaying an alternating red light on both brew buttons.

1. **Prepare Solution:** Fill the water reservoir with 14oz of descaling solution (e.g., white vinegar or a commercial descaling agent mixed according to its instructions).
2. **Initiate Cleaning:** Place a large empty mug on the drip tray. Press and hold both the 'REGULAR' and 'OVER ICE' buttons simultaneously for 2 seconds. The coffee maker will begin its self-cleaning cycle.
3. **Rinse:** After the descaling cycle is complete, discard the solution. Fill the water reservoir with fresh, clean water and run 2-3 rinse cycles (without coffee) to remove any residual descaling solution.
4. **Reset Reminder:** The descaling reminder will reset automatically after the cleaning cycle.

Easy Cleanup

Descaling Reminder and Self Cleaning



This diagram visually explains the easy cleanup process, including the descaling reminder and self-cleaning function. It shows the internal water path and highlights that two buttons will blink alternately in red to remind users to descale, to use 14oz of descaling solution, and to press both buttons for 3 seconds to start cleaning.

7. TROUBLESHOOTING

If you encounter issues with your coffee maker, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Coffee maker does not turn on.	Not plugged in; power outlet issue.	Ensure the power cord is securely plugged into a working electrical outlet.
Coffee does not brew.	No water in reservoir; brew chamber not closed properly.	Fill the water reservoir with water. Ensure the lid is firmly closed and the K-Cup/ground filter is correctly seated.
Coffee tastes weak.	Too much water; not enough coffee; coffee too coarse.	Adjust water amount (especially for iced coffee, use 6oz for K-Cup). Use more coffee grounds or a finer grind.
Coffee overflows.	Cup too small; brew chamber clogged.	Use a larger cup. Clean the brew chamber and needle. Run a descaling cycle.
Descaling reminder light is on.	Mineral buildup.	Perform the descaling procedure as outlined in Section 6.2.

8. SPECIFICATIONS

Feature	Detail
Brand	Tastyle
Model Name	22101C
Capacity	14 ounces
Color	Matte Black
Product Dimensions (D x W x H)	8.2" x 5.6" x 12"
Coffee Maker Type	Drip Coffee Machine
Operation Mode	Fully Automatic
Wattage	1000 watts
Voltage	120V
Filter Type	Reusable
Item Weight	2.64 Pounds
Material	Plastic, Stainless Steel

Space-Saving Design Yet Fits Travel Mug



The Tastyle coffee maker showcasing its compact dimensions: 8.2 inches deep, 5.6 inches wide, and 12 inches high. It is designed to fit small spaces and accommodate travel mugs up to 6.7 inches tall.

9. WARRANTY & SUPPORT

Tastyle products are manufactured to the highest quality standards. For specific warranty information and customer support, please refer to the warranty card included with your product or visit the official Tastyle website. If you have any questions or require assistance, please contact our customer service team.

Contact Information: Please refer to your product packaging or the official Tastyle website for the most up-to-date customer support contact details.

