

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [UBeesize](#) /

› [UBeesize Flexible Mini Tripod Stand \(Model TBC001\) - Instruction Manual](#)

UBeesize TBC001

UBeesize Flexible Mini Tripod Stand

Model: TBC001

Your versatile companion for stable photography and videography.

INTRODUCTION

Thank you for choosing the UBeesize Flexible Mini Tripod Stand. This manual provides essential information for the proper setup, operation, and maintenance of your new tripod. Designed for flexibility and durability, this tripod is compatible with cellphones, cameras, and GoPro devices, making it ideal for various content creation needs.

WHAT'S IN THE BOX

- Flexible Phone Tripod
- Wireless Remote
- Phone Holder
- GoPro Adapters

SETUP

1. Attaching Your Device

1. **For Cellphones:** Screw the provided phone holder onto the tripod's 1/4-inch universal screw. Securely place your cellphone into the holder. The holder is adjustable to fit various phone sizes.
2. **For Cameras:** Directly screw your camera onto the tripod's 1/4-inch universal screw. Ensure it

is tightened securely.

3. **For GoPro:** Attach the GoPro adapter to the tripod's 1/4-inch universal screw, then mount your GoPro device onto the adapter.

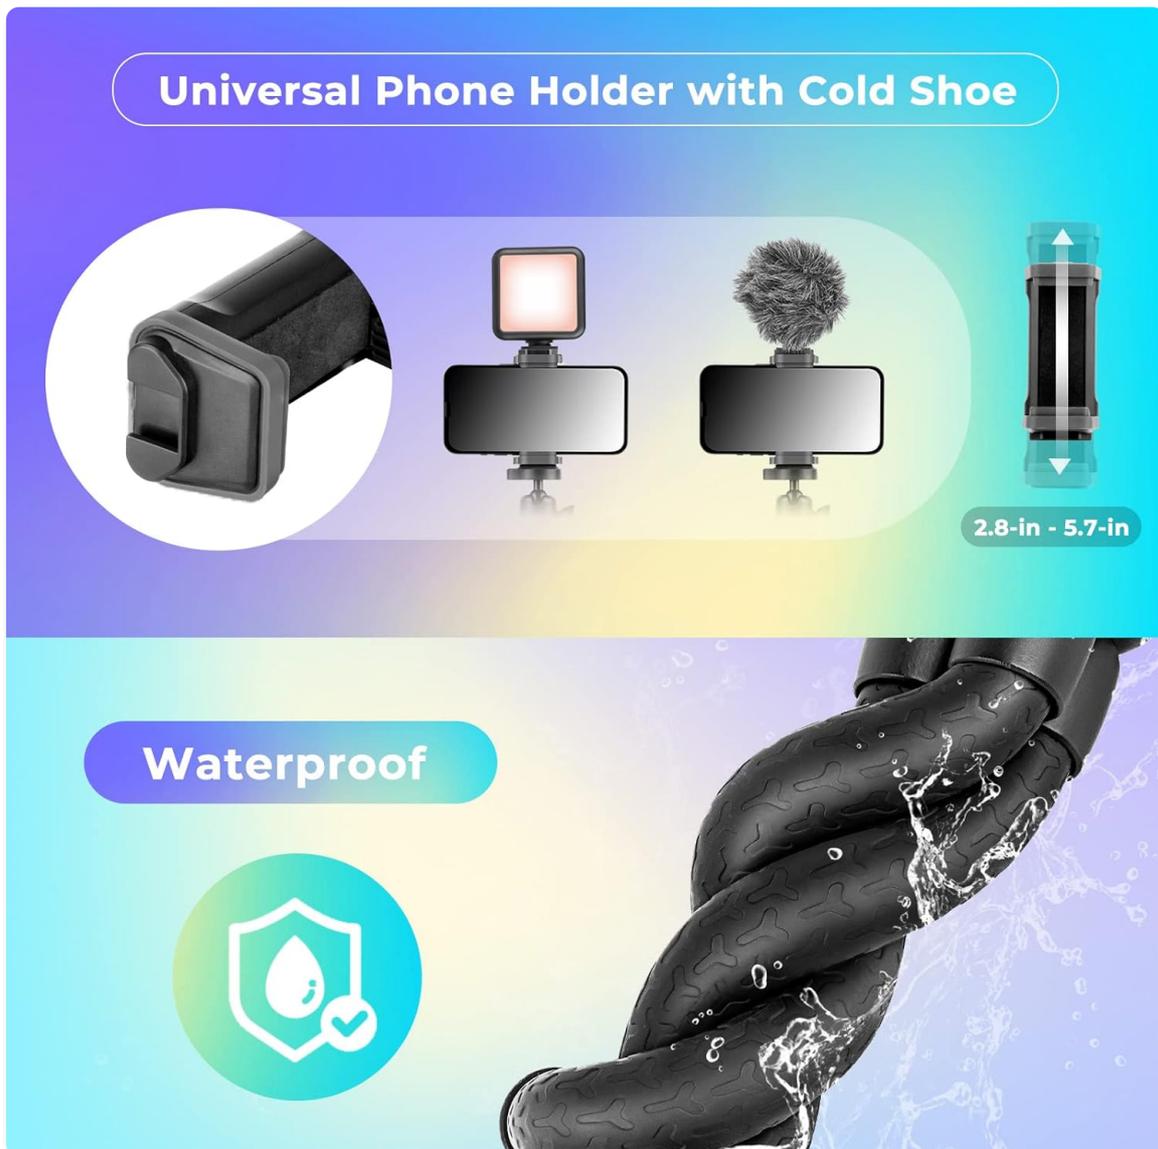


Image: The UBeeSize Flexible Mini Tripod with a phone holder attached, demonstrating how a smartphone can be mounted for use.

2. Pairing the Wireless Remote

1. Ensure the remote has a CR2032 battery installed (included).
2. Turn on the remote by sliding the power switch. A blue indicator light will flash, indicating it's in pairing mode.
3. On your smartphone, go to Bluetooth settings and search for available devices.
4. Select "UBeeSize" from the list to pair. The blue light on the remote will stop flashing and remain solid once connected.
5. You can now use the remote to trigger your phone's camera shutter for photos or start/stop video recording.

Wireless Bluetooth Remote

Allow 10m/33ft distance Photo/Video taking



Connect to "UBeesize"
in the available list

Image: A smartphone screen showing Bluetooth settings with "UBeesize" available for connection, alongside the wireless remote.

OPERATING INSTRUCTIONS

1. Adjusting the Flexible Legs

The tripod features flexible, rubberized legs that can be bent and wrapped around various objects (e.g., railings, branches) to secure your device in unique positions. The anti-slip feet provide stability on flat surfaces. Adjust each leg individually to achieve the desired height and angle.



Image: A detailed view of the UBeesize Flexible Mini Tripod, showcasing its anti-slip feet, flexible legs, and the 360° panning and 90° tilt ball head.

2. Adjusting the Ball Head

The tripod is equipped with a ball head that allows for 360° panoramic rotation and 90° vertical tilt. Loosen the adjustment knob on the side of the ball head to freely move your device to the desired angle. Tighten the knob firmly to lock it in place.

3. Using the Wireless Remote

Once paired, the wireless remote allows you to take photos or start/stop video recording from a distance of up to 33 feet (10 meters). It has separate buttons for iOS and Android devices for optimal compatibility.

MAINTENANCE

Cleaning

The tripod's rubberized legs are waterproof. To clean, wipe with a damp cloth and mild soap if necessary. Avoid harsh chemicals or abrasive materials that could damage the rubber or plastic.

components. Ensure all parts are dry before storage.



Image: An illustration emphasizing the waterproof nature of the UBeesize Flexible Mini Tripod's legs.

Storage

When not in use, store the tripod in a cool, dry place away from direct sunlight. Ensure the legs are straightened for compact storage or folded as desired.

Remote Battery Replacement

The wireless remote uses one CR2032 battery. If the remote stops responding or the indicator light does not illuminate, replace the battery. Refer to the remote's compartment for instructions on how to open and replace the battery.

TROUBLESHOOTING

- **Remote Not Pairing:** Ensure the remote's battery is charged and correctly inserted. Make sure Bluetooth is enabled on your device and the remote is within range (up to 33 feet). Try unpairing and re-pairing the device.
- **Tripod Stability:** For heavier devices or uneven surfaces, ensure the flexible legs are spread wide and wrapped securely around an object if possible. Always check the balance of your device on the tripod before leaving it unattended.
- **Stiff Legs:** The flexible legs are designed to be firm to hold their shape. If they feel too stiff, gently manipulate them to loosen the joints. Avoid excessive force.

SPECIFICATIONS

| Feature | Detail |
|------------------------|--|
| Model Number | TBC001 |
| Brand | UBeesize |
| Material | Rubber |
| Color | Black |
| Item Weight | 10.5 ounces |
| Package Dimensions | 9.33 x 3.58 x 2.01 inches |
| Maximum Height | 27 Centimeters |
| Weight Limit | 2.2 Kilograms |
| Tripod Head Type | Ball Heads |
| Number of Leg Sections | 1 |
| Compatible Devices | GoPro, iPhone (and other cellphones/cameras with 1/4-inch screw mount) |
| Remote Battery | 1 CR2032 (included) |

WARRANTY AND SUPPORT

Warranty Information

Please refer to the product packaging or the official UBeesize website for detailed warranty information. Keep your purchase receipt for warranty claims.

Customer Support

For any questions, technical assistance, or support, please contact UBeesize customer service:

Email: customercare@ubeesize.com