

XTREME DIGITAL LIFESTYLE ACCESSORIES Tilt Motion TV Wall Mount

Xtreme Tilt Motion TV Wall Mount User Manual

Model: Tilt Motion TV Wall Mount (B0B69Q7PCH)

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Xtreme Tilt Motion TV Wall Mount. Please read this manual thoroughly before installation to ensure proper setup and safe use. Keep this manual for future reference.

The Xtreme Tilt Motion TV Wall Mount is designed for flat-panel TVs ranging from 32 to 70 inches and supports up to 88 lbs. It features a durable heavy-gauge steel construction and allows for a tilt range of 0 to 8 degrees. It is compatible with VESA mounting patterns from 100x100mm to 600x400mm.

SAFETY INFORMATION

WARNING: Failure to read and follow these instructions can result in serious personal injury, property damage, or voiding of warranty. If you do not understand these instructions, or have doubts about the safety of the installation, please contact a qualified installer.

- Do not install this product on walls that are not structurally sound.
- Ensure the mounting surface can safely support the combined weight of the mount and the display.
- Use only the provided mounting hardware. Do not use power tools to tighten screws.
- This product is intended for indoor use only.
- Keep children and pets away during installation.

PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation. If any parts are missing or defective, contact Xtreme customer support.

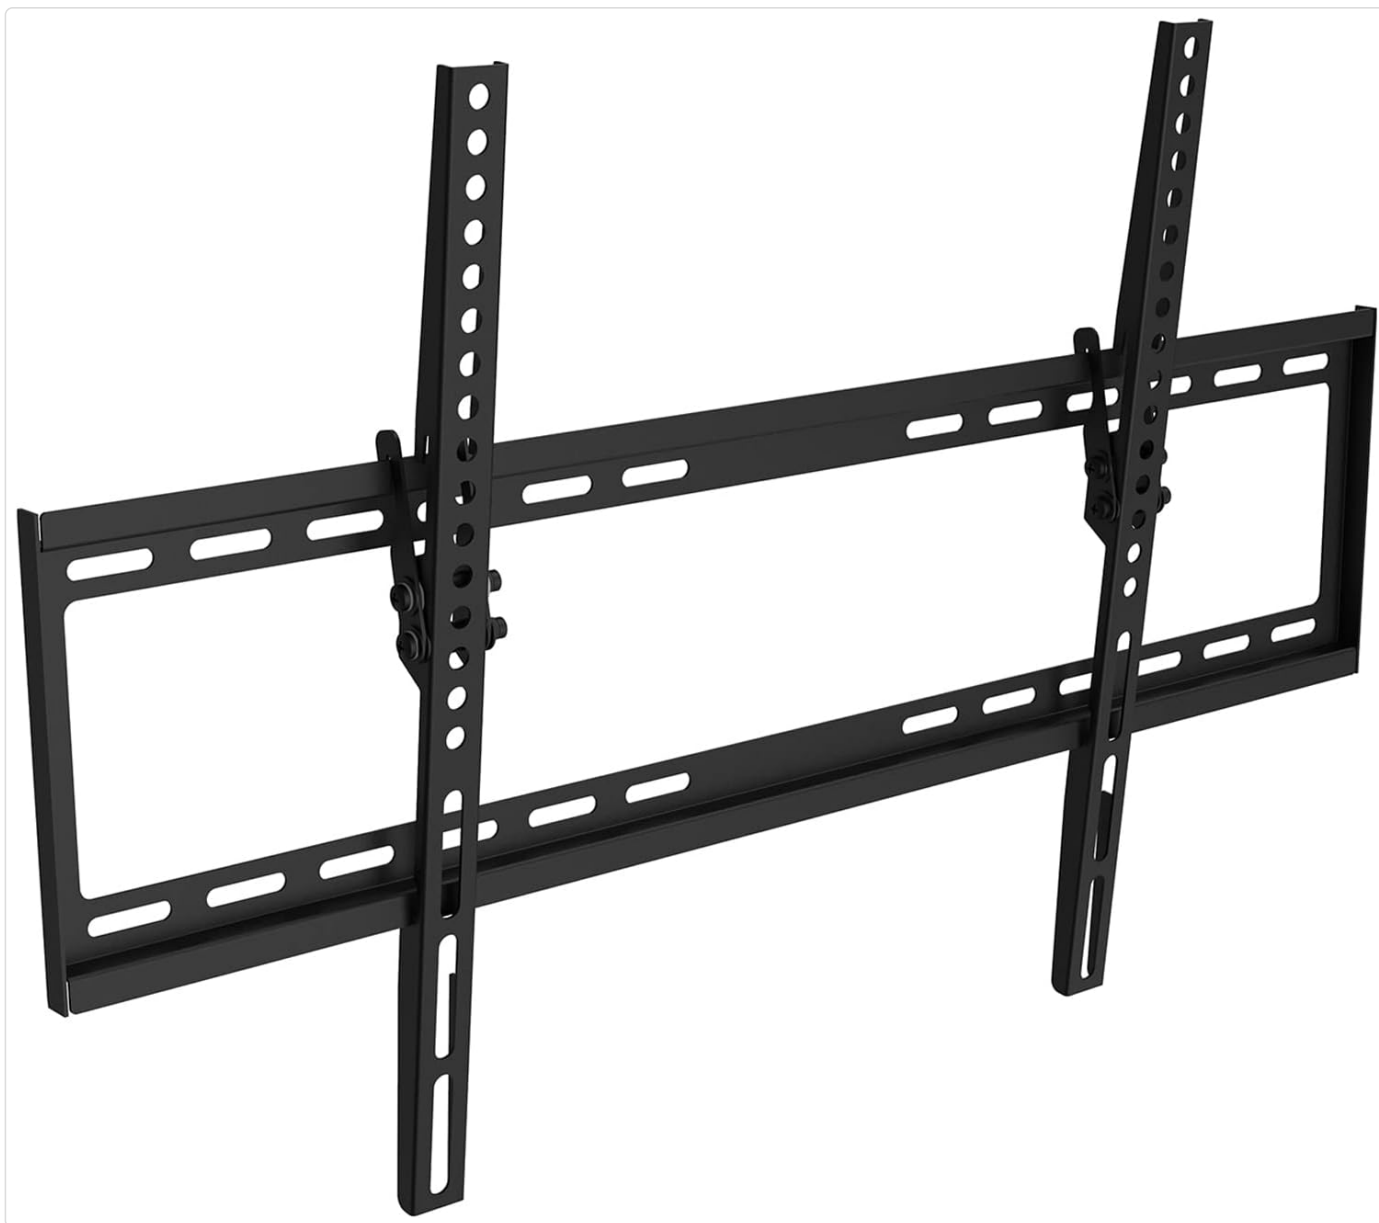


Image: Main components of the Xtreme Tilt Motion TV Wall Mount, showing the wall plate and TV brackets.

- Wall Plate Assembly
- TV Brackets (2)
- Mounting Hardware Kit (screws, anchors, washers, spacers)
- Magnetic Level
- Instruction Manual

SETUP AND INSTALLATION

Before installation, determine the desired height and location for your TV. Ensure there are no electrical wires or plumbing behind the drilling area.

Tools Required (Not Included):

- Pencil
- Stud Finder (for wood stud installation)
- Drill with appropriate drill bits (e.g., 5/32" for wood studs, 3/8" for concrete/brick)
- Phillips Head Screwdriver
- Socket Wrench or Adjustable Wrench

- Hammer (for concrete anchors)

Step-by-Step Installation:

1. Attach TV Brackets to TV:

Carefully place your TV face down on a soft, clean surface. Identify the VESA mounting holes on the back of your TV. Select the appropriate screws, washers, and spacers from the hardware kit that fit your TV's mounting holes. Attach the two TV brackets to the back of your TV, ensuring they are centered and securely fastened. The brackets should be positioned so the hooks face downwards.

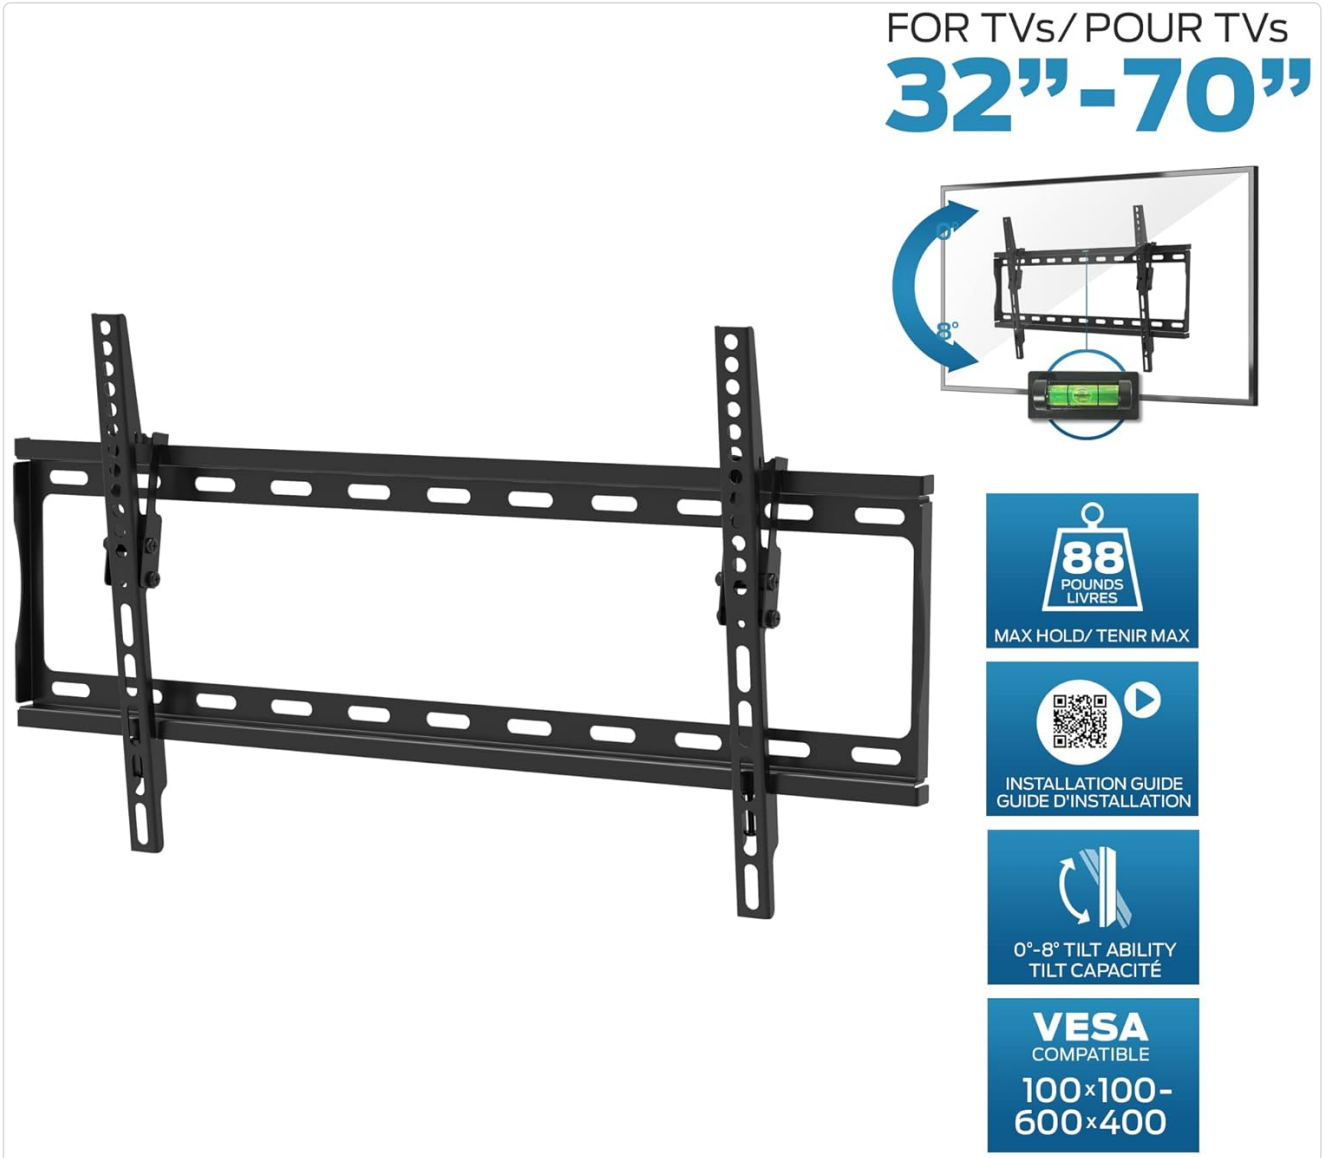


Image: Diagram illustrating the TV brackets, VESA compatibility, and tilt range. Note the magnetic level for precision.

2. Mark Wall Drilling Locations:

Hold the wall plate against the wall at your desired mounting height. Use the included magnetic level to ensure the wall plate is perfectly horizontal. Mark the drilling locations through the holes on the wall plate with a pencil. For wood stud installation, use a stud finder to locate the center of the studs and align the wall plate holes with them. For concrete/brick walls, ensure marks are clear.

3. Drill Pilot Holes:

For wood stud installation, drill pilot holes using a 5/32" (4mm) drill bit. For concrete or brick walls, drill pilot holes using a 3/8" (10mm) drill bit and insert the concrete anchors flush with the wall surface using a hammer.

4. Mount Wall Plate:

Align the wall plate with the drilled holes. Secure the wall plate to the wall using the appropriate lag bolts and washers. Tighten all bolts firmly with a socket wrench, but do not overtighten.

5. **Hang TV on Wall Plate:**

With assistance, carefully lift the TV with the attached brackets. Hook the TV brackets onto the top edge of the wall plate. Gently lower the TV until the brackets are securely seated on the wall plate. Ensure the TV is centered and level.



Image: An example of a flat-panel TV securely mounted on a wall using the Xtreme Tilt Motion TV Wall Mount in a modern living room.

6. **Secure TV to Wall Plate:**

Locate the safety screws or locking mechanisms on the bottom of the TV brackets. Tighten these screws to secure the TV to the wall plate, preventing accidental dislodgement.

OPERATING INSTRUCTIONS

Adjusting Tilt Angle:

The Xtreme Tilt Motion TV Wall Mount allows for a tilt adjustment of 0 to 8 degrees. To adjust the tilt, gently push or pull the bottom of the TV to achieve the desired viewing angle. The friction-based mechanism will hold the TV in place. No tools are typically required for tilt adjustment once installed.

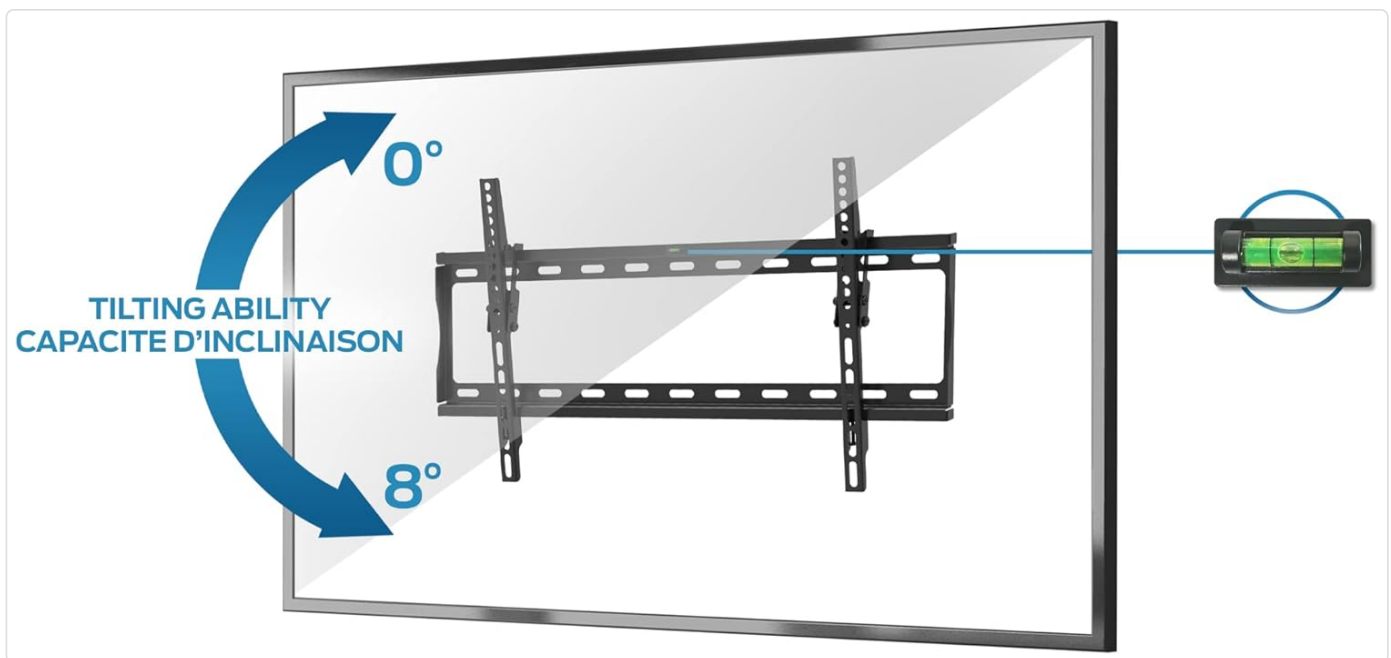


Image: A visual representation of the TV mount's tilting capability, illustrating the range from 0 to 8 degrees for optimal viewing.

MAINTENANCE

The Xtreme Tilt Motion TV Wall Mount requires minimal maintenance. Follow these guidelines to ensure longevity:

- **Cleaning:** Use a soft, dry cloth to wipe down the mount. Avoid abrasive cleaners or solvents that could damage the finish.
- **Periodic Inspection:** Periodically check all screws and bolts to ensure they remain tight. Over time, vibrations or adjustments may cause them to loosen.
- **Weight Limit:** Do not exceed the maximum weight capacity of 88 lbs (40 kg).

TROUBLESHOOTING

Problem	Possible Cause	Solution
TV is not level after installation.	Wall plate was not level during installation.	Carefully remove the TV, loosen the wall plate screws, adjust the wall plate using a level, re-tighten screws, and re-hang the TV.
TV feels unstable on the mount.	Screws are loose or incorrect hardware used.	Ensure all mounting screws (both to wall and to TV) are securely tightened. Verify correct hardware was used for your TV and wall type. Do not exceed weight limit.
Difficulty tilting the TV.	Friction mechanism too tight or TV too heavy.	Check the weight of your TV against the mount's capacity. Ensure no cables are obstructing the tilt mechanism.

SPECIFICATIONS

Feature	Detail
Model Name	Tilt Motion TV Wall Mount

Feature	Detail
Compatible TV Sizes	32 - 70 inches
Weight Capacity	Up to 88 lbs (40 kg)
VESA Compatibility	100x100mm to 600x400mm
Tilt Angle	0 to 8 degrees
Material	Heavy-Gauge Steel (Alloy Steel)
Color	Black
Item Weight	1 pound
UPC	805106219376

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Xtreme Digital Lifestyle Accessories customer service. Refer to your product packaging or the brand's official website for the most current contact details.




Brand: XTREME DIGITAL LIFESTYLE ACCESSORIES


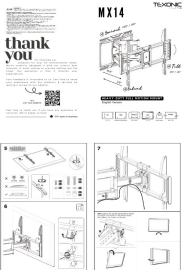

Website: [Visit the XTREME DIGITAL LIFESTYLE ACCESSORIES Store on Amazon](#)

Please have your product model (Tilt Motion TV Wall Mount) and ASIN (B0B69Q7PCH) ready when contacting support.

© 2024 XTREME DIGITAL LIFESTYLE ACCESSORIES. All rights reserved.

Related Documents - Tilt Motion TV Wall Mount

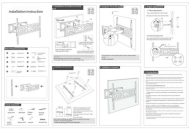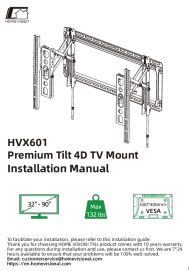	<p>BEISHI TV Wall Mount Installation Guide - Full Motion Articulating Bracket</p> <p>Comprehensive installation instructions for the BEISHI TV Wall Mount, featuring full-motion articulating arm capabilities. Learn how to safely mount your 32-70 inch flat or curved TV with VESA compatibility. Includes mounting accessories, tools required, step-by-step guidance, and important safety precautions.</p>
	<p>Home Vision HVX601 Premium Tilt 4D TV Mount Installation Manual</p> <p>Comprehensive installation guide for the Home Vision HVX601 TV mount. Learn how to safely install your 32-90 inch TV with this detailed manual, covering wall mounting, VESA compatibility, and angle adjustments.</p>
	<p>Kimex 012-1143 Fixed TV Wall Mount for 32-60 Inch Screens - Installation Guide</p> <p>Comprehensive installation manual for the Kimex 012-1143 fixed TV wall mount. Covers safety, parts, and step-by-step assembly for 32-60 inch screens up to 60kg. Supports various VESA patterns.</p>

 The image shows the cover of the ONKRON N1L installation guide. It features a technical drawing of the ceiling mount, a list of included parts, and the ONKRON logo.	<p>ONKRON N1L Tilt Swivel Ceiling TV Mount - Installation Guide</p> <p>Comprehensive installation guide for the ONKRON N1L ceiling TV mount. Features include tilt and swivel capabilities, support for 32"-80" screens, a load capacity of 68.2 kg (150 lbs), and VESA compatibility up to 600x400mm. This manual provides detailed step-by-step instructions for safe and secure installation on various ceiling and wall types.</p>
 The image shows the cover of the Texonic MX14 installation guide. It includes a technical drawing of the wall mount, a 'thank you' message, and the Texonic logo.	<p>Texonic MX14 Heavy-Duty Full Motion TV Wall Mount</p> <p>Specifications and installation guide for the Texonic MX14 heavy-duty full motion TV wall mount, featuring VESA compatibility, adjustable tilt, swivel, and pan, with a maximum load capacity of 165 lbs.</p>
 The image shows the cover of the HALOMOUNT HMTM-T01P installation guide. It features a technical drawing of the wall mount, a list of included parts, and the HALOMOUNT logo.	<p>HALOMOUNT Heavy-Duty Tilt TV Wall Mount HMTM-T01P Installation Guide</p> <p>Installation guide for the HALOMOUNT Heavy-Duty Tilt TV Wall Mount (HMTM-T01P). Supports VESA up to 400x400, 70-inch screens, 75kg capacity. Includes safety, parts, and step-by-step assembly instructions.</p>