

[manuals.plus](#) /› [Audecook](#) /› [Audecook Hot Pot Electric 2L Instruction Manual](#)

Audecook 10205FR

Audecook Hot Pot Electric 2L Instruction Manual

Model: 10205FR

Audecook Hot Pot Electric 2L, Ceramic Glaze Non-Stick Frying Pan 8 Inch, Portable Travel Cooker with Dual Power Control.

1. IMPORTANT SAFEGUARDS

Please read all instructions carefully before using this product to ensure safe and proper operation. Keep this manual for future reference.

- Before use, check whether the rated voltage on the product nameplate is the same as the voltage you use.
- The power cord plug must be plugged in the appropriate position.
- This container is prohibited from being soaked in water to avoid short circuit of the internal circuit.
- User should watch over the product when it works. Do not leave it unattended to avoid accidents.
- Do not allow children to approach or touch the product while working to avoid burns. This product is prohibited to be used unattended, and the power cord must be unplugged when it not in use.
- In order to clean the pot, please add the moderate amount of water and pour it out after boiling when you use the product for the first time.
- Do not hang the power cordon the table or in contact with hot objects.



Image: Product packaging displaying safety precautions and importer information.

2. PRODUCT OVERVIEW

The Audecook Hot Pot Electric 2L is a versatile and portable cooking appliance designed for various culinary tasks. It features a ceramic glaze non-stick interior and dual power control for flexible cooking.



Image: The Audecook Hot Pot Electric 2L, showing the main pot, removable steamer insert, lid, and included silicone spatula.

Key Features:

- **2L Capacity with Steamer:** Designed for multi-cooking, allowing steaming above and cooking below.
- **Multifunctional Electric Skillet:** Dual power control (350W for gentle cooking, 800W for high heat tasks).
- **Healthy Non-Stick Coating:** 5h hardness aluminum alloy interior with upgraded PFOA-free non-stick coating for easy cleaning.
- **Quick & Even Heating:** Unique 360° annular heating base ensures rapid and uniform heat distribution.
- **Overheating Protection:** Automatic power-off when temperature exceeds 180°C.
- **Portable and Stable:** Compact and lightweight design with four-leg non-slip base, ideal for travel and small spaces.

3. SETUP

1. **Unpack:** Carefully remove all components from the packaging, including the hot pot, lid, steamer insert, and silicone spatula.
2. **Initial Cleaning:** Before first use, clean the non-stick interior of the pot and the steamer insert with warm, soapy water. Rinse thoroughly and dry completely. As per safety instructions, you may also add a moderate amount of water to the pot and boil it, then pour it out.
3. **Placement:** Place the hot pot on a stable, flat, and heat-resistant surface. Ensure there is adequate ventilation around the unit.

4. **Power Connection:** Plug the power cord into a suitable electrical outlet. Ensure the voltage matches the product's rated voltage.



Image: The Audecook Hot Pot demonstrating its "Steam Above & Cook Below" functionality, highlighting the 2.0L capacity and long handle design.

4. OPERATING INSTRUCTIONS

4.1 Dual Power Control

The Audecook Hot Pot features a dual power control knob located on the handle, allowing you to select between two power settings:

- **350W (Low Power):** Ideal for gentle cooking tasks such as making omelettes, ramen, or pancakes.
- **800W (High Power):** Suitable for more intensive cooking like steaming salmon, frying, cooking hot pot, sautéing vegetables, or steaks.



Image: A hand adjusting the dual power control knob on the Audecook Hot Pot handle, illustrating the 350W and 800W settings.

4.2 Using the Pot (Cooking)

1. Add your ingredients to the non-stick pot.
2. Select the desired power setting (350W or 800W) using the control knob.
3. Monitor your cooking. The non-stick surface ensures food does not stick, and the 360° annular heating base provides quick and even heating.
4. Use the included silicone spatula or other non-abrasive utensils to protect the non-stick coating.



HEALTHY CERAMIC NONSTICK

EASILY WIPE CLEAN

Image: The Audecook Hot Pot being used to prepare various dishes, showcasing its versatility as a multifunctional electric pan.

4.3 Using the Steamer Insert

The removable steamer insert allows for simultaneous steaming while cooking in the main pot.

1. Ensure there is sufficient liquid (water, broth, etc.) in the main pot to generate steam.
2. Place the steamer insert into the main pot.
3. Arrange your vegetables, fish, or other items to be steamed in the steamer insert.
4. Cover with the lid. The steam from the main pot will cook the food in the steamer, preserving nutrients and flavor.

5. MAINTENANCE AND CLEANING

Proper care and cleaning will extend the life of your Audecook Hot Pot.

- **Always unplug the appliance** from the power outlet and allow it to cool completely before cleaning.
- **Non-Stick Pot:** The interior of the pot is non-stick and easy to clean. Wipe clean with a soft cloth or sponge and mild dish soap. Rinse thoroughly. *Do not immerse the main pot in water.*
- **Steamer Insert and Lid:** The steamer insert (made of food-grade PP material) and the lid can be washed with warm, soapy water. They are not dishwasher safe.

- **Exterior:** Wipe the exterior of the hot pot with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the surface.
- **Storage:** Store the clean and dry hot pot in a cool, dry place.



Image: Demonstrating the ease of cleaning the healthy ceramic non-stick surface of the Audecook Hot Pot.

6. TROUBLESHOOTING

If you encounter any issues with your Audecook Hot Pot, please refer to the following common solutions:

Problem	Possible Cause / Solution
Appliance does not turn on.	<ul style="list-style-type: none"> • Ensure the power cord is securely plugged into both the appliance and a working electrical outlet. • Check if the power outlet is functioning correctly by testing it with another appliance.

Problem	Possible Cause / Solution
Food is not heating evenly.	<ul style="list-style-type: none"> Ensure the appliance is placed on a flat, stable surface. Stir ingredients periodically to promote even cooking. Ensure the correct power setting (350W or 800W) is selected for your cooking needs.
Appliance suddenly turns off during use.	<ul style="list-style-type: none"> The overheating protection may have been triggered. The appliance will automatically power off if the temperature exceeds 180°C. Unplug the unit and allow it to cool down before resuming use.
Food sticks to the non-stick surface.	<ul style="list-style-type: none"> Ensure you are using non-abrasive utensils (like the included silicone spatula). Avoid using metal utensils that can scratch the non-stick coating. Ensure the pot is clean and free of residue before cooking.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Audecook
Model Number	10205FR
Capacity	2 Liters
Material	Nonstick (Ceramic Glaze)
Color	F(White/with Steamer)
Product Dimensions	7.87"D x 9.45"W x 4.72"H
Wattage	350W / 800W (Dual Power)
Item Weight	3.37 pounds (1.53 Kilograms)
Control Method	Mechanical knob
Operation Mode	Manual
Dishwasher Safe	No
Voltage	100 Volts
Special Feature	Skillets, Saucepans, Steamer

8. WARRANTY AND SUPPORT

For product support, warranty inquiries, or any questions not covered in this manual, please contact the

manufacturer or authorized importers:

- **Manufacturer:** Audecook
- **EU Representative:** JUNE-COMMERCE, Address: 6 RUE DARMAILLE, 75017 PARIS FR, E-mail: yidyx112@outlook.com
- **UK Representative:** WSJ Product LTD, Address: Unit 1 Alsop Arcade, Liverpool, brownlow hill, L3 5Tx, GB, E-mail: info02@wsj-product.com

Please retain your proof of purchase for warranty claims.

© 2025 Audecook. All rights reserved.

Documents - Audecook – 10205FR

no relevant documents