

Hatteker RSCW-767

Hatteker Foil Shaver & Hair Trimmer Kit User Manual

Model: RSCW-767

Brand: Hatteker

1. INTRODUCTION

Thank you for choosing the Hatteker Foil Shaver & Hair Trimmer Kit. This 2-in-1 grooming solution is designed for versatile use, offering both a precision foil shaver for close shaves and a hair trimmer for styling and maintenance. Please read this manual thoroughly before first use to ensure proper operation and care of your device.

2. PACKAGE CONTENTS

Your Hatteker Foil Shaver & Hair Trimmer Kit includes the following items:

- Foil Shaver
- Hair Trimmer
- Charger (USB cable)
- Cleaning Brush
- Multiple comb attachments for the trimmer



Image 2.1: All components included in the Hatteker Foil Shaver & Hair Trimmer Kit.

3. PRODUCT FEATURES

- **2-in-1 Trimmer Kit:** The shaver is effective for dense, short, and thick hair, featuring an ultra-thin blade mesh for a close shave. The hair trimmer assists in managing longer hair, allowing for efficient grooming.



2 IN 1 USE



Image 3.1: Demonstrating the dual functionality for head and facial hair.

- **Bald Head Shaver:** Designed to capture hairs growing at various angles, ensuring a smooth finish. Includes a side knife for lightening head, sideburns, and chest hair.
- **LED Displays:** Both the shaver and hair clipper feature smart LED displays, indicating battery percentage, washing reminders, and travel lock status for clear visibility.



Image 3.2: Detailed view of the shaver's components and LED display.

- **Easy to Charge and Use:** The shaver fully charges in 1.5 hours for 75 minutes of operation. The hair clipper works for 180 minutes after 3 hours of charging and can be used while charging via the USB cable.



Image 3.3: The hair trimmer and its charging capabilities.

- **IPX7 Waterproof:** Both the trimmer and all accessories are fully washable, allowing for easy cleaning by rinsing under running water.

Fully washable design for easy cleaning



Image 3.4: The device is fully washable for convenient cleaning.

4. SETUP

4.1. Charging the Device

Before first use, fully charge your Hattaker shaver and hair trimmer. Use the provided USB charging cable.

- Connect the USB cable to the charging port on the device.
- Plug the other end of the USB cable into a compatible USB power source (e.g., computer, USB wall adapter).
- The LED display will show the charging progress.
- The shaver takes approximately 1.5 hours for a full charge, providing 75 minutes of runtime.
- The hair clipper takes approximately 3 hours for a full charge, providing 180 minutes of runtime.

USB QUICK CHARGE WITH LONG BATTERY LIFE

1.5 Hours

75 Mins

Full charge

Working time


 High quality large capacity lithium battery



Image 4.1: Charging the shaver via USB.

5. OPERATING INSTRUCTIONS

5.1. Using the Foil Shaver

The foil shaver is ideal for achieving a close shave on the face or head, especially for bald styles. Its ultra-thin blade mesh is designed to pre-trim longer hairs before the final close shave.

1. Ensure the shaver is charged.
2. Press the power button to turn on the shaver.
3. Gently press the shaver against your skin, moving it in short, circular motions or straight strokes against the direction of hair growth.
4. For best results on bald heads, ensure hair is trimmed short before using the foil shaver.
5. Use the integrated side knife for precise detailing around sideburns or for body hair.

5.2. Using the Hair Trimmer

The hair trimmer is suitable for various hair lengths and for creating precise edges and designs.

1. Ensure the trimmer is charged.
2. Attach the desired comb attachment if you wish to trim to a specific length.
3. Press the power button to turn on the trimmer.
4. Guide the trimmer through your hair, moving against the direction of hair growth for an even cut.
5. For precise edging, remove the comb attachment and use the bare blade.



Image 5.1: Steps for using the hair clipper and foil razor.



Image 5.2: Examples of trimming and edging with the hair clipper.

6. MAINTENANCE

6.1. Cleaning the Device

Regular cleaning ensures optimal performance and extends the lifespan of your shaver and trimmer. Both devices are IPX7 waterproof and can be rinsed under water.

1. Turn off the device before cleaning.
2. For the shaver, press the foil frame release buttons to open the cutter head.
3. Use the provided cleaning brush to remove hair from the blade net and inner blades.
4. Rinse the cutter head and the main body under running tap water.
5. For the trimmer, remove any comb attachments and brush away hair from the blade. Rinse the blade under water.
6. Allow all parts to air dry completely before reassembling or storing.



Image 6.1: Step-by-step guide for cleaning the shaver heads.

7. TROUBLESHOOTING

If you encounter any issues with your Hatteker Foil Shaver & Hair Trimmer Kit, please refer to the following common solutions:

- **Device not turning on:** Ensure the device is fully charged. Check the charging cable and power source.
- **Reduced performance:** Clean the blades and foil thoroughly. Hair buildup can affect cutting efficiency.
- **Unusual noise:** Ensure the cutter head is properly attached and free of debris.
- **Battery not holding charge:** Ensure you are using the original charging cable. If the issue persists, the battery may need replacement.

If the problem cannot be resolved with the above steps, please contact Hatteker customer support for assistance.

8. SPECIFICATIONS

Product Dimensions	5.51 x 2.56 x 7.09 inches
Item Model Number	RSCW-767
Weight	1.46 Pounds
Power Source	Battery Powered
Shaver Charging Time	1.5 hours
Shaver Runtime	75 minutes
Clipper Charging Time	3 hours
Clipper Runtime	180 minutes
Waterproof Rating	IPX7

9. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the warranty card included with your product packaging or visit the official Hatteker website. Keep your purchase receipt as proof of purchase.