

- Manuals.plus /
- › TEZILON /
- › TEZILON Kids 4G GPS Smart Watch User Manual

TEZILON TB0081

TEZILON Kids 4G GPS Smart Watch User Manual

Brand: TEZILON | Model: TB0081

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your TEZILON Kids 4G GPS Smart Watch. This device is designed to offer real-time tracking, two-way communication, and various safety features for children aged 3-15.



The TEZILON Kids 4G GPS Smart Watch is a multi-functional device equipped with features such as GPS positioning, two-way phone calls, video calls, SOS emergency alerts, a pedometer, flashlight, camera, and a safety geo-fence. It operates on a 4G network, ensuring reliable connectivity.

2. What's in the Box

Please verify that all items are present in the package:

- TEZILON Kids Smart Watch (Blue)
- Charging Cable
- SIM Card Slot Tool
- User Manual



Image: Contents of the TEZILON Kids Smart Watch package, including the watch, charging cable, and SIM card tool.

3. SETUP GUIDE

3.1. SIM Card Installation

1. Ensure the watch is powered off before inserting the SIM card.
2. Locate the SIM card slot on the side of the watch. Use the provided SIM card slot tool to open the tray.
3. Insert a Nano SIM card (4G compatible) into the tray with the gold contacts facing up and the notched corner aligned correctly. For users in America, Speedtalk SIM cards are recommended.
4. Gently push the SIM tray back into the watch until it clicks into place.

3.2. App Installation and Registration

The watch requires a companion application for full functionality and parental control. The specific app name may vary, but it is typically found by scanning a QR code in the watch's settings or manual, or by searching for 'SeTracker' or a similar name in your smartphone's app store.

1. Download the recommended app from your smartphone's app store (iOS or Android).
2. Register a new account using your email address and create a password.
3. Bind the watch to your account by scanning the QR code located on the watch's back cover or by manually entering the device ID.
4. Configure initial settings such as contact numbers, SOS numbers, and time zone within the app.

3.3. Initial Power On

After SIM card installation and app registration, press and hold the power button on the watch until the screen illuminates. The watch will connect to the 4G network, indicated by the signal strength icon on the display.



Image: The watch connected to a 4G network, illustrating its connectivity for tracking and communication.

4. OPERATING INSTRUCTIONS

4.1. Real-Time GPS Tracking

The watch features a built-in GPS positioning device. You can monitor the wearer's location in real-time through the companion app on your smartphone. The app displays the current location on a map and can show historical routes for the past 90 days.



Image: The watch's GPS tracking capability, showing a child's location on a map via a smartphone app.

4.2. Two-Way Phone Call

The watch functions as a mobile phone, allowing two-way calls with pre-approved contacts. Contacts are managed through the companion app.

- **Making a Call:** From the watch's phone book, select a contact and tap to dial.
- **Receiving a Call:** When a call comes in, tap the green answer icon on the watch screen.

4.3. Video Call

The watch supports video calls, enabling face-to-face communication with approved contacts via the app.



4G HD Video Call

Upgraded 4G/WIFI let calls more clear and stable, shortening the distance with your children.

Baby, what are you doing?

Mom i'm reading!



Image: The watch's video call feature, showing a child communicating with a parent.

4.4. SOS Emergency Call

In an emergency, the wearer can press and hold the SOS button (typically the power button) for 3-4 seconds. The watch will automatically dial the pre-set emergency contact numbers in the app until one is answered.

SOS Emergency Call



Mom



Dad



Grandma



Grandpa



Press and hold the power button for 3-4 seconds, it will directly dial the contact phone set in the app, which is suitable for situations where kids are in danger or need to make a quick call

Geo-Fence



Set a safe area (School/Home). When your child leaves the safe area, your phone will receive a reminder.



Download and register the APP to unlock more functions



Image: Demonstration of the SOS emergency call function and Geo-Fence setup.

4.5. Geo-Fence (Safety Zone)

Through the companion app, you can set up safe areas (geo-fences) around specific locations (e.g., home, school). If the watch wearer enters or leaves these predefined areas, an alert will be sent to your smartphone app.

4.6. Silent Mode (Class Mode)

This feature allows you to set specific times during which the watch will not receive calls or notifications, preventing distractions during school hours or bedtime. This mode is configured via the companion app.

MULTIFUNCTIONAL SMART WATCH FOR KIDS

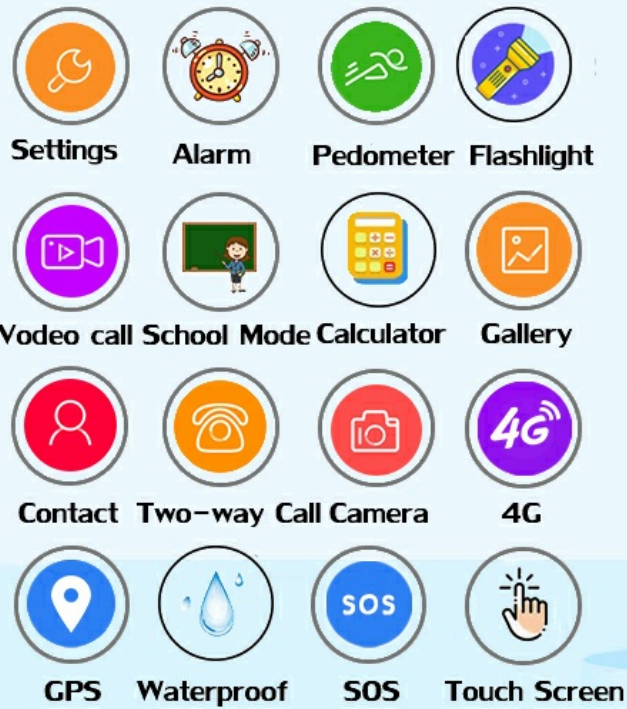


Image: Visual representation of the pedometer and Class Mode features.

4.7. Pedometer

The watch tracks steps taken throughout the day, encouraging physical activity. Step data can be viewed on the watch or in the companion app.

4.8. Flashlight

The watch includes a small flashlight function, accessible from the watch's menu.



Image: The watch's flashlight feature in use.

4.9. Camera and Photo Album

The watch has a front-facing camera for taking photos. Photos can be stored in the watch's photo album and viewed on the device or remotely accessed via the app.

5. MAINTENANCE

5.1. Waterproofing (IP67)

The watch is IP67 waterproof, meaning it is resistant to splashes and brief immersion in water. It can be worn while washing hands or playing with water. However, it is **not suitable** for swimming, showering, or diving. Prolonged exposure to water or hot water may damage the device.



Image: The watch demonstrating its IP67 waterproof capabilities during daily activities.

5.2. Cleaning

Wipe the watch regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, ensuring no moisture enters the charging port or SIM slot.

5.3. Charging

Charge the watch using the provided charging cable. Connect the magnetic end to the watch's charging contacts and the USB end to a compatible power adapter (not included) or computer USB port. A full charge typically takes 2-3 hours. Battery life is approximately 4 days with typical usage.

5.4. Storage

Store the watch in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
GPS not working / Inaccurate location	Incorrect APN settings; Weak GPS signal; No WiFi connection.	Ensure the SIM card has an active data plan. Contact your SIM card provider for correct APN settings and send them to the watch via SMS command (refer to SIM card instructions). GPS accuracy improves with WiFi connection.
Watch cannot make/receive calls	SIM card not installed correctly; No network signal; SIM card not activated; Contacts not set in app.	Reinstall SIM card. Check network signal strength. Ensure SIM card is activated and has credit/plan. Add contacts to the watch's phone book via the companion app.
App is difficult to understand / Poor translation	Translation issues within the app.	Familiarize yourself with the app's functions. Some terms may require interpretation. Refer to online resources or customer support for clarification.
Watch not charging	Charging cable not connected properly; Faulty cable/adapter; Dirty charging contacts.	Ensure the magnetic charging cable is securely attached to the watch's contacts. Try a different USB power adapter. Clean the charging contacts on both the watch and cable.
Watch screen unresponsive	Software glitch; Low battery.	Restart the watch by holding the power button. Ensure the watch is charged. If the issue persists, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model Name	A36 (TB0081)
Brand	TEZILON
Screen Size	1.44 Inches
Operating System	Android
Connectivity Technology	Cellular (4G), GPS, 802.11ac (WiFi)

Feature	Detail
GPS	Built-in GPS
Waterproof Rating	IP67
Battery	1 Lithium Ion battery required
Item Weight	6.7 ounces
Special Features	Class Mode, Flashlight, Pedometer, History Reroute, Geo Fence, SOS Alarm, Video Call, Voice Call

8. WARRANTY AND SUPPORT

8.1. Warranty Information

Your TEZILON Kids 4G GPS Smart Watch is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the product packaging or the official TEZILON website for specific warranty terms and duration.

8.2. Customer Support

For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact TEZILON customer service. Contact information can typically be found on the product packaging, the official TEZILON website, or through your purchase platform.

When contacting support, please have your product model (TB0081) and purchase details readily available.

© 2025 TEZILON. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B6C6ZZ2W>

More documents and user manuals: <https://manuals.plus/>