

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HearthSong](#) /

› [HearthSong 50 Inch Pretend Play Fabric Garage and Tool Workshop Playhouse Tent Instruction Manual](#)

## HearthSong 733894

# HearthSong 50 Inch Pretend Play Fabric Garage and Tool Workshop Playhouse Tent Instruction Manual

Model: 733894

Brand: HearthSong

## INTRODUCTION

---

Welcome to your new HearthSong Pretend Play Fabric Garage and Tool Workshop Playhouse Tent. This manual provides essential information for assembly, safe use, maintenance, and troubleshooting. Please read it thoroughly before assembly and retain it for future reference to ensure a safe and enjoyable play experience.



This image shows the fully assembled play tent with two children engaged in imaginative play, highlighting the spacious interior and road-patterned floor.

## IMPORTANT SAFETY INFORMATION

---

- Adult assembly is required.
- This product is intended for indoor use only.
- Keep the play tent away from open flames, heaters, and other heat sources to prevent fire hazards.
- Ensure all poles are securely connected during assembly to prevent the tent from collapsing.
- Not suitable for children under 3 years of age due to potential small parts.
- Always supervise children during play to ensure their safety.
- The interior shelf is non-weight bearing and intended for light objects only, such as pretend tools or small toys. Do not place heavy items on the shelf.

## PACKAGE CONTENTS

---

Before beginning assembly, please verify that all components listed below are present in your package:

- Fabric Tent Cover (1)
- Plastic Poles (various lengths for frame construction)
- Connectors (various types for joining poles)
- Assembly Instructions Sheet (this manual)

## SETUP AND ASSEMBLY

---

Follow these steps carefully for proper assembly. Adult assembly is required.

1. Unpack all components from the box and lay them out on a clean, flat surface to ensure all parts are accounted for and easily accessible.
2. Identify the different lengths of plastic poles and the various types of connectors. Refer to any included diagrams for specific pole and connector identification.
3. Begin by constructing the base frame of the tent. Connect the longest poles using the appropriate connectors to form a square or rectangular base.
4. Attach the vertical support poles to the corners of the base frame.
5. Construct the roof frame separately, connecting the shorter poles and angled connectors to form the pitched roof structure.
6. Carefully drape the fabric tent cover over the assembled frame. Ensure that the printed details, such as windows and cabinet designs, align correctly with the frame structure.
7. Secure the fabric to the frame using the integrated ties or hook-and-loop fasteners provided on the tent cover. Ensure the fabric is taut but not overly stretched.
8. Once fully assembled, gently shake the tent to confirm all connections are firm and stable before allowing children to play inside.



This diagram illustrates the overall dimensions of the play tent: approximately 44.5 inches length, 44.5 inches width, and 49.5 inches height, providing a clear understanding of its assembled size.

## OPERATING INSTRUCTIONS

The play tent is designed to encourage imaginative play and role-playing scenarios.

- **Tie-Back Doors:** The front doors can be tied back to remain open, providing easy access and increased ventilation. They can also be left untied to create a more enclosed play space.
- **Open Windows:** The tent features open windows on the sides, allowing for light and air circulation within the play area.
- **Fabric Cabinets:** The colorful fabric cabinets on the interior wall have doors that are attached with hook and loop tape. These doors can be easily removed to reveal storage space behind them, perfect for stowing away toys and pretend tools (not included).
- **Interior Shelf:** A non-weight bearing shelf is integrated into the back wall. This shelf is suitable for displaying light objects such as pretend tools, small jars, or other play accessories.
- **Road Pattern Floor:** The tent's floor features a printed road pattern, which can be used as an additional play surface for toy cars and vehicles, enhancing the garage theme.

**Shelf holds  
light objects**

**Removable  
doors reveal  
storage space**



**Tie-back  
doors**

**Road pattern**

This image points out key interior features: a shelf for light objects, cabinet doors that can be removed to reveal storage, tie-back doors for entry, and the integrated road pattern on the floor.

## **Cabinets doors are removable with hook and loop tape**



This image focuses on the cabinet doors, demonstrating how they are attached with hook and loop tape and can be easily removed to access the storage space behind them.



This composite image provides close-up details of the tent's features, including the printed roof shingles, a green fabric tie-back, an open window with green trim, and a section of the road pattern on the floor.

## MAINTENANCE AND CARE

---

- **Cleaning:** To clean the fabric tent cover, spot clean only with a damp cloth and a mild, non-abrasive soap. Do not machine wash, bleach, tumble dry, or iron the fabric, as this may damage the material or printed designs.
- **Storage:** When the play tent is not in use, it is recommended to disassemble it. Store all components in a dry, cool place, away from direct sunlight and excessive humidity, to prevent fading, mildew, and material degradation.
- **Inspection:** Periodically inspect all plastic poles and connectors for any signs of damage, cracks, or wear. Replace any damaged parts immediately to maintain the structural integrity and safety of the tent.

## TROUBLESHOOTING

---

Issue	Possible Cause	Solution
Tent feels unstable or wobbly	Poles not fully connected or frame not properly aligned.	Review the assembly steps. Ensure all plastic poles are securely inserted into their respective connectors until they click or are firmly seated. Check that the frame is square and level.
Fabric tent cover does not fit correctly or is too tight/loose	Incorrect frame assembly or fabric misaligned.	Disassemble the tent partially and re-check the frame construction against the instructions. Ensure the fabric is draped evenly over the frame and secured at all designated points.
Cabinet doors are not staying closed	Hook and loop tape is dirty, worn, or misaligned.	Clean any debris from the hook and loop tape. Ensure the two sides of the tape are pressed firmly together and are properly aligned. If worn, the adhesive may be weakened.

## PRODUCT SPECIFICATIONS

- **Model Number:** 733894
- **Dimensions (Assembled):** Approximately 44.5" L x 44.5" W x 49.5" H (113 cm L x 113 cm W x 126 cm H)
- **Material:** Durable Polyester fabric, Plastic poles
- **Recommended Age:** 3 years and up
- **Assembly Required:** Yes (Adult assembly recommended)
- **Weight:** Approximately 6.8 lbs (3.08 kg)
- **Intended Use:** Indoor play

## WARRANTY AND SUPPORT

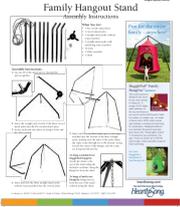
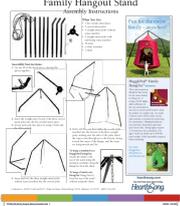
HearthSong products are designed for quality and durability. For any questions regarding assembly, missing parts, or product performance, please contact HearthSong customer service.

Please refer to your purchase documentation or the official HearthSong website for specific warranty details and terms applicable to your product.

For further support, visit the official HearthSong website or contact their customer service department directly using the contact information provided with your purchase or on their website.

## Related Documents - 733894

 <p><b>Cozy Posy HangOut@</b> Safety and Assembly Instructions</p>	<p><a href="#">Cozy Posy HangOut@ Safety and Assembly Instructions   HearthSong</a></p> <p>Comprehensive safety and assembly instructions for the HearthSong Cozy Posy HangOut (#729677). Includes parts list, materials, care, step-by-step assembly guide, and important safety warnings for this children's hanging seat.</p>
---	--

 <p>Family Hangout Stand Assembly Instructions</p>	<p><a href="#">Family Hangout Stand Assembly Instructions &amp; HugglePod Product Details   HearthSong</a></p> <p>Step-by-step assembly instructions for the HearthSong Family Hangout Stand, including parts list and hanging guide. Features details on the HugglePod Family HangOut, its benefits, and specifications.</p>
 <p>Trampoline with Adjustable Handle Safety and Assembly Instructions</p>	<p><a href="#">HearthSong Jump2It Trampoline with Adjustable Handle: Safety and Assembly Guide</a></p> <p>Detailed safety and assembly instructions for the HearthSong Jump2It Trampoline with Adjustable Handle. Includes part identification, step-by-step assembly, essential safety information, installation guidelines, and care/maintenance tips.</p>
 <p><b>hearthsong</b> Cloud Art Double-Sided Easel Safety and Assembly Instructions</p>	<p><a href="#">HearthSong Cloud Art Double-Sided Easel: Safety and Assembly Guide</a></p> <p>Comprehensive safety and assembly instructions for the HearthSong Cloud Art Double-Sided Easel (#733335), a fun art activity for children aged 3+. Includes setup, usage, maintenance, and repair guidance.</p>
 <p>Cozy Posy HangOut® Safety and Assembly Instructions</p>	<p><a href="#">Cozy Posy HangOut® Safety and Assembly Instructions   HearthSong</a></p> <p>Comprehensive safety and assembly instructions for the HearthSong Cozy Posy HangOut (#729677). Includes parts list, materials, care, step-by-step assembly guide, and important safety warnings for this children's hanging seat.</p>
 <p>Family Hangout Stand Assembly Instructions</p>	<p><a href="#">Family Hangout Stand Assembly Instructions &amp; HugglePod Product Details   HearthSong</a></p> <p>Step-by-step assembly instructions for the HearthSong Family Hangout Stand, including parts list and hanging guide. Features details on the HugglePod Family HangOut, its benefits, and specifications.</p>