

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Corioliss](#) /

› [Corioliss C Style Professional Titanium Hair Straightener User Manual](#)

Corioliss C-STYLE

Corioliss C Style Professional Titanium Hair Straightener User Manual

Model: C-STYLE | Brand: Corioliss

1. INTRODUCTION

Thank you for choosing the Corioliss C Style Professional Titanium Hair Straightener. This device is designed to provide professional-quality hair styling results. Please read this manual thoroughly before use to ensure safe and effective operation.

Important Safety Information

- For external use only.
- Do not use on wet or damp hair. Ensure hair is completely dry before styling.
- Keep out of reach of children.
- Do not immerse the appliance in water or other liquids.
- Always unplug the appliance immediately after use and before cleaning.
- Do not use if the cord is damaged. Contact customer support for repair.
- Avoid contact with skin, especially the face and neck, when the plates are hot.

2. PRODUCT FEATURES

The Corioliss C Style Hair Straightener incorporates advanced technology for optimal performance:

- **Titanium Plates:** Durable and provide even heat distribution for smooth styling.
- **Integrated Temperature Control:** Adjustable settings from 140°F to 428°F (60°C to 220°C) to suit various hair types.
- **Rapid Heat-up:** Reaches desired temperature in approximately 30 seconds.
- **Negative Ion Technology:** Helps reduce static electricity, leaving hair soft, silky, and shiny.
- **360° Swivel Cord:** Provides flexibility and ease of use, preventing tangles.
- **Ergonomic Design:** Comfortable to hold and maneuver.
- **Plate Size:** 2.4 x 9 cm (approximately 0.94 x 3.54 inches).

CORIOLISS

C-STYLE

LUXURY FOR HAIR



**TITANIUM
PLATES**



**PROFESSIONAL
FINISH**



**TEMPERATURE
CONTROL**



Image: Corioliss C Style Hair Straightener highlighting its titanium plates, professional finish, and temperature control features.

TEMPERATURE CONTROL IN 3 STAGES



Image: Close-up of the Corioliss C Style Hair Straightener showing the temperature control system with settings for 165°C (white), 185°C (green), and 220°C (red), and infrared heat technology.

3. SETUP

1. **Unpack:** Carefully remove the hair straightener from its packaging. Retain packaging for storage or future transport.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if damaged.
3. **Power Connection:** Ensure your hands are dry before plugging the appliance into a standard American electrical outlet.
4. **Hair Preparation:** Ensure your hair is clean, completely dry, and detangled before using the straightener. Applying a heat protectant spray is recommended.

Your browser does not support the video tag.

Video: Corioliss C-Style Hair Straightener Zebra Silver unboxing and initial setup, demonstrating how to remove the product from its packaging and its design.

4. OPERATING INSTRUCTIONS

4.1 Straightening Hair

1. **Power On:** Plug in the straightener. Press and hold the power button until the indicator light illuminates.
2. **Select Temperature:** Press the power button repeatedly to cycle through the temperature settings (e.g., white for 165°C, green for 185°C, red for 220°C). Choose a temperature appropriate for your hair type. Lower temperatures are recommended for fine or damaged hair, higher for thick or coarse hair.
3. **Heat Up:** Allow approximately 30 seconds for the straightener to reach the selected temperature. The indicator light will stop flashing when ready.
4. **Section Hair:** Divide your dry hair into small, manageable sections (about 1-2 inches wide).
5. **Straighten:** Take one section of hair and place it between the heating plates, close to the roots. Gently clamp the plates together and glide the straightener slowly and smoothly down the hair section, from roots to ends. Do not hold the straightener in one place for too long to avoid heat damage.
6. **Repeat:** Repeat the process for all sections of hair until desired straightness is achieved.
7. **Power Off:** After use, press and hold the power button until the indicator light turns off. Unplug the appliance from the power outlet.
8. **Cool Down:** Allow the straightener to cool completely before storing.

4.2 Creating Waves or Curls

The rounded housing of the Corioliss C Style allows for creating waves or curls:

1. Follow steps 1-4 from "4.1 Straightening Hair".
2. **Curl/Wave:** Take a section of hair. Clamp the straightener near the roots. Rotate the straightener 180 degrees away from your face, then slowly pull it down through the hair section. The speed of pulling will affect the tightness of the curl/wave.
3. **Release:** Release the hair and allow the curl to cool before touching it to set the style.
4. Repeat for all sections.
5. Follow steps 7-8 from "4.1 Straightening Hair" for powering off and cooling.

Your browser does not support the video tag.

Video: Demonstration of using the Corioliss C-Style to achieve both wavy and straight hair looks, showcasing its versatility.

PRACTICAL AND EASY TO HANDLE



**SILICONE PROTECTOR
INCLUDED**



**360° ROTATING
CABLE**

Image: A visual comparison of wavy hair on one side and straight hair on the other, demonstrating the styling capabilities of the Corioliss C Style straightener.

5. MAINTENANCE AND CARE

- **Cleaning:** Ensure the straightener is unplugged and completely cool before cleaning. Wipe the plates and exterior with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- **Storage:** Store the cooled straightener in a dry place, away from moisture. Use the included silicone protector for the plates to prevent damage during storage or travel.
- **Cord Care:** Do not wrap the power cord tightly around the appliance, as this can damage the cord. Store the cord loosely.



DISAPPEARS STATIC
ELECTRICITY FROM
THE HAIR LEAVING IT
**SOFT, SILKY
AND SHINY.**

Image: The Corioliss C Style Hair Straightener showing its practical design and the included silicone protector for safe handling and storage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Straightener does not turn on.	Not plugged in correctly, power outlet issue, or internal fault.	Ensure the plug is fully inserted. Test the outlet with another appliance. If still not working, contact customer support.
Straightener is not heating up.	Power button not pressed long enough, or internal heating element issue.	Press and hold the power button until the indicator light turns on. Allow 30 seconds for heating. If problem persists, contact customer support.

Problem	Possible Cause	Solution
Hair is not straightening effectively.	Hair is damp, sections are too large, or temperature setting is too low.	Ensure hair is completely dry. Use smaller sections of hair. Increase the temperature setting if appropriate for your hair type.
Hair feels static after styling.	Environmental factors or product usage.	The negative ion technology should help reduce static. Ensure hair is fully dry. Consider using an anti-static hair product.

7. SPECIFICATIONS

Feature	Detail
Model Name	C Style
Item Model Number	C-STYLE
Brand	Corioliss
Plate Material	Titanium
Max Temperature Setting	220°C (428°F)
Min Temperature Setting	60°C (140°F)
Heat-up Time	Approx. 30 seconds
Plate Dimensions	2.4 x 9 cm (0.94 x 3.54 inches)
Product Dimensions	9.84 x 1.18 x 1.18 inches
Item Weight	2.16 Pounds
Power Source	Corded Electric (American Plug)
Hair Type Compatibility	All hair types (dry)
Special Features	Negative Ion Technology, 360° Swivel Cord, Ergonomic Rounded Housing, Soft Touch Finish, Tilting Polished Titanium Plates

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Corioliss website. Keep your purchase receipt as proof of purchase for any warranty claims.

Manufacturer: Corioliss

Contact: Please visit [Corioliss Store on Amazon](#) for more information or to contact customer service.

© 2026 Corioliss. All rights reserved.