

## TISHLED B0B6CW1YY6

# TISHLED Wireless Typewriter Style Bluetooth Keyboard User Manual

Model: B0B6CW1YY6

## 1. PRODUCT OVERVIEW

---

The TISHLED Wireless Typewriter Style Bluetooth Keyboard combines a retro aesthetic with modern functionality. It features Bluetooth 5.0 connectivity, allowing connection to up to three devices simultaneously. The keyboard is equipped with 86 round keys designed to provide a mechanical typing feel. An integrated stand accommodates tablets and smartphones, enhancing usability across various devices and operating systems.



Front view of the TISHLED Wireless Typewriter Style Bluetooth Keyboard, showcasing its retro design and round keycaps.

## 2. SETUP INSTRUCTIONS

---

### 2.1 Package Contents

- TISHLED Wireless Typewriter Style Bluetooth Keyboard
- USB Cable (for charging/power, if applicable)

### 2.2 Powering On/Off

Locate the power switch on the keyboard. Slide the switch to the 'ON' position to power on the device. Slide it to the 'OFF' position to power off.

### 2.3 Bluetooth Pairing

1. Ensure the keyboard is powered on.
2. Press and hold the **Fn** key simultaneously with one of the Bluetooth channel keys **Fn+1**, **Fn+2**, or **Fn+3** for 3-5 seconds until the corresponding indicator light flashes rapidly. This indicates the keyboard is in pairing mode.
3. On your device (PC, laptop, smartphone, tablet), navigate to the Bluetooth settings.

4. Search for available Bluetooth devices. The keyboard should appear as 'TISHLED Keyboard' or similar.
5. Select the keyboard to initiate pairing. If prompted, enter the displayed code on the keyboard and press **Enter**.
6. Once paired, the indicator light will stop flashing and remain solid for a few seconds, then turn off. The keyboard is now connected.

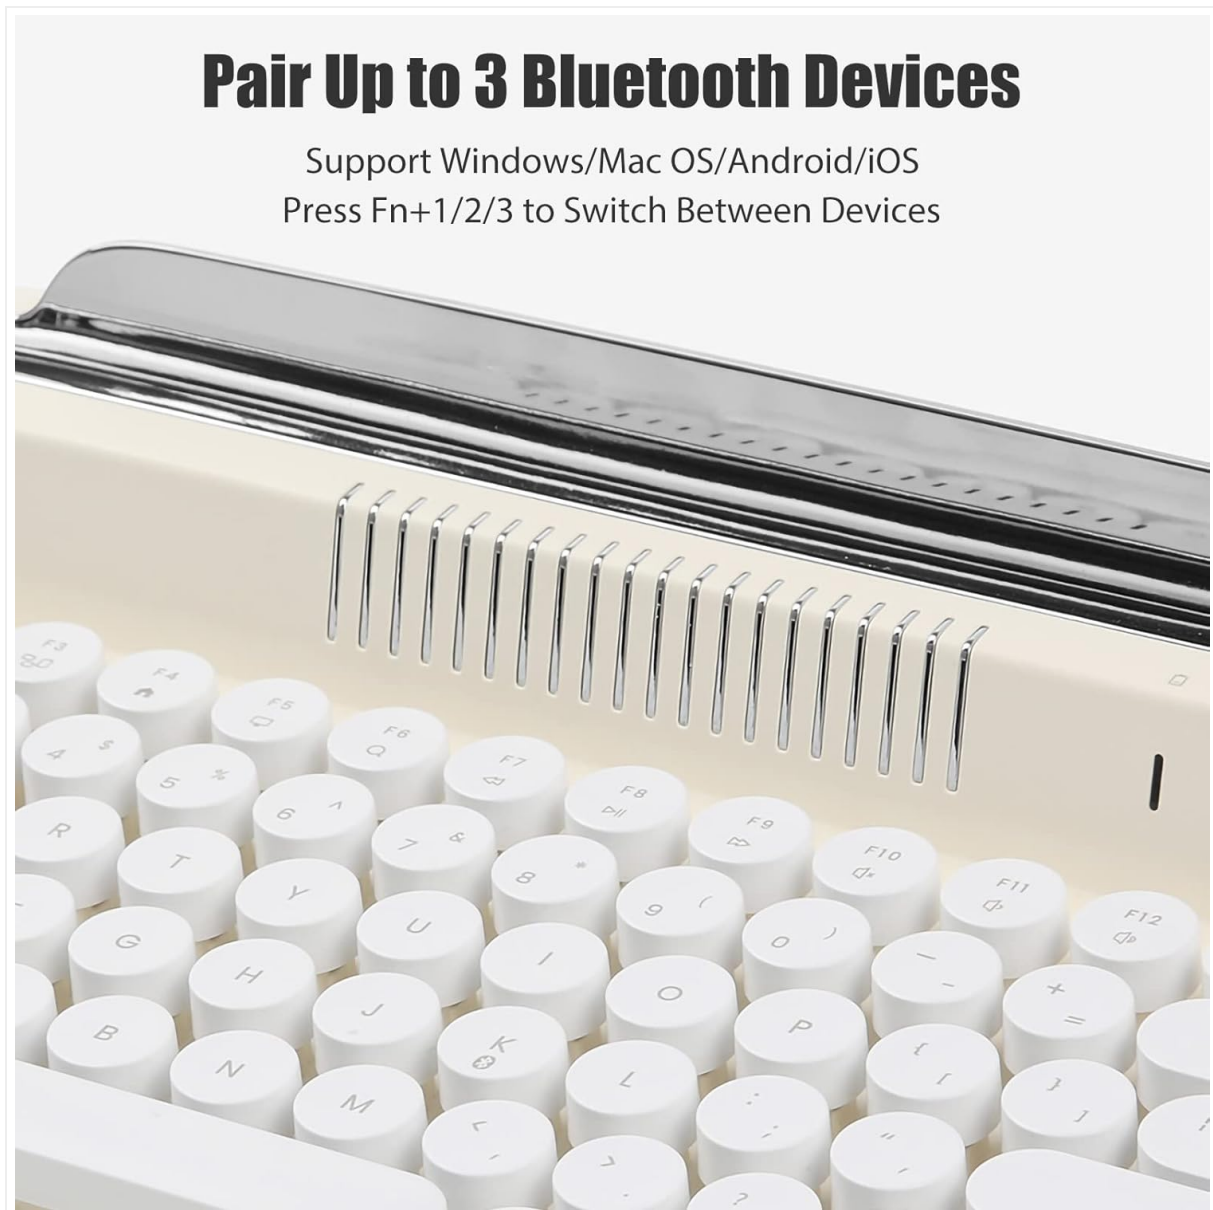


Image illustrating the Fn keys (Fn+1/2/3) used for switching between paired Bluetooth devices.

### 3. OPERATING INSTRUCTIONS

---

#### 3.1 Switching Between Devices

After pairing with multiple devices (up to 3), you can switch between them by pressing **Fn+1**, **Fn+2**, or **Fn+3**. The keyboard will automatically connect to the last paired device on the selected channel.

#### 3.2 Using the Integrated Stand

The keyboard features an integrated stand designed to hold tablets and smartphones. The stand is approximately 12 inches long and 1.5 cm wide. Simply place your device into the slot for convenient viewing while typing.



The keyboard with a tablet securely placed in its integrated stand, ready for use.

### 3.3 Adjustable Feet

The keyboard includes adjustable button feet located on the underside. Rotate these buttons to raise the keyboard to an elevated angle, which can help reduce wrist strain during extended typing sessions.



Detail of the keyboard's adjustable button feet, which allow for an ergonomic typing angle.

### 3.4 System Compatibility

The keyboard is compatible with the following operating systems:

- Windows

- Mac OS
- Android
- iOS

No additional software drivers are required for operation.

## 4. MAINTENANCE

---

### 4.1 Cleaning

To clean the keyboard, power it off and disconnect any cables. Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution. Avoid excessive moisture and do not spray cleaners directly onto the keyboard. For cleaning between keycaps, use compressed air or a small brush.

### 4.2 Storage

Store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, ensure the keyboard is powered off.

## 5. TROUBLESHOOTING

---

### 5.1 Keyboard Not Connecting via Bluetooth

- Ensure the keyboard is powered on and fully charged.
- Verify that Bluetooth is enabled on your device.
- Place the keyboard within 10 meters (33 feet) of your device.
- Re-enter pairing mode on the keyboard (Fn+1/2/3 for 3-5 seconds) and attempt to pair again.
- If previously paired, try removing the keyboard from your device's Bluetooth list and re-pairing.
- Test with another device to rule out an issue with the original device's Bluetooth.

### 5.2 Keys Not Responding

- Check if the keyboard is connected to your device.
- Ensure the keyboard is powered on and has sufficient battery.
- Restart the keyboard and your connected device.
- Clean any debris that might be under the keycaps using compressed air.

### 5.3 Lag or Delay in Typing

- Ensure there are no obstructions between the keyboard and your device.
- Move closer to your device to reduce the distance.
- Minimize other active Bluetooth devices in the vicinity that might cause interference.
- Ensure your device's Bluetooth drivers are up to date.

## 6. SPECIFICATIONS

---

<b>Brand</b>	TISHLED
<b>Model</b>	B0B6CW1YY6

<b>Connectivity Technology</b>	Bluetooth 5.0
<b>Number of Keys</b>	86
<b>Key Type</b>	Round, Mechanical Feel
<b>Compatible Devices</b>	PC, Laptop, Smartphone, Tablet
<b>Operating Systems</b>	Windows, Mac OS, Android, iOS
<b>Special Features</b>	Integrated Stand, Adjustable Button Feet
<b>Color</b>	Ivory
<b>Material</b>	Acrylonitrile Butadiene Styrene (ABS)
<b>Included Components</b>	USB Cable



Dimensional diagram of the keyboard, indicating its length, width, and height.

## 7. WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the documentation included with your purchase or contact TISHLED customer service directly. Details may vary by region and retailer.