

[Manuals.plus](#) /

› [HearthSong](#) /

› [HearthSong 50 Inch Pretend Play Fabric Kitchen Playhouse Tent User Manual](#)

HearthSong 733895

HearthSong 50 Inch Pretend Play Fabric Kitchen Playhouse Tent User Manual

Model: 733895

Brand: HearthSong

PRODUCT OVERVIEW

Step into a world of culinary wonders where imagination takes center stage and adventure is always on the menu! The HearthSong 50-Inch Kitchen Playhouse Tent is a haven of make-believe, designed to transport little ones straight to the heart of a bustling kitchen. Its sturdy and spacious design ensures plenty of room for multiple children to engage in imaginative play.



Image: The HearthSong 50-Inch Kitchen Playhouse Tent, showcasing its spacious interior with two children engaged in pretend play. The tent features printed kitchen details on the back wall.

Key Features

- **Culinary Creativity:** This playset invites children to embark on a delightful journey where they transform into master chefs, delighted customers, or hosts.
- **Spacious Design:** The 44"L x 44"W x 50"H playhouse tent offers ample space for children to move around and play comfortably, encouraging social interaction and cooperative play.
- **Easy Assembly:** Features a simple pop-up design for quick assembly and hassle-free storage, allowing for easy transport and enjoyment in various locations.
- **Interactive Kitchen Graphics:** Kitchen-themed graphics and interactive fabric appliances inside create a captivating environment for pretend cooking scenarios.
- **Social Skill Development:** Children can take on various roles, fostering communication, negotiation, and sharing responsibilities, which helps develop valuable social skills.



Image: Detailed view of the playhouse tent's interior, pointing out key features such as tie-back doors, a colorful chevron-patterned floor, a shelf designed for light objects, and removable appliance doors that open to reveal storage space.

SETUP

The HearthSong Kitchen Playhouse Tent is designed for quick and easy assembly. Follow these general steps to set up your playhouse:

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all poles, fabric sections, and connectors are present.
2. **Assemble Frame:** Connect the tent poles according to the included instructions (not provided in detail here, but typically involves connecting sections to form the tent's frame).
3. **Attach Fabric:** Drape the fabric tent over the assembled frame, ensuring it is properly aligned and secured at all attachment points.

4. **Secure Base:** Ensure the base of the tent is flat and stable on the floor.
5. **Position Appliances:** The tent features printed kitchen appliances. The appliance doors are removable with hook and loop tape.
6. **Check Stability:** Once assembled, gently shake the tent to ensure it is stable and secure for play.



Image: The playhouse tent with its overall dimensions indicated, showing its length, width, and height for proper space planning.

OPERATING

The Kitchen Playhouse Tent provides an immersive environment for imaginative play. Children can interact with various features to enhance their pretend cooking and role-playing experiences.

- **Pretend Cooking:** Utilize the printed stove, sink, and counter areas for preparing imaginary meals.
- **Storage Space:** The appliance doors are removable with hook and loop tape, revealing storage space inside for play food, cookware, or other small toys (cookware and food accessories sold separately).

- **Shelf for Light Objects:** A shelf on the back wall can hold light objects, such as pretend dishes or small kitchen tools.
- **Open Windows:** The tent features open windows, allowing for peek-a-boo play and interaction with others outside the tent.
- **Tie-Back Doors:** The front flaps can be tied back to keep the entrance open, or left down for a more enclosed play space.



Image: A close-up of the tent's interior, demonstrating how the appliance doors can be removed using hook and loop tape to access the hidden storage compartments.

Product Video

Your browser does not support the video tag.

Video: An official product video from HearthSong demonstrating the features and play possibilities of the 50-Inch Kitchen Playhouse Tent, showing children interacting with the tent's various elements.

MAINTENANCE

To ensure the longevity and cleanliness of your HearthSong Kitchen Playhouse Tent, follow these maintenance guidelines:

- **Cleaning:** Spot clean the fabric with a damp cloth and mild soap. Do not machine wash or tumble dry, as this may damage the fabric or structural integrity.
- **Drying:** Allow the tent to air dry completely before folding and storing to prevent mold or mildew.
- **Storage:** When not in use, disassemble the tent and store it in a cool, dry place away from direct sunlight. Keep it in its original packaging or a suitable storage bag to protect it from dust and damage.
- **Inspection:** Periodically inspect the tent for any signs of wear and tear, such as torn fabric, bent poles, or loose stitching. Address any issues promptly to maintain safety and functionality.

TROUBLESHOOTING

If you encounter any issues with your HearthSong Kitchen Playhouse Tent, consider the following common solutions:

- **Tent Instability:**
 - Ensure all poles are fully connected and seated properly in their connectors.
 - Verify that the fabric is taut and evenly distributed over the frame.
 - Place the tent on a flat, even surface.
- **Difficulty Folding/Disassembling:**
 - Refer to the assembly instructions in reverse order.
 - Ensure all fabric is clear of pole joints before attempting to collapse the frame.
- **Damaged Components:**
 - If any parts are broken or missing, contact HearthSong customer support for assistance. Do not attempt to use the tent with damaged components.

SPECIFICATIONS

Attribute	Detail
Product Dimensions	44 x 44 x 50 inches
Item Weight	6.8 pounds
ASIN	B0B6CY7PLQ
Item Model Number	733895
Manufacturer Recommended Age	3 years and up
Manufacturer	HearthSong

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact HearthSong customer service directly. Refer to the contact information provided with your product packaging or visit the official HearthSong website.

Website: [HearthSong Official Store](#)

© 2023 HearthSong. All rights reserved.