Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- KitchenCore /
- > AUMATE Kitchencore 32 Quart Air Fryer Oven User Manual

KitchenCore Kitchencore Air Fryer Oven

AUMATE Kitchencore 32 Quart Air Fryer Oven User Manual

Model: Kitchencore Air Fryer Oven

INTRODUCTION

Congratulations on your purchase of the AUMATE Kitchencore 32 Quart Air Fryer Oven. This versatile appliance combines the functions of an air fryer, convection toaster oven, and more, offering 19-in-1 cooking programs. Designed for efficiency and healthy cooking, it utilizes 360° air convection technology for even results with less oil. This manual provides essential information for safe and effective operation, maintenance, and troubleshooting.



SAFETY INSTRUCTIONS

Before operating the appliance, please read all safety instructions carefully to prevent personal injury or property damage.

- Always place the oven on a stable, heat-resistant surface.
- Ensure adequate ventilation around the appliance. Do not block air vents.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep children and pets away from the appliance during operation.
- Use oven mitts when handling hot surfaces or accessories.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not operate the appliance with a damaged cord or plug.
- Only use accessories recommended by the manufacturer.

SETUP

Unpacking and Initial Inspection

- 1. Carefully remove the air fryer oven and all accessories from the packaging.
- 2. Inspect the appliance for any signs of damage. Do not use if damaged.
- 3. Remove all packing materials, stickers, and labels.

Included Accessories

Your AUMATE Kitchencore Air Fryer Oven comes with the following accessories:

- Oven Rack (13.78" x 11.42")
- Rotating Cage (Dia 1.78" x 7.09")
- Crumb Tray (14.17" x 12.20")
- Baking Pan (14.17" x 12.60")
- Air Fryer Basket (13.78" x 11.81")
- Rotisserie Fork (13.58" x 1.97")
- Rotisserie Handle (11.81" x 9.06")

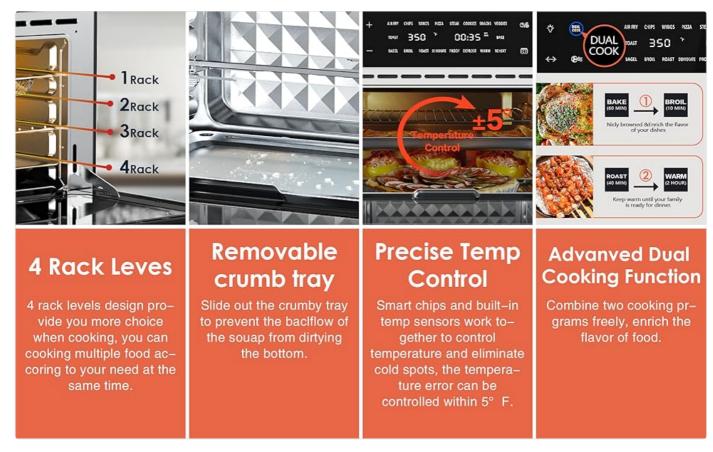


Image: Visual representation of all included accessories: Oven Rack, Rotating Cage, Crumb Tray, Baking Pan, Air Fryer Basket, Rotisserie Fork, and Rotisserie Handle.

Placement and Initial Cleaning

- 1. Place the oven on a flat, stable, heat-resistant surface, ensuring at least 6 inches of clearance on all sides and above for proper ventilation.
- 2. Wipe the exterior of the oven with a damp cloth.
- 3. Wash all accessories (oven rack, rotating cage, crumb tray, baking pan, air fryer basket, rotisserie fork, rotisserie handle) with warm, soapy water. Rinse thoroughly and dry completely.
- 4. Before first use, it is recommended to run the oven empty for about 15 minutes at 400°F (200°C) to burn off any manufacturing residues. A slight odor may be present, which is normal. Ensure the area is well-ventilated.













6 Slices of Toast




32 Quart Large Capacity Cook More Food, Save More Counterspace

Image: The 32 Quart Air Fryer Oven with measurements (16.9 inch depth, 18 inch width, 14.4 inch height) and examples of food capacity, including a 13-inch pizza, 5 lbs roast chicken, 31 chicken wings, and 6 slices of toast.

OPERATING INSTRUCTIONS

Control Panel Overview

The digital control panel allows for easy selection of cooking functions, temperature, and time.

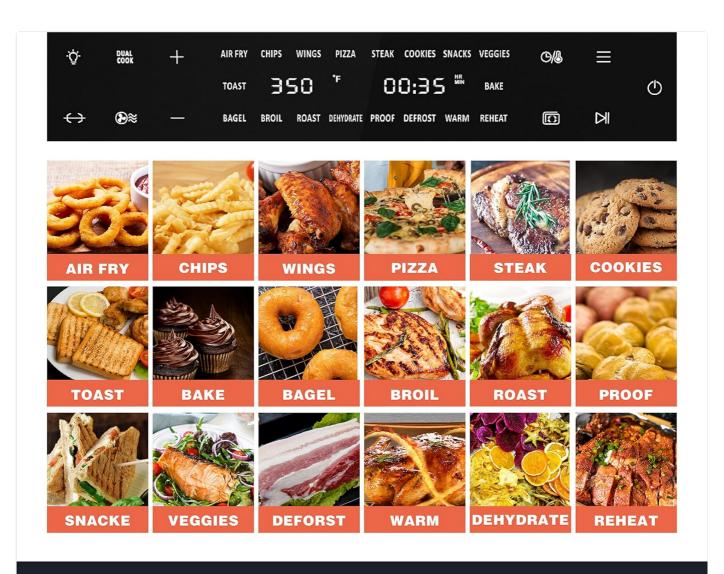

18-in-1 Limitless Meal Options

Image: Close-up of the oven's digital control panel displaying various preset functions like Air Fry, Chips, Wings, Pizza, Steak, Cookies, Veggies, Toast, Bagel, Broil, Roast, Dehydrate, Proof, Defrost, Warm, and Reheat.

- Function Selection: Use the dedicated buttons or dial to cycle through the 19 preset cooking functions.
- **Temperature Adjustment:** Use the temperature controls to set the desired cooking temperature. The oven features precise temperature control within 5°F.
- Time Adjustment: Use the time controls to set the cooking duration.
- Start/Pause: Initiates or pauses the cooking cycle.
- Light Button: Activates the interior oven light.
- Dual Cook: Allows combining two cooking functions sequentially.

Cooking Functions


The AUMATE Kitchencore Air Fryer Oven offers 19 versatile cooking functions:

- Air Fry: Ideal for crispy foods with little to no oil, utilizing 360° air convection.
- Bake: For traditional baking of cakes, cookies, and casseroles.
- Roast: Perfect for meats and vegetables, ensuring even cooking.
- Broil: For quick browning and searing.

- Toast: For bread, bagels, and pastries.
- Dehydrate: For drying fruits, vegetables, and making jerky.
- Rotisserie: For roasting whole chickens or other large cuts of meat using the rotisserie fork.
- Defrost: Gently thaws frozen foods.
- Warm: Keeps cooked food warm until ready to serve.
- Proof: Provides a warm environment for dough to rise.
- **Dual Cook:** This innovative function allows you to program two consecutive cooking stages. For example, you can set it to Bake for 60 minutes, then automatically switch to Broil for 10 minutes to achieve a nicely browned finish. Or, Roast for 40 minutes, then Warm for 2 hours.



Image: A composite image detailing key features: 4 Rack Levels for versatile cooking, a Removable Crumb Tray for easy cleaning, Precise Temp Control with smart chips, and the Advanced Dual Cooking Function illustrated with Bake-Broil and Roast-Warm examples.

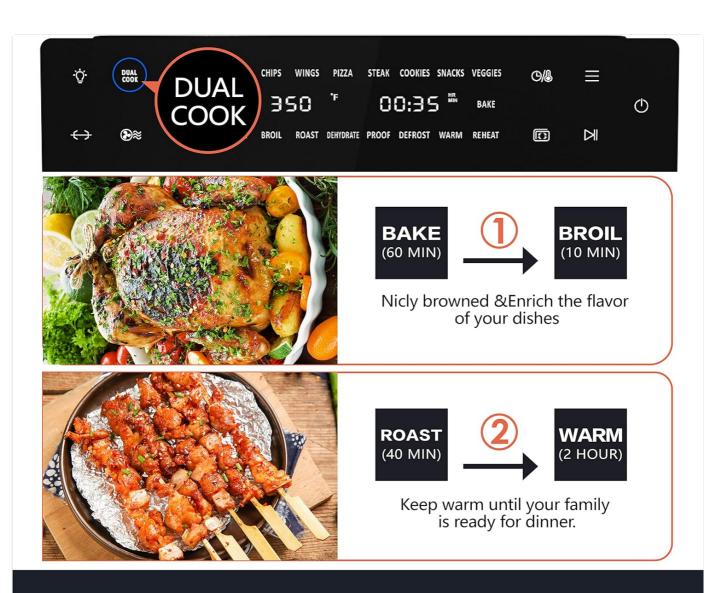

Innovative Dual Cook Auto Switch to the Second Mode

Image: Illustration of the Innovative Dual Cook function, showing examples like baking for 60 minutes followed by broiling for 10 minutes, or roasting for 40 minutes followed by warming for 2 hours.

General Operation Steps

- 1. Place food in the appropriate accessory (baking pan, air fryer basket, etc.) and insert into the desired rack level. The oven has 4 rack levels.
- 2. Close the oven door.
- 3. Plug the power cord into a grounded electrical outlet.
- 4. Select the desired cooking function using the control panel.
- 5. Adjust the temperature and cooking time as needed.
- 6. Press the Start button to begin cooking.
- 7. The oven will preheat if necessary, then begin the cooking cycle.
- 8. Monitor food through the double glass door. Use the interior light button for better visibility.
- 9. When cooking is complete, the oven will beep. Carefully remove food using oven mitts.
- 10. Unplug the oven after use.



powerful cook faster Even cooking & 360° Surround Airflow

Image: Comparison showing a traditional oven versus the AUMATE Air Fryer Oven, highlighting its powerful cooking and 360° surround airflow for even heating.



Image: An interior view of the oven with an overlay indicating "Temperature Control ±5°F", demonstrating the precise temperature regulation.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliance. Always unplug the oven and allow it to cool completely before cleaning.

Cleaning the Interior

- Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, a non-abrasive cleaner designed for oven interiors can be used.
- The removable crumb tray should be emptied and cleaned after each use to prevent grease buildup and potential fire hazards
- Do not use abrasive cleaners, scouring pads, or metal utensils on the interior surfaces as they can damage the non-stick coating.

Cleaning the Exterior

- Wipe the exterior with a soft, damp cloth. Dry thoroughly.
- Do not use abrasive cleaners or solvents.

Cleaning Accessories

- All accessories (oven rack, rotating cage, crumb tray, baking pan, air fryer basket, rotisserie fork, rotisserie handle) can be washed with warm, soapy water.
- For baked-on food, soak accessories in warm, soapy water before cleaning.
- Rinse thoroughly and dry completely before storing or re-using.

Storage

Ensure the oven is clean and dry before storing. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food is not cooking evenly.	Overcrowding the basket/pan; incorrect temperature/time; food not flipped/shaken.	Do not overcrowd the cooking area. Adjust temperature and time as needed. For air frying, shake or flip food halfway through cooking.
White smoke coming from the oven.	Grease buildup; fatty food.	Unplug the oven and let it cool. Clean the interior and crumb tray thoroughly. For fatty foods, use a baking pan to catch drips.
Oven makes unusual noise.	Normal fan operation; loose accessory.	A humming sound from the fan is normal. Ensure all accessories are properly seated and not rattling against the heating elements.

SPECIFICATIONS

Brand: KitchenCore

Model Name: Kitchencore Air Fryer Oven

Color: Black-32 Quart Capacity: 32 QT

Product Dimensions: 25"D x 20"W x 18"H

Item Weight: 23.9 pounds

Power Source: AC adapter (1800W)

Control Type: Knob

Door Style: Dropdown Door

Door Material Type: Stainless Steel (Double Glass Door)

Special Feature: Temperature Control (within 5°F accuracy)

Included Components: Baking Pan, Oven Rack, Rotating Cage, Crumb Tray, Air Fryer Basket, Rotisserie Fork, Rotisserie

Handle



Image: Icons representing Double Glass Door, Food Grade Material, and ETL Certification, emphasizing the product's high quality and safety standards.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or contact AUMATE Kitchencore customer service directly.

AUMATE Kitchencore is committed to providing high-quality products and excellent customer service. If you encounter any issues or have questions regarding your air fryer oven, please reach out to their support team for assistance.

© 2024 KitchenCore. All rights reserved.

Related Documents - Kitchencore Air Fryer Oven



AUMATE TO5712A-UL Air Fryer Toaster Oven Instruction Manual

Comprehensive instruction manual for the AUMATE TO5712A-UL Air Fryer Toaster Oven, covering safety precautions, specifications, operation, cleaning, and troubleshooting.



 
Instant Omni Plus Toaster Oven: Get Started Guide

A comprehensive guide to getting started with your Instant Omni Plus toaster oven, covering important safeguards, initial setup, control panel functions, cooking modes, and care instructions.



Instant Vortex Plus 10 Quart Air Fryer Oven User Manual

Comprehensive user manual for the Instant Vortex Plus 10 Quart Air Fryer Oven, covering important safeguards, product specifications, setup, operation of smart programs, rotisserie cooking, cooking timetable, care and cleaning, troubleshooting, and warranty information.

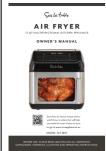

Sur la table 13-Quart Multifunctional Air Fryer Oven Owner's Manual

Owner's manual for the Sur la table 13-Quart Multifunctional Air Fryer Oven (Model SLT-1807), detailing its features, accessories, important safety precautions, operating instructions, cooking charts, cleaning, maintenance, and troubleshooting tips.



Instant Vortex Plus 10 Quart Air Fryer Oven User Manual

Comprehensive user manual for the Instant Vortex Plus 10 Quart Air Fryer Oven, detailing setup, operation, smart programs, rotisserie use, cooking tips, care and cleaning, troubleshooting, and warranty information.



Galanz GT12SSDAN18 Toaster Oven User Manual: Operation, Safety, and Warranty

Comprehensive user manual for the Galanz GT12SSDAN18 Toaster Oven. Includes detailed safety instructions, installation guide, specifications, product diagram, control panel explanation, step-by-step operation for Toast, Air Fry, Bake, Rotisserie, Broil, Pizza, Convection, and Dehydrate functions, along with product warranty and registration information.