

[Manuals.plus](#) /

> [A-MIND](#) /

> A-MIND Samsung Galaxy E7 E700 LCD Display and Touch Digitizer Screen Replacement User Manual

## A-MIND E700

# A-MIND Samsung Galaxy E7 E700 LCD Display and Touch Digitizer Screen Replacement User Manual

Model Numbers: E700, E700H, E700F, E700M

## 1. INTRODUCTION

This manual provides essential information and instructions for the installation and testing of your A-MIND LCD Display and Touch Digitizer Screen Replacement for the Samsung Galaxy E7 series. Please read all instructions carefully before proceeding with the installation.

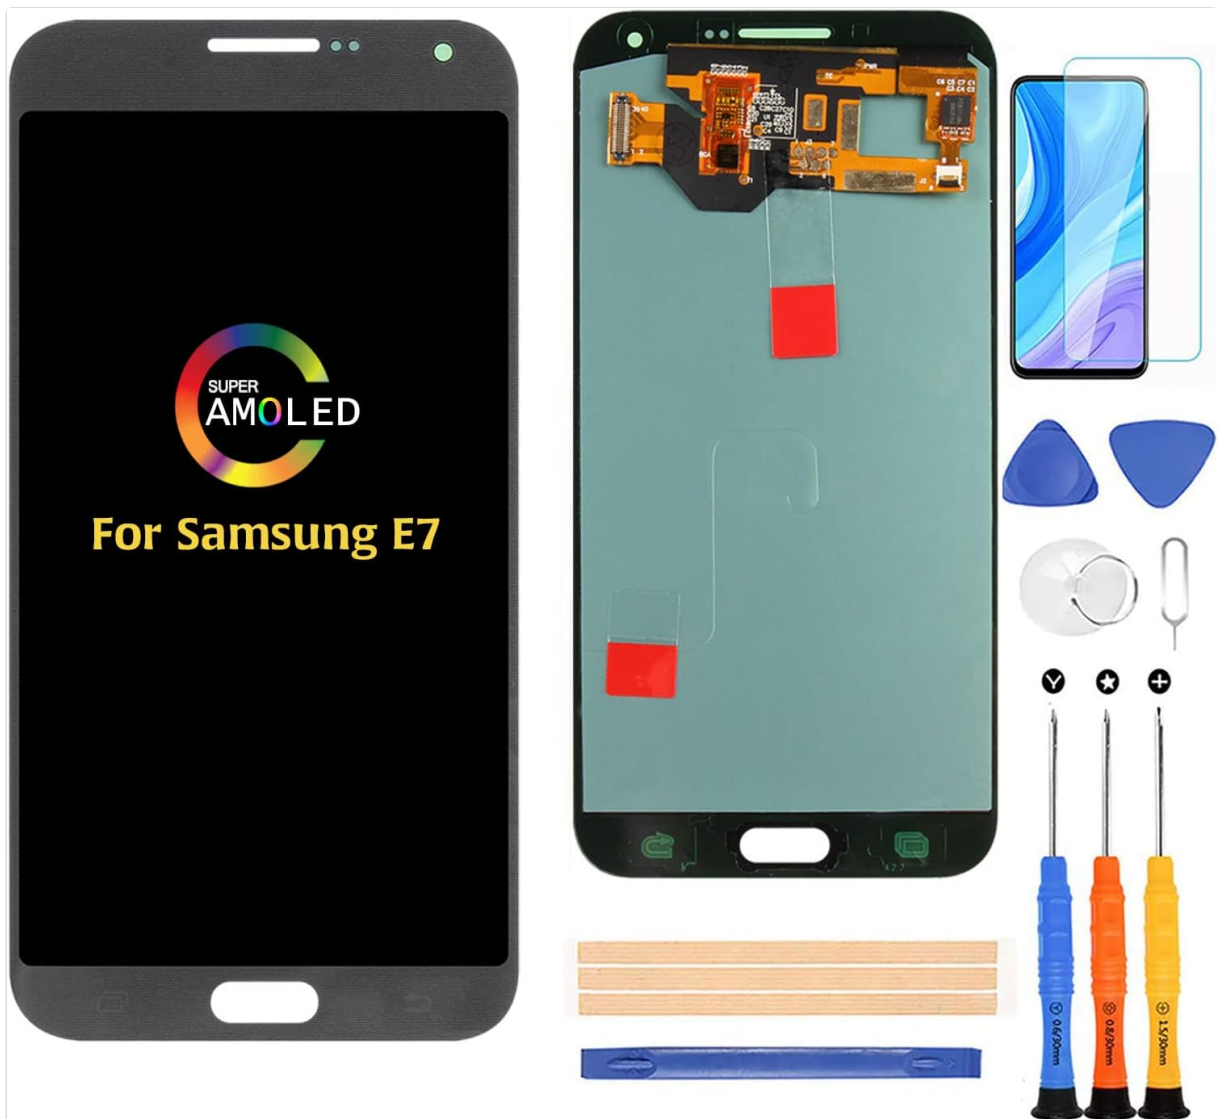


Image 1.1: Overview of the A-MIND screen replacement kit for Samsung Galaxy E7, featuring the LCD assembly and various repair tools.

## 2. COMPATIBILITY

This replacement screen is compatible with the 5.5-inch Samsung Galaxy E7 models: **E700H**, **E700F**, and **E700M**. It is designed to address issues such as broken screens, liquid crystal ruptures, dead pixels, touch unresponsiveness, display problems, and false color displays.

**Important:** Before purchase and installation, verify that your phone's malfunction is specifically caused by the LCD or the touch panel. Incorrect diagnosis may lead to unnecessary replacement.

## 3. PACKAGE CONTENTS

The package includes the following items:

- 1 x A-MIND Touch LCD Panel Assembly (Black OLED)
- 1 x Screwdriver set (various sizes)
- 1 x Pry bar
- 1 x Triangular pry piece
- 1 x Tweezer
- 1 x SIM card tray ejector pin
- 1 x Double-sided adhesive tape
- 1 x Tempered screen protection film

- 1 x Opening Card

**Note:** The included toolset is a general kit and may not be suitable for opening all phone models. Additional specialized tools may be required.



## Tempered Glass/Tools

Image 3.1: Contents of the A-MIND screen replacement kit, showing the LCD assembly, various screwdrivers, pry tools, tweezers, and a tempered glass screen protector.

### 4. IMPORTANT PRECAUTIONS AND WARNINGS

- **Professional Installation Recommended:** Installation requires specific techniques and equipment. For personal use or non-professionals, it is highly recommended to seek professional service or refer to detailed video tutorials. Damage caused during installation is not covered under warranty.
- **Fragile Component:** The LCD assembly is a fragile component. Handle with extreme care. Avoid applying excessive force or bending the flex cables. Glass fragments from a broken screen can cause injury; wear protective gloves if necessary.
- **Static Electricity:** Pay close attention to static electricity. Ground yourself using an ESD (Electrostatic Discharge) wrist strap to prevent damage to the phone's electronic components.
- **Pre-Installation Testing:** Always test the product thoroughly before full installation. Do not remove any protective films or labels until testing is complete and the screen is confirmed to be fully functional.
- **No Manual Included:** This product does not come with a printed installation manual. Refer to online video tutorials for detailed step-by-step guidance.

## 5. INSTALLATION GUIDE

---

Due to the complexity of phone disassembly and reassembly, a detailed step-by-step guide is best followed via video tutorials. We strongly recommend searching for "Samsung Galaxy E7 E700 screen replacement" on platforms like YouTube for visual instructions.

### General Steps (Refer to Video Tutorials for Details):

1. **Power Off Device:** Ensure your Samsung Galaxy E7 is completely powered off before beginning.
2. **Remove SIM Tray:** Use the ejector pin to remove the SIM card tray.
3. **Heat and Separate:** Carefully heat the edges of the screen to loosen the adhesive. Use a suction cup and pry tools to gently separate the old screen from the phone frame.
4. **Disconnect Cables:** Disconnect the battery cable connector first. Then, carefully disconnect the flex cables of the old LCD display and touch screen from the motherboard.
5. **Clean Frame:** Remove any old adhesive residue from the phone frame.
6. **Connect New Screen (for testing):** Before fully installing, connect the flex cables of the new A-MIND LCD assembly to the motherboard. **Do not apply new adhesive or fully secure the screen yet.**
7. **Perform Test:** Proceed to Section 6 for detailed testing procedures.
8. **Final Installation:** If the new screen functions correctly, disconnect the battery, then the screen flex cables. Apply new double-sided adhesive tape to the frame, carefully align and secure the new screen, reconnect all cables, and reassemble the phone.

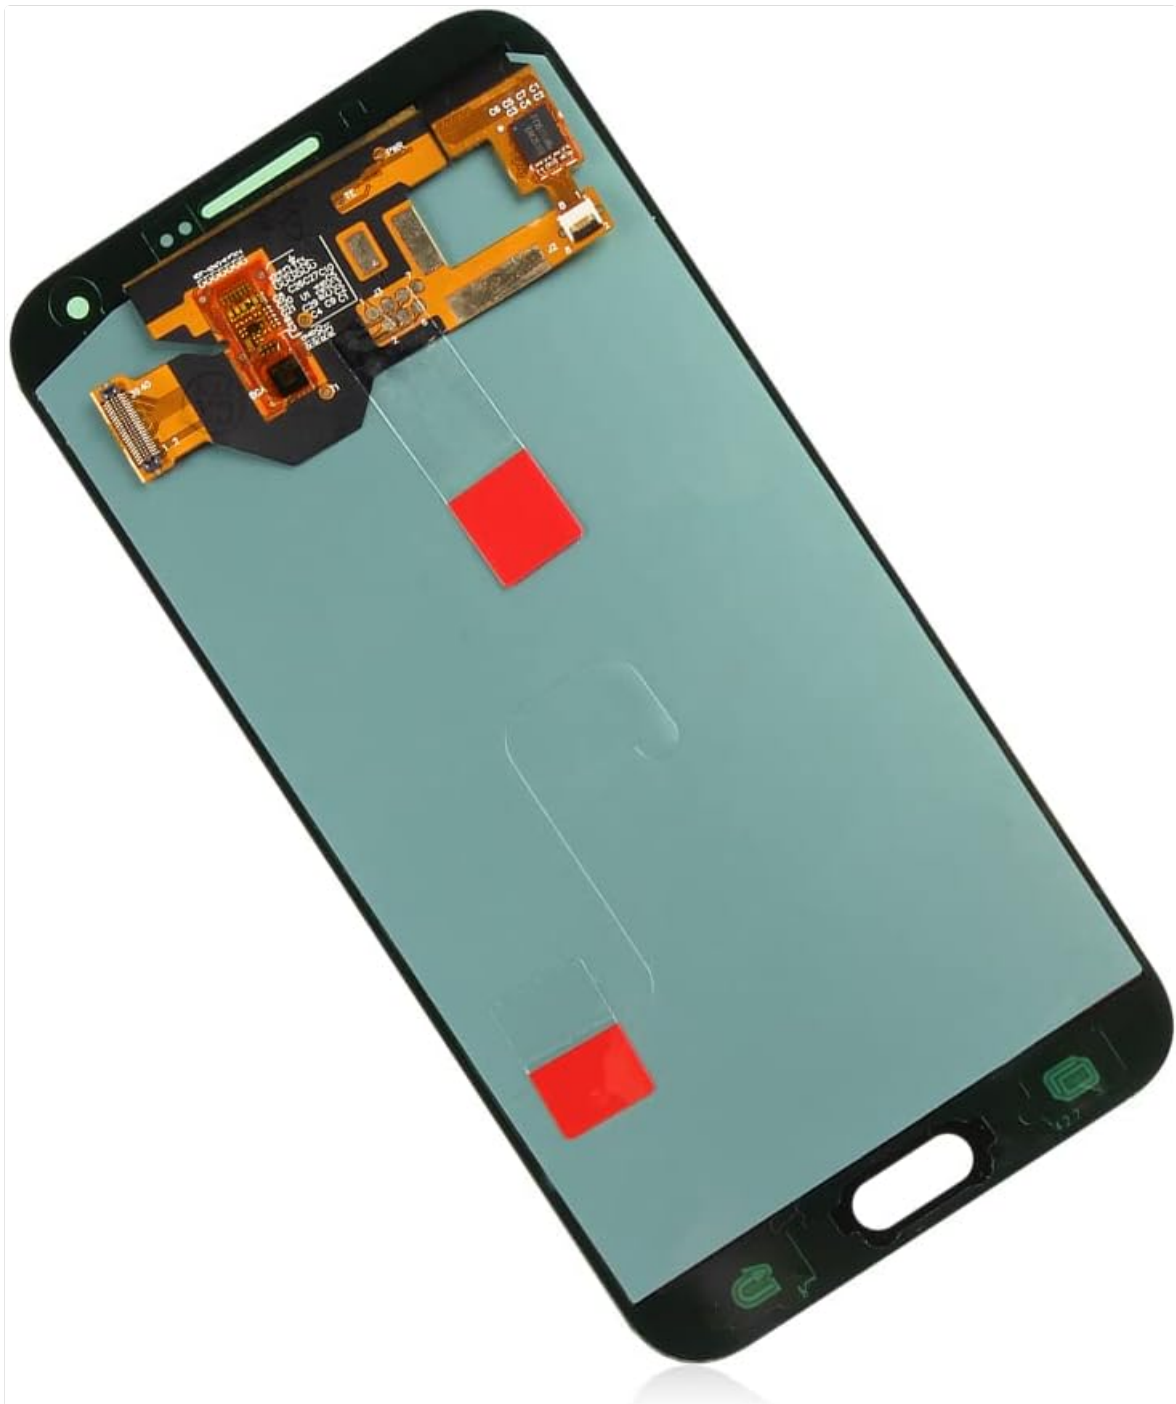


Image 5.1: Rear view of the replacement LCD assembly, highlighting the flex cables and connection points that attach to the phone's motherboard.

## 6. TESTING PROCEDURES (SIMULATION TEST)

It is crucial to test the new screen before final installation to ensure full functionality. Follow these steps:

1. **Preparation:** Ensure all protective films and labels remain on the new screen. Do not remove them during testing.
2. **Static Discharge:** Wear an ESD wrist strap or frequently touch a grounded metal object to discharge static electricity.
3. **Connect for Test:** With the phone disassembled and the old screen removed, connect the flex cables of the new A-MIND LCD assembly to the motherboard. Keep the battery cable disconnected initially.
4. **Power On:** Reconnect the battery cable. Then, connect a charging cable to the phone to power it on.
5. **Functionality Check:**
  - **Display Test:** Check for any dead pixels, lines, discoloration, or abnormal display patterns.

- **Touch Test:** Verify touch responsiveness across the entire screen. Drag an icon around the screen to ensure there are no dead spots.
  - **Brightness Adjustment:** Test the screen's brightness adjustment.
6. **Troubleshooting During Test:** If any abnormalities are observed (e.g., display issues, unresponsive touch), immediately power off the phone, disconnect the battery, and re-check all flex cable connections. If the issue persists, contact customer support with video or photo evidence. **Do not proceed with full installation if the screen is not functioning correctly.**



Image 6.1: The A-MIND replacement screen displaying its key specifications, which can be used to verify display functionality during testing.

## 7. TROUBLESHOOTING COMMON ISSUES

- **Screen Not Turning On:**

- Ensure all flex cables are securely connected to the motherboard.
  - Check if the battery is charged or try connecting the charger.
  - Verify the battery connector is properly seated.
- **Touch Not Responding:**
    - Re-seat the touch digitizer flex cable.
    - Ensure no debris is obstructing the connection points.
    - Perform a hard reset of the phone (if possible).
- **Lines or Discoloration on Display:**
    - Check the LCD flex cable for any damage or improper connection.
    - Ensure no pressure is being applied to the screen from the frame or internal components.
- **Screen Flickering:**
    - Verify all connections are firm.
    - This could indicate a faulty screen or an issue with the phone's motherboard.

If troubleshooting steps do not resolve the issue, please contact A-MIND customer service for further assistance.

## 8. SPECIFICATIONS

<b>Brand</b>	A-MIND
<b>Model Compatibility</b>	Samsung Galaxy E7 (E700, E700H, E700F, E700M)
<b>Display Type</b>	OLED
<b>Screen Size</b>	5.5 inches
<b>Color</b>	Black
<b>Manufacturer</b>	A-MIND

## 9. WARRANTY AND SUPPORT

A-MIND offers a **3-month free replacement or refund** for non-human product damage or manufacturing faults. This warranty does not cover damages or malfunctions caused by incorrect installation work.

**Upon Receipt:** If the product is broken, damaged, or missing items upon receipt, **do not install it**. Please take photos and email our service team immediately for assistance.

For any questions or further assistance, please contact A-MIND customer service. Provide video or photo evidence if reporting an issue.