

[Manuals.plus](#) /

- › [Escape](#) /
- › Escape P6 Air Portable Outdoor Speaker User Manual

Escape P6AIRWHITE

Escape P6 Air Portable Outdoor Speaker User Manual

Model: P6AIRWHITE

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Escape P6 Air Portable Outdoor Speaker. The Escape P6 Air is a high-performance portable wireless speaker designed for both indoor and outdoor use, offering exceptional sound quality and versatile connectivity options.





Image: The Escape P6 Air Portable Outdoor Speaker, showcasing its elegant white design.



Image: A lineup of three Escape P6 Air speakers in dark, tan, and white finishes, demonstrating the available color options.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Escape P6 Air Portable Outdoor Speaker

- Power Adapter (for charging)
- User Manual (this document)

SETUP

1. Initial Charging

Before first use, fully charge the speaker. Connect the provided power adapter to the speaker's charging port and plug it into a power outlet. The charging indicator will show the charging status.



Lange Akkuleistung

Ein leistungsstarker Akku sorgt für bis zu 16 Stunden kabellosen Hörerlebnis – schnell und einfach wieder aufgeladen.

Image: A person carrying the Escape P6 Air speaker, highlighting its portability and long battery life of up to 16 hours.

2. Powering On/Off

Press and hold the power button located on the top panel of the speaker to turn it on or off.

3. Bluetooth Pairing

1. Turn on the Escape P6 Air speaker.
2. Activate Bluetooth on your source device (smartphone, tablet, etc.).
3. On your source device, search for available Bluetooth devices and select "Escape P6 Air" from the list.
4. Once connected, the speaker will indicate successful pairing.

4. Wi-Fi Network Integration (for Multi-Room Audio)

For multi-room audio streaming via AirPlay 2, Chromecast built-in, or Roon, connect the speaker to your Wi-Fi network using the Escape Control App (available for iOS and Android). Follow the in-app instructions for network setup.



Multiroom und eine einfache Bedienung

Neben Bluetooth können Sie durch die Einbindung in ein bestehendes Netzwerk raumübergreifendes WLAN-Streaming (Airplay, Google Cast, Roon) nutzen. So können Sie Ihre Playlist zeitgleich auf weiteren kompatiblen Musiksyste-men laufen lassen. Komfortable Bedienung am Gerät oder via Remote-App.

Image: Close-up of the Escape P6 Air's top panel, illustrating its controls and emphasizing its multi-room and easy operation features via Wi-Fi streaming (AirPlay, Google Cast, Roon) and remote app control.

OPERATING INSTRUCTIONS

Audio Playback

- **Bluetooth:** Stream audio directly from your paired device.
- **Wi-Fi Streaming:** Utilize AirPlay 2, Chromecast built-in, or Spotify Connect for high-quality audio streaming over your home network.
- **Multi-Room Audio:** Integrate the P6 Air with other compatible speakers on your Wi-Fi network for synchronized playback across multiple rooms.

Controls

The top panel of the speaker features intuitive controls:

- **Power Button:** Press and hold to turn on/off.
- **Volume Up/Down:** Adjust playback volume.
- **Play/Pause:** Control audio playback.
- **Source Selection:** Switch between input sources (Bluetooth, Wi-Fi).
- **Radio Presets:** Use the three dedicated buttons to save and recall your favorite Airable radio stations.



Einzigartiger 360-Grad Sound

Raumfüllender Klang aus jeder Richtung – dank fortschrittlicher DSP-Technologie.

Image: The Escape P6 Air speaker positioned to demonstrate its unique 360-degree sound, powered by advanced DSP

MAINTENANCE

Cleaning

To clean the speaker, use a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used. Avoid abrasive cleaners or solvents.

Weather Resistance

The Escape P6 Air is IPX4-rated for water resistance, meaning it is protected against splashing water from any direction. It is suitable for outdoor use in various weather conditions, but it should not be submerged in water.



Wetterbeständig (IPX4)

Auf der Terrasse, am Pool, im Innenbereich oder unterwegs bei jedem Wetter. Der Escape P6 bringt bis zu 16 Stunden kabellosen Musikgenuss genau dorthin, wo Sie ihn haben wollen.

Image: The Escape P6 Air speaker placed outdoors near a pool, illustrating its IPX4 weatherproof design suitable for use on a terrace, by the pool, indoors, or on the go.

Storage

When not in use for extended periods, store the speaker in a cool, dry place. Ensure the battery is partially charged (around 50%) before long-term storage to preserve battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery or no power.	Charge the speaker using the provided power adapter. Ensure the power outlet is functional.
Cannot connect via Bluetooth.	Speaker not in pairing mode, or device is out of range.	Ensure the speaker is in Bluetooth pairing mode. Move your device closer to the speaker. Forget the device on your source and re-pair.
No sound or distorted sound.	Volume too low, incorrect source selected, or connection issue.	Increase volume on both the speaker and source device. Verify the correct input source is selected. Reconnect Bluetooth or Wi-Fi.
Wi-Fi streaming issues.	Weak Wi-Fi signal, incorrect network settings.	Ensure the speaker is within range of your Wi-Fi router. Check network settings via the Escape Control App. Restart your router and speaker.

SPECIFICATIONS

Feature	Detail
Model Name	P6AIRWHITE
Speaker Type	Multi Room
Audio Quality	6.5-inch subwoofer, two 3-inch full-range drivers, 360-degree sound
Power Output	60W RMS (digital amplifier with 24-bit DSP)
Connectivity	Bluetooth 5.0, Wi-Fi (AirPlay 2, Chromecast built-in, Spotify Connect, Roon)
Weather Resistance	IPX4-rated
Battery Life	Up to 16 hours (background volume), 8 hours (typical volume)
Battery Type	Lithium Iron Phosphate (LiFePo4)
Dimensions (H x W x D)	21.6" x 9.9" x 10.3" (550 mm x 200 mm x 200 mm)
Weight	16.5 lbs (7.5 kg)
Color	White



Image: An exploded view of the Escape P6 Air speaker, showing its internal components including the subwoofer and full-range drivers.

WARRANTY AND SUPPORT

Warranty Information

Please refer to the warranty card included with your product for detailed warranty terms and conditions. Keep your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting, or service inquiries, please visit the official Escape website or contact their customer support team. Contact details can typically be found on the manufacturer's website or in the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0B6FWXZM>

More documents and user manuals: <https://manuals.plus/>