

[manuals.plus](#) /

› [LogiLink](#) /

› [LogiLink ID0209 Wireless Keyboard User Manual](#)

**LogiLink ID0209**

# LogiLink ID0209 Wireless Keyboard User Manual

## 1. INTRODUCTION

This manual provides instructions for the LogiLink ID0209 Wireless Keyboard. This keyboard is designed for comfortable, precise, and quiet typing, featuring an adjustable RGB backlight and a long-lasting battery. It connects wirelessly via 2.4 GHz radio technology and is compatible with various operating systems.



Figure 1: LogiLink ID0209 Wireless Keyboard

## 2. PACKAGE CONTENTS

Please check the package for the following items:

- LogiLink ID0209 Wireless Keyboard
- USB 2.4 GHz Receiver Dongle
- USB-A to Micro USB Charging Cable
- User Manual (this document)

## 3. SETUP

### 3.1 Charging the Keyboard

Before initial use, fully charge the keyboard. Connect the supplied USB-A to Micro USB cable to the keyboard's Micro USB port (located on the side) and the other end to a USB power source (e.g., computer USB port, USB wall adapter).



Figure 2: Keyboard side view with Micro USB charging port

### 3.2 Connecting the USB Receiver Dongle

Insert the 2.4 GHz USB receiver dongle into an available USB port on your computer or compatible device. The system will automatically detect and install the necessary drivers.



Figure 3: USB 2.4 GHz Receiver Dongle

### 3.3 Powering On/Off

Locate the ON/OFF switch on the back of the keyboard. Slide the switch to the 'ON' position to power on the keyboard. Slide it to 'OFF' when not in use to conserve battery life.



Figure 4: Keyboard back with ON/OFF switch

The keyboard should automatically connect to the USB receiver once both are powered on and within range (up to 10 meters).

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Backlight Control

The keyboard features an adjustable RGB backlight with 7 colors and 3 brightness levels, including a breathing mode.

- **Changing Colors:** Press the **Fn + Light Bulb key** to cycle through the 7 available colors (green, blue, yellow, purple, cyan, white, red).
- **Adjusting Brightness:** Press the **Fn + Up Arrow key** to increase brightness and **Fn + Down Arrow key** to decrease brightness. There are 3 brightness levels.
- **Breathing Mode:** Press the **Fn + RGB Cycle key** (often depicted as a swirling icon) to activate or deactivate the breathing backlight mode.

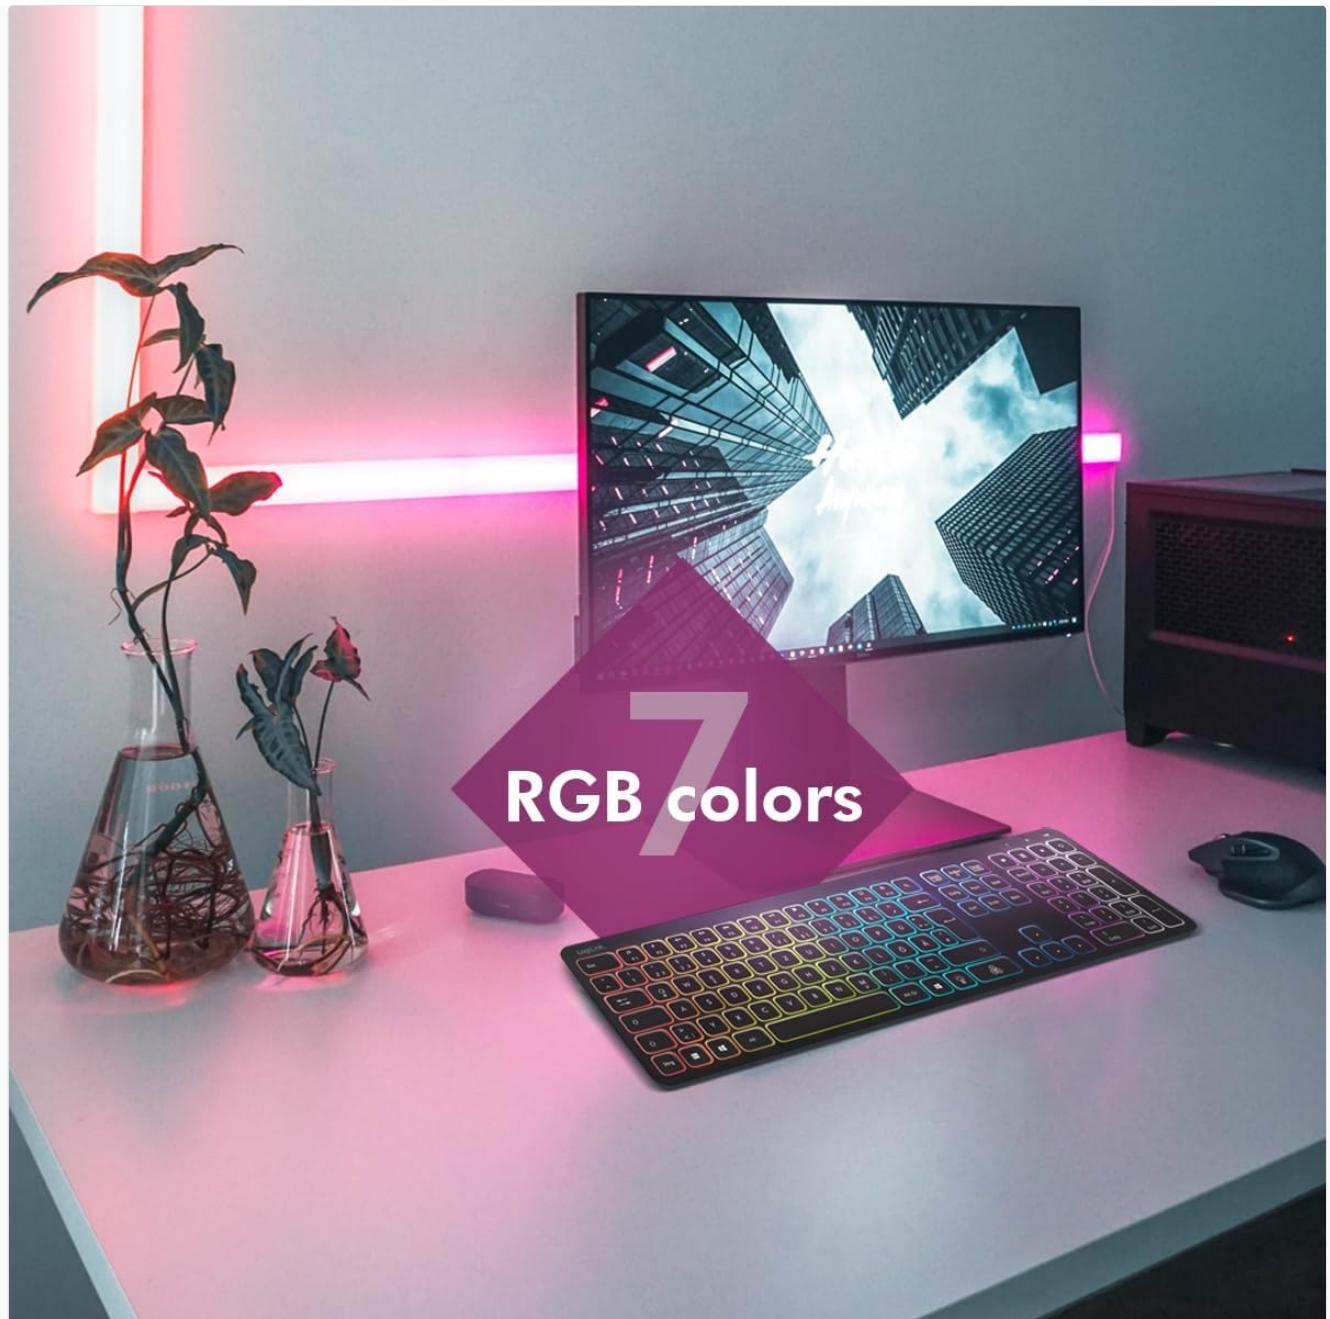


Figure 5: Keyboard with RGB backlight in use

## 4.2 Shortcut Keys

The keyboard includes 17 shortcut keys for quick access to various functions. Some shortcut keys are specifically designed for Windows operating systems.

To use a shortcut key, press and hold the **Fn** key, then press the desired function key (e.g., F1-F12, multimedia keys).

- **Multimedia Controls:** Play/Pause, Stop, Previous Track, Next Track, Volume Up, Volume Down, Mute.
- **Productivity:** Open Mail, Web Browser, My Computer, Search.
- **Other:** Lock Screen, Calculator.



Figure 6: Close-up of keyboard keys, including numpad and function row

#### 4.3 Automatic Energy-Saving Mode

The keyboard is equipped with an automatic energy-saving mode. After a period of inactivity, the keyboard will enter a sleep state to conserve battery. Press any key to wake it up.

### 5. MAINTENANCE

To ensure the longevity and optimal performance of your keyboard, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry, lint-free cloth to wipe the keyboard surface. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid excessive moisture.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Liquids:** Do not expose the keyboard to liquids. In case of accidental spills, immediately power off the keyboard and allow it to dry completely before use.
- **Handle with Care:** Avoid dropping the keyboard or subjecting it to strong impacts.

### 6. TROUBLESHOOTING

If you encounter issues with your LogiLink ID0209 keyboard, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Keyboard not responding	Keyboard is off Low battery USB receiver not connected Out of range	Ensure keyboard is ON Charge the keyboard Plug USB receiver firmly into a working USB port Move keyboard closer to the receiver (within 10m)
Backlight not working	Backlight is off Low battery	Press Fn + Light Bulb key to turn on/cycle Charge the keyboard
Keys are sticky or unresponsive	Dirt or debris under keys	Clean the keyboard as per maintenance instructions
Connection drops frequently	Interference Out of range Low battery	Move away from other wireless devices Move keyboard closer to the receiver Charge the keyboard

## 7. SPECIFICATIONS

Feature	Detail
Brand	LogiLink
Model Number	ID0209
Connectivity Technology	2.4 GHz Wireless (High-frequency)
Wireless Range	Up to 10 meters
Number of Keys	111 keys
Shortcut Keys	17 (some Windows-specific)
Backlight	Adjustable RGB (7 colors, 3 brightness levels, breathing mode)
Key Type	Flat keys
Compatible Devices	Windows, Mac OS, Android, iOS, Smart TV systems
Special Features	Ergonomic, Backlit, Automatic Energy-Saving Mode
Charging Port	Micro USB
Color	Black
Material	Plastic
Manufacturer	2direct GmbH
Country of Origin	China

## 8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official LogiLink website. Keep your proof of purchase for warranty claims.

© 2026 LogiLink. All rights reserved.