

**Manuals+**

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bissell](#) /

› [Bissell CrossWave C3 Pro Multi-Surface Wet Dry Vacuum Cleaner Instruction Manual](#)

**Bissell 3555N**

# **Bissell CrossWave C3 Pro Multi-Surface Wet Dry Vacuum Cleaner**

**MODEL: 3555N**



The Bissell CrossWave C3 Pro is a versatile 3-in-1 cleaning device designed to vacuum, wash, and dry multiple floor types simultaneously.

## IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using your appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always connect to a properly grounded outlet.
- Unplug from outlet when not in use and before cleaning or servicing.

- Do not immerse in water or liquid.
- Use only BISSELL cleaning products intended for this appliance.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not use with damaged cord or plug.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.

## PRODUCT OVERVIEW

The Bissell CrossWave C3 Pro is engineered for efficient multi-surface cleaning, combining vacuuming, washing, and drying capabilities into one device. Key features include:

- **Two-Tank Technology:** Separates clean water/formula (0.82 L) from dirty water (0.62 L) for continuous cleaning with fresh solution.
- **Multi-Surface Cleaning:** Suitable for tiles, sealed wood floors, laminates, and rugs.
- **Automatic Self-Cleaning:** Rinses the brush roll and internal components after each use.
- **FreshStart Odor Management System:** Includes an antibacterial filter, brush roll, and FreshStart cleaning solution to prevent odors.
- **Corded Operation:** Ensures consistent power without battery limitations.



### Sistema automatico di auto-pulizia

L'auto-pulizia automatica elimina sporco, capelli, peli e residui dalla spazzola rotante dopo ogni utilizzo, in modo che il tuo dispositivo sia pronto per la pulizia successiva.

The CrossWave C3 Pro vacuums, washes, and dries in a single pass.

## SETUP AND ASSEMBLY

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components listed in the user guide are present.
2. **Assemble Handle:** Insert the upper handle into the main body of the unit until it clicks securely into place.
3. **Fill Clean Water Tank:**
  - Remove the clean water tank from the back of the machine.
  - Unscrew the cap and fill with warm tap water up to the 'Water' fill line.
  - Add the appropriate BISSELL cleaning formula up to the 'Formula' fill line. Do not overfill.

- Securely replace the cap and reinsert the tank into the machine.



Filling the clean water tank with water and cleaning solution.

- Check Dirty Water Tank:** Ensure the dirty water tank is empty and properly seated before use.

## OPERATING INSTRUCTIONS

### Before You Begin

- Remove any loose debris or large objects from the floor before operating.
- Ensure the clean water tank is filled and the dirty water tank is empty.
- Plug the power cord into a grounded outlet.

### Cleaning Hard Floors

- Turn on the machine by pressing the power button. Select the 'Hard Floor' mode.
- Hold the solution spray trigger to dispense water and cleaning solution as you push the machine forward.
- Release the trigger as you pull the machine back to allow the brush roll to clean and the vacuum to suction up the dirty water.
- Repeat passes as needed until the floor is clean. For heavily soiled areas, hold the trigger for longer on the forward pass.
- For best drying results, make several dry passes (without holding the trigger) over the cleaned area.

# Un nuovo modo di pulire

OLTRE 145 ANNI DI INNOVAZIONE  
NEL SETTORE DELLA PULIZIA

The CrossWave C3 Pro effectively cleans spills and dirt from hard floors.

## Cleaning Area Rugs

1. Select the 'Area Rug' mode.
2. Make a forward and backward pass while holding the spray trigger.
3. Release the trigger and make a forward and backward pass to dry the rug.
4. Avoid over-wetting the rug. Do not make more than two wet passes.



### Soluzione per ciclo di pulizia FreshStart™

La soluzione per ciclo di pulizia lava l'interno del tuo CrossWave® per massimizzare le prestazioni della macchina.

Multi-surface cleaning on a rug.

## Two-Tank System

The innovative two-tank system ensures that clean water and cleaning solution are always separate from the dirty water collected from your floors. This guarantees that you are always cleaning with a fresh solution.



**Fondata nel 1876, BISSELL è un'azienda americana a gestione familiare, leader statunitense nel settore della pulizia. La missione di BISSELL, che dura da quasi 150 anni, è quella di rendere la pulizia dei pavimenti semplice e accurata, con soluzioni intelligenti, innovative e pratiche per ogni esigenza e ogni tipo di pavimento.**

Separate tanks for clean and dirty water.

## MAINTENANCE

### Automatic Self-Cleaning Cycle

After each use, perform the automatic self-cleaning cycle to rinse the brush roll and internal components:

1. Place the machine on its storage tray.
2. Ensure the dirty water tank is empty and the clean water tank has at least 200ml of water.
3. Press and hold the self-clean button for 10-15 seconds. The cycle will run, cleaning the brush roll and flushing the system.
4. Empty the dirty water tank after the cycle is complete.



#### Spazzola rotante antimicrobica e filtro FreshStart™

Lavorano costantemente per prevenire gli odori e mantenere la freschezza del dispositivo

Using FreshStart solution during the self-cleaning cycle helps prevent odors.

### Cleaning the Brush Roll and Filter

- **Brush Roll:** Remove the brush roll cover and then the brush roll. Rinse it under running water and allow it to air dry completely before reinserting.
- **Filter:** Remove the filter from the dirty water tank. Rinse it under running water. Ensure it is completely dry before reinserting to maintain suction power. Replace the filter every 6 months or as needed.



Ensure the filter and brush roll are clean and dry for optimal performance.

## Odor Management System

The FreshStart Odor Management System helps keep your CrossWave clean and fresh. Regularly use the FreshStart cleaning solution and ensure the antibacterial filter and brush roll are clean and dry after each use to prevent odor buildup.

### Serbatoio capiente

A differenza di quando usi straccio e secchio, la nostra tecnologia a doppio serbatoio mantiene l'acqua pulita separata da quella sporca.



Use BISSELL Natural Multi-Surface Floor Cleaning Solution for effective and natural cleaning.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine not turning on	Not plugged in Loose connection Circuit breaker tripped	Ensure power cord is securely plugged into a grounded outlet. Check for loose connections. Reset circuit breaker if necessary.
No spray or reduced spray	Clean water tank empty Tank not seated properly Spray nozzle clogged	Refill clean water tank. Remove and re-seat the clean water tank. Clean the spray nozzle.

Problem	Possible Cause	Solution
Poor suction	Dirty water tank full Dirty water tank not seated correctly Filter clogged or wet Brush roll clogged	Empty dirty water tank. Remove and re-seat the dirty water tank. Clean and dry the filter. Clean the brush roll and brush roll chamber.
Streaks on floor	Too much solution used Dirty brush roll Dirty water tank full	Use less solution; make more dry passes. Clean the brush roll. Empty dirty water tank.



Follow these steps to minimize streaks and ensure effective cleaning.

## SPECIFICATIONS

**Brand:** Bissell

**Model:** 3555N

**Color:** Black/Titanium/Blue

**Product Dimensions:** 27 x 30 x 116.8 cm

**Item Weight:** 5 kg

**Wattage:** 560 watts

**Material:** Plastic

**Number of Speeds:** 2

**Noise Level:** 80 Decibels

**Special Features:** Washable filter, Wheels, Wet and dry cleaning, Bagless

**Filter Type:** Cloth

**Recommended Surfaces:** Tiles, Sealed wood floors, Laminates, Carpets

**Power Source:** Corded Electric

**Clean Water Tank Capacity:** 0.82 Liters

**Dirty Water Tank Capacity:** 0.62 Liters

## WARRANTY AND SUPPORT

### Warranty Information

 
For detailed warranty information, please refer to the warranty card included with your product or visit the official Bissell website. Warranty terms and conditions may vary by region.

### Customer Support

If you encounter any issues or have questions regarding your Bissell CrossWave C3 Pro, please contact Bissell Customer Service. You can find contact information on the official Bissell website or through your local retailer.

For additional resources, including FAQs and video tutorials, please visit the [official Bissell website](#).

### Related Documents - 3555N

 <p><b>bissell®</b> CROSSWAVE® МОЩНЫЙ ЧИСОС Модель 17132</p>
 <p><b>bissell®</b> CROSSWAVE® SERIES 3551, 3555</p>
 <p>User Manual of Product 1: BISSELL Crosswave Pet Pro All in One Wet Dry Vacuum Cleaner and Mop for Hard Floors and Area Rugs, Purple, 2306A</p>
