

[manuals.plus](#) /› [Yamaha](#) /› [Yamaha TW-ES5A True Wireless Sport Earbuds User Manual](#)**Yamaha TW-ES5A**

Yamaha TW-ES5A True Wireless Sport Earbuds User Manual

Model: TW-ES5A

[Introduction](#) [What's in the Box](#) [Product Overview](#) [Setup](#) [Operating Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Welcome to the user manual for your Yamaha TW-ES5A True Wireless Sport Earbuds. These earbuds are designed to provide high-quality audio with features tailored for an active lifestyle, including advanced noise cancellation, ambient sound modes, and a waterproof design. Please read this manual thoroughly to ensure proper use and maintenance of your device.



WATERPROOF IPX7

Yamaha TW-ES5A True Wireless Sport Earbuds in blue.

2. WHAT'S IN THE Box

Verify that all the following items are included in your package:

- TW-ES5A Earbuds (Left and Right)
- Protective Charging Case
- USB A-C Charging Cable
- 5 sets of Eartips (XS, S, M, L, XL)
- 4 sets of Stabilizer Ear Fins (XS, S, M, L)



All components included with the Yamaha TW-ES5A True Wireless Sport Earbuds.

3. PRODUCT OVERVIEW

The Yamaha TW-ES5A earbuds are designed for comfort and performance. Familiarize yourself with the earbud and charging case components.

Earbud Design



Side view of the TW-ES5A earbuds, highlighting the ergonomic shape and stabilizer fin.

Each earbud features a compact design with integrated controls and a stabilizer ear fin for a secure fit during physical activity. The earbuds are lightweight, weighing approximately 0.28 ounces each.

Charging Case



The TW-ES5A earbuds nestled in their protective charging case.

The protective charging case not only stores your earbuds but also recharges them, providing extended battery life. LED indicators on the case show the charging status.

Waterproof Feature



The TW-ES5A earbuds are IPX7 waterproof, making them suitable for sports and various weather conditions.

With an IPX7 waterproof rating, these earbuds are protected against immersion in water up to 1 meter for 30 minutes, making them ideal for workouts and outdoor activities.

Official Product Video

Your browser does not support the video tag.

Official video showcasing the Yamaha TW-ES5A True Wireless Sport Earbuds and their key features.

4. SETUP

4.1 Charging the Earbuds and Case

1. Place the earbuds into the charging case. Ensure they are correctly seated; the LED indicators on the earbuds will light up to confirm charging.
2. Connect the USB A-C charging cable to the charging case and then to a USB power source (e.g., computer, USB wall adapter).
3. The charging case LEDs will indicate the charging status. A full charge provides up to 34 hours of total battery life (earbuds + case).

4.2 Selecting Eartips and Stabilizer Ear Fins

For optimal sound quality, comfort, and a secure fit, it is crucial to select the correct size of eartips and stabilizer ear fins.

- **Eartips:** Experiment with the 5 provided sizes (XS, S, M, L, XL). The correct size should create a good seal in your ear canal, blocking out external noise and providing rich bass.
- **Stabilizer Ear Fins:** Choose from the 4 provided sizes (XS, S, M, L). The fin should fit snugly into the

concha of your ear, preventing the earbud from falling out during movement.

4.3 Bluetooth Pairing

1. Open the charging case. The earbuds will automatically enter pairing mode (LEDs will flash).
2. On your device (smartphone, tablet, laptop), go to Bluetooth settings and enable Bluetooth.
3. Search for available devices and select "Yamaha TW-ES5A" from the list.
4. Once connected, the earbud LEDs will stop flashing, and your device will confirm the connection.
5. For subsequent use, the earbuds will automatically connect to the last paired device when removed from the case.

5. OPERATING INSTRUCTIONS

The TW-ES5A earbuds feature touch controls for various functions.

5.1 Power On/Off

- **Power On:** Open the charging case, and the earbuds will power on automatically.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will power off automatically.

5.2 Music Playback

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Volume Up:** Triple tap on the right earbud.
- **Volume Down:** Triple tap on the left earbud.

5.3 Call Management

- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.

5.4 Noise Control Modes

The TW-ES5A offers two noise control modes:

- **Active Noise Cancelling (ANC):** Reduces ambient noise for an immersive listening experience.
- **Ambient Sound:** Allows you to hear your surroundings while listening to audio, enhancing awareness.

Switching Modes: Press and hold the touch control on the left earbud for 2 seconds to cycle between ANC, Ambient Sound, and Off modes.

5.5 Voice Assistant

Activate your device's voice assistant (Siri or Google Assistant) by pressing and holding the touch control on the right earbud for 2 seconds. This allows for hands-free control of your device.

6. MAINTENANCE

6.1 Cleaning

- Regularly clean the earbuds, eartips, and charging contacts with a soft, dry, lint-free cloth.
- Remove eartips and wash them with mild soap and water if necessary. Ensure they are completely dry before reattaching.
- Do not use abrasive cleaners or solvents.

6.2 Storage

- Always store the earbuds in their charging case when not in use to protect them and keep them charged.
- Store the device in a cool, dry place away from extreme temperatures and direct sunlight.

7. TROUBLESHOOTING

If you encounter issues with your TW-ES5A earbuds, try the following solutions:

Problem	Possible Cause	Solution
Earbuds won't power on	Low battery	Place earbuds in the charging case and charge fully.
Cannot pair with device	Bluetooth off, earbuds not in pairing mode, or previously paired device interference	Ensure Bluetooth is on. Open case to enter pairing mode. Forget device on your phone and re-pair. Turn off Bluetooth on other nearby devices.
No sound or low volume	Volume too low, improper fit, or earbud obstruction	Increase volume on earbuds and device. Adjust eartips for a secure seal. Clean earbud mesh.
Call quality is poor	Microphone obstruction or environmental noise	Ensure microphone is clear. Try moving to a quieter environment.
Earbuds disconnect frequently	Distance from device, interference, or low battery	Keep earbuds close to your device. Avoid strong electromagnetic interference. Charge earbuds fully.

If the issue persists, please refer to the Warranty & Support section for further assistance.

8. SPECIFICATIONS

Key technical specifications for the Yamaha TW-ES5A True Wireless Sport Earbuds:

Feature	Detail
Model Name	TW-ES5A
Connectivity Technology	Bluetooth 5.2, Qualcomm aptX Adaptive TrueWireless Mirroring with Clear Voice

Feature	Detail
Water Resistance Level	IPX7 (Waterproof)
Noise Control	Active Noise Cancellation, Ambient Sound
Battery Life	Up to 34 hours total (earbuds + charging case)
Item Weight	0.28 ounces (per earbud)
Product Dimensions	1.32 x 2.78 x 0.67 inches
Audio Driver Type	Dynamic Driver
Supported Codecs	AptX Adaptive, AAC
Compatible Devices	Android, Laptops, Mac Book, Tablets, iPhone
Special Features	Android Phone Control, iOS Phone Control, Fast Charging, Microphone included, Sweatproof, Volume Control, Sports & Exercise, Lightweight, Wireless, Firm Secure Fit

9. WARRANTY & SUPPORT

For detailed warranty information, product registration, and technical support, please visit the official Yamaha website or contact their customer service. Keep your proof of purchase for any warranty claims. You may also consider purchasing extended protection plans for your device. Details on available protection plans can often be found at the point of purchase or on the retailer's website.