

[Manuals.plus](#) /

› [PHILIPS](#) /

› PHILIPS DLM9317C Bluetooth Wireless Karaoke Microphone User Manual

PHILIPS DLM9317C

PHILIPS DLM9317C Bluetooth Wireless Karaoke Microphone User Manual

Model: DLM9317C

Brand: PHILIPS

1. INTRODUCTION

The PHILIPS DLM9317C is a versatile wireless microphone designed for karaoke enthusiasts. It integrates a high-quality speaker, allowing for a seamless karaoke experience without the need for additional audio equipment. This microphone supports both Bluetooth 5.1 and wired connections, making it compatible with a wide range of devices including smartphones, Fire TV, and Fire Tablets. It is optimized for popular karaoke applications like Karaoke@DAM and Pokekara.

The DLM9317C features a slim, stylish design with built-in howling suppression. It also includes various sound effects and intuitive controls for an enhanced user experience. With its USB-C fast charging capability, you can enjoy extended use with minimal downtime.



推奨ワイヤレスマイク



Amazon デバイスアプリ「カラオケ@DAM」、スマートフォンアプリ「Pokekara」
推奨ワイヤレスマイク

Image 1.1: PHILIPS DLM9317C Wireless Karaoke Microphone, recommended for Karaoke@DAM and Pokekara apps.

2. PACKAGE CONTENTS

Please check that all items are present in the package:

- DLM9317C Microphone Unit ×1
- Audio Connection Cable ×1
- USB-C Charging Cable ×1
- Instruction Manual ×1

3. PRODUCT FEATURES

- **Integrated Speaker Design:** Features a high-quality speaker for natural sound mixing karaoke and vocal audio directly from the microphone.
- **Howling Suppression:** Unique design minimizes audio feedback for a comfortable experience.

- **Versatile Connectivity:** Supports Bluetooth 5.1 for wireless connection and a 3.5mm jack for wired audio input and headphone output.
- **Karaoke Effects:** Equipped with 8 types of sound effects, including echo and voice changer, for diverse entertainment.
- **Intuitive Controls:** Dedicated buttons for microphone volume, karaoke volume, effect switching, and vocal cancel.
- **Party Mode:** Connect two DLM9317C microphones to one smartphone for duet performances.
- **USB-C Fast Charging:** Built-in battery supports quick charging, providing approximately 1 hour of use from a 15-minute charge.



Bluetooth5.0対応
スピーカー機能搭載のワイヤレスマイク

Image 3.1: The DLM9317C supports Bluetooth 5.1 for wireless use.



Image 3.2: Features like Party Mode, Voice Effects, and Vocal Cancel enhance the karaoke experience.

4. SETUP

4.1 Charging the Microphone

1. Connect the included USB-C charging cable to the charging port at the bottom of the microphone.
2. Connect the other end of the USB-C cable to a compatible USB charging adapter (5V/2A recommended).
3. The charging indicator light will show charging status. A full charge takes approximately 3 hours.




最長5時間駆動するDLM9317Mは、
高速充電に対応するUSB-C端子を搭載。
15分充電で1時間使用が可能となります。

Image 4.1: Connect the USB-C cable for high-speed charging.

4.2 Bluetooth Connection


1. **Power On:** Press and hold the Power button (ⓘ) for 2 seconds to turn the microphone on.
2. **Enter Pairing Mode:** Short press the Bluetooth button (Ⓢ). The indicator light will flash, indicating it's in pairing mode.
3. **Device Pairing:** On your smartphone or other device, go to Bluetooth settings and search for available devices.
4. **Select Device:** Tap on "PHILIPS DLM9317C" to initiate pairing.
5. **Confirmation:** Once successfully paired, the microphone's indicator light will stop flashing and remain solid. You can now open your music or karaoke app and start playing.

対応機器に Bluetooth 接続すると、DLM9317C のスピーカーからカラオケ音源 + 歌声のミックス音声が流れ、屋内、屋外問わず、好きな場所でカラオケを楽しめます。

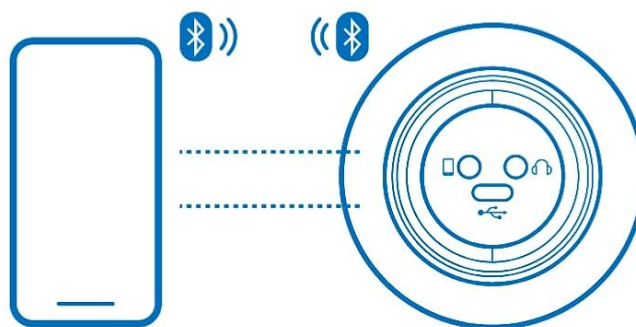

DLM9317C の底面にあるイヤホンジャックに、お手持ちのイヤホン、ヘッドホンを接続出来ます。

カラオケ音源 + 歌声ミックス音声がスピーカーからは出力されずにイヤホンから流れるので、カラオケ練習に最適です。

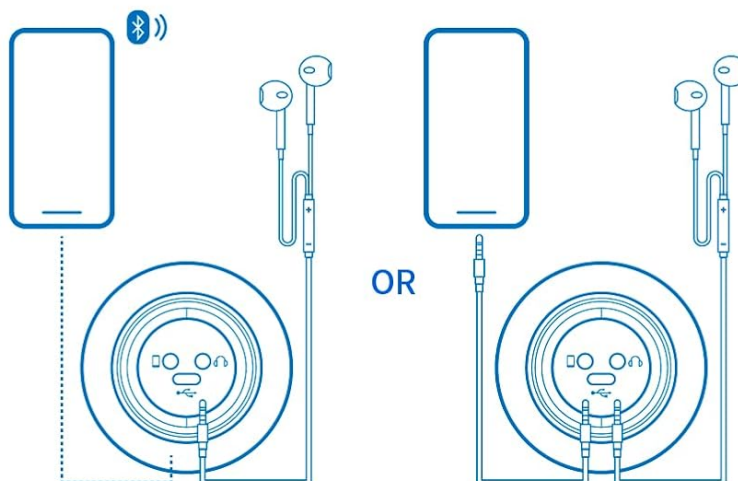

様々なデバイスに対応する高い汎用性と、スピーカー、イヤホンの 2 つの出力方法に対応しています。

Image 4.2: Bluetooth connection diagram and wired headphone connection option.

4.3 Wired Connection (AUX)

For devices that do not support Bluetooth or for a more stable connection, you can use the included audio connection cable:

1. Connect one end of the 3.5mm audio cable to the 3.5mm stereo mini terminal (input) at the bottom of the microphone.
2. Connect the other end to the audio output jack of your smartphone, tablet, or other audio source.

5. OPERATING INSTRUCTIONS

5.1 Microphone Controls

The DLM9317C features several buttons for easy control:

- **Power Button (①):**

- Long press (2 seconds): Power On/Off.
- Short press: Switch between microphone volume adjustment and accompaniment volume adjustment.

- **Volume Up Button (+):**

- Short press: Increase volume.
- Long press: Go to the previous song (when playing music).

- **Volume Down Button (-):**

- Short press: Decrease volume.
- Long press: Go to the next song (when playing music).

- **Effect Switch Button (Ⓔ):**

- Short press: Confirm the current effect.
- Short press again within 3 seconds: Switch to the next effect (8 types available, including echo and voice changer).

- **Cancel Button (Ⓕ):**

- Short press: Turn off the current effect.
- Long press: Toggle Vocal Cancel mode On/Off. This function attempts to minimize vocals in a song, allowing you to sing along.

- **Bluetooth Button (Ⓖ):**

- Short press: Enter Bluetooth pairing mode. If already connected, it will disconnect the current device and enter pairing mode.



上部にコンデンサーマイク、
下部には高音質スピーカーを搭載し、
追加機器無しにカラオケを楽しめます。

Image 5.1: The microphone features a condenser mic and a high-quality speaker for integrated sound.

5.2 Party Mode (Duet Function)

To use two DLM9317C microphones for a duet:

1. Ensure both microphones are powered on and not connected to any device via Bluetooth.
2. On the first microphone (Master), long press the Bluetooth button (Ⓢ) to enter Party Mode pairing.
3. On the second microphone (Slave), short press the Bluetooth button (Ⓢ).
4. Once grouped successfully, the Slave microphone's lamp will slowly flash white. The Master microphone's lamp will indicate its Bluetooth status (ready to pair with a smartphone).
5. Connect your smartphone to the Master microphone via Bluetooth as described in Section 4.2.

Note: The Vocal Cancel function is not available when Party Mode is active.

5.3 Headphone Output

You can connect your personal earphones or headphones to the 3.5mm headphone terminal (output) at the bottom of the

microphone. This allows you to listen to the mixed karaoke and vocal audio privately, which is ideal for practice.

6. MAINTENANCE

6.1 Cleaning

- Wipe the microphone body with a soft, dry cloth.
- Do not use abrasive cleaners, alcohol, or solvents, as these may damage the surface.
- Avoid getting moisture into the microphone grille or ports.

6.2 Storage

- Store the microphone in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, ensure the battery is partially charged (around 50%) to prolong its lifespan.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Microphone does not power on.	Battery is depleted.	Charge the microphone using the USB-C cable.
Cannot connect via Bluetooth.	Bluetooth is off on the device; microphone is not in pairing mode; device is too far.	Ensure Bluetooth is enabled on your device. Short press the Bluetooth button on the mic to enter pairing mode. Move the device closer to the microphone.
No sound or low sound output.	Volume is too low; incorrect connection; mic is muted.	Increase microphone and device volume. Check wired/Bluetooth connection. Ensure mic is not muted (if applicable).
Howling/Feedback noise.	Microphone too close to speaker; volume too high.	Move the microphone further away from the speaker. Reduce microphone volume.
Vocal Cancel function not working in Party Mode.	Vocal Cancel is disabled in Party Mode.	This is normal operation. Vocal Cancel cannot be used in Party Mode.

7.1 Factory Reset

If you encounter persistent issues, you can perform a factory reset:

- With the microphone powered on, simultaneously long press the **Power button** (ⓘ) and the **Cancel button** (Ⓢ) until the indicator lights reset.

8. SPECIFICATIONS

Feature	Specification
Model Number	DLM9317C
Bluetooth Version	5.1

Feature	Specification
Battery	3.7V 2600mA Lithium-ion
Speaker Rated Output	8W
Frequency Response	95Hz - 13.5KHz
Signal-to-Noise Ratio (SNR)	≥70dB
Compatible USB Charging Adapter	5V/2A
Charging Time	Approx. 3 hours
Input/Output Ports	3.5mm Stereo Mini Terminal (Input), Headphone Terminal (Output), USB-C Charging Port
Bluetooth Transmission Power	≤20dbm
Bluetooth Frequency Band	2.4GHz - 2.4835GHz
Weight	268g
Product Dimensions (LxWxH)	17.5 x 6.5 x 6.5 cm
Polar Pattern	Unidirectional
Recommended Use	Karaoke
Compatible Devices	Android, Fire TV, iPhone, iPad, Smartphones

9. WARRANTY AND SUPPORT

9.1 Manufacturer's Warranty

This PHILIPS DLM9317C Wireless Karaoke Microphone comes with a **1-year manufacturer's warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

9.2 Customer Support

For technical assistance, warranty service, or any questions regarding your PHILIPS DLM9317C microphone, please contact PHILIPS customer support through their official website or the retailer where you purchased the product.

You can find more information and support resources on the official PHILIPS website www.philips.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B6H5Q882>

More documents and user manuals: <https://manuals.plus/>