

[Manuals.plus](#) /

› [PERFASCIN](#) /

› PERFASCIN XM RM-19 Voice Replacement Remote Control User Manual

PERFASCIN XM RM-19

PERFASCIN XM RM-19 Voice Replacement Remote Control User Manual

For Xiaomi MI P1Q1 TV Models: L32M6-6AEU, L43M6-6AEU, L55M6-6AEU, L75M6-ESG

INTRODUCTION

This manual provides instructions for the PERFASCIN XM RM-19 Voice Replacement Remote Control. This remote is designed to function with specific Xiaomi MI P1Q1 TV models, offering a direct replacement with voice control capabilities. Please read this manual carefully to ensure proper setup and operation.



Image: Front view of the PERFASCIN XMRM-19 Voice Replacement Remote Control, highlighting the voice control feature with a microphone icon.

SETUP

1. Battery Installation

The remote control requires two (2) 1.5V AAA alkaline batteries (not included) for operation.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.





Image: The back of the remote control with the battery compartment open, showing where to insert AAA batteries.

2. Pairing the Remote Control

This voice control remote requires pairing with your Xiaomi MI P1Q1 TV before use. The pairing process typically involves the following steps:

1. Ensure your TV is powered on.
2. Bring the remote control close to the TV (within 20 cm is often recommended).
3. On your TV, navigate to the Bluetooth settings or remote control pairing menu. The exact path may vary by TV model, but it is usually found under **Settings > Remote & Accessories > Add Accessory** or similar.
4. Follow the on-screen instructions to put your TV into pairing mode.
5. On the remote control, simultaneously press and hold the **MI button** (often a square icon with 'm' or 'MI' logo) and the **Home button** (often a circle icon) for a few seconds until an indicator light on the remote flashes or the TV displays a pairing confirmation.
6. Once the remote appears in the TV's Bluetooth device list, select it to complete the pairing process.

If pairing is unsuccessful, try repeating the steps or consult your TV's user manual for specific pairing instructions.

OPERATING THE REMOTE CONTROL

The PERFASCIN XMRM-19 remote control features a standard layout for TV functions, including dedicated buttons for popular streaming services and voice control.







Image: Detailed front view of the remote control, illustrating the layout of all buttons and their labels.

Button Functions:

- **Power Button ()**: Turns the TV on or off.
- **Number Buttons (0-9)**: Direct channel selection.
- **AUDIO**: Selects audio tracks or modes.
- **INFO**: Displays information about the current program or input.
- **TTX**: Accesses Teletext services (if available).
- **INPUT**: Cycles through available input sources (HDMI, AV, etc.).
- **CH list**: Displays the channel list.
- **SET**: Accesses TV settings or menu.
- **Netflix / Prime Video**: Dedicated buttons for quick access to these streaming services.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Navigates menus and confirms selections.
- **MI Button (Home)**: Returns to the TV's home screen or main menu.
- **Back Button (←)**: Returns to the previous screen or menu.
- **Volume Up (+) / Volume Down (-)**: Adjusts the TV volume.
- **MUTE**: Mutes or unmutes the TV audio.
- **Channel Up (^) / Channel Down (v)**: Changes TV channels.
- **Colored Buttons (Red, Green, Yellow, Blue)**: Functionality varies depending on the TV application or menu.

Voice Control Function:

To use the voice control feature, ensure the remote is successfully paired with your TV.

1. Press the dedicated **Voice Control button** (often marked with a microphone icon) on the remote.
2. Speak clearly into the microphone located on the remote control.
3. You can issue commands such as "Open Netflix," "Search for [movie title]," "Change channel to [number]," or "What's the weather?"
4. The TV will process your command and respond accordingly.

MAINTENANCE

Battery Replacement:

When the remote control's performance degrades or it stops responding, it is likely time to replace the batteries. Follow the battery installation steps outlined in the Setup section.

Cleaning:

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water. Avoid using

harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's electronics or finish.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are correctly installed and have sufficient charge. Replace if necessary.
 - Ensure there are no obstructions between the remote and the TV.
 - Re-pair the remote control with the TV as described in the Setup section.
- **Voice control not working:**
 - Confirm the remote is properly paired with the TV. Voice control functionality relies on a Bluetooth connection.
 - Ensure you are pressing the voice control button before speaking.
 - Speak clearly and at a normal volume.
 - Check the TV's settings to ensure voice control is enabled.
- **Buttons are sticky or unresponsive:**
 - Clean the remote control as described in the Maintenance section.

SPECIFICATIONS

Brand	PERFASCIN
Model Number	XMRM-19 (ANG-XMRM-19-VOICE-US)
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	2.3 ounces
Batteries Required	2 AAA batteries
Connectivity Technology	Bluetooth
Special Feature	Ergonomic, Voice Search
Max Number of Supported Devices	1
Compatible Devices	Television (Xiaomi MI P1Q1 TV models)

WARRANTY AND SUPPORT

For any questions, troubleshooting assistance beyond this manual, or information regarding product warranty, please contact the PERFASCIN customer service. Refer to your purchase documentation for specific contact details or visit the manufacturer's official website.