

ALLIMITY BN59-01199F

Allimity BN59-01199F Replacement Remote Control User Manual

Model: BN59-01199F

INTRODUCTION

This manual provides comprehensive instructions for the Allimity BN59-01199F replacement remote control. It is designed to be compatible with various Samsung LED LCD Smart TVs, offering a direct replacement for several original Samsung remote models. This guide covers initial setup, basic operation, maintenance, and troubleshooting to ensure optimal performance.

SETUP

Battery Installation

The Allimity BN59-01199F remote control requires two (2) AAA alkaline batteries for operation. No programming is required; simply insert the batteries, and the remote will be ready to use with your compatible Samsung TV.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.



Figure 1: Front view of the Allimity BN59-01199F remote control. The battery compartment is located on the back.

OPERATING INSTRUCTIONS

This remote control is designed for intuitive use with compatible Samsung LED LCD Smart TVs. Below are the functions of the primary buttons.



Button Functions

- **Power** (): Turns the TV on or off.
- **Source**: Selects the input source (e.g., HDMI 1, AV, TV).
- **Number Buttons (0-9)**: Directly selects TV channels or enters numerical input.
- **PRE-CH**: Returns to the previous channel.
- **Volume (+/-)**: Adjusts the TV volume up or down.
- **Mute**: Mutes or unmutes the TV sound.
- **Channel (CH ▲ / ▼)**: Changes TV channels up or down.
- **CH LIST**: Displays the channel list.
- **MENU**: Opens the TV's main menu.
- **SMART HUB**: Accesses the Samsung Smart Hub for apps and streaming services.
- **GUIDE**: Displays the electronic program guide.
- **TOOLS**: Accesses quick settings or context-sensitive options.
- **INFO**: Displays information about the current program or input.
- **Directional Pad (▲◀▼▶) & Enter**: Navigates menus and confirms selections.
- **RETURN** (↶): Returns to the previous screen or menu.
- **EXIT**: Exits the current menu or application.
- **Color Buttons (A, B, C, D)**: Functions vary depending on the TV menu or application.
- **E-MANUAL**: Accesses the TV's electronic manual.
- **SPORTS**: Dedicated button for sports mode or content.
- **CC**: Activates or deactivates closed captions.
- **Media Control Buttons** (, ▶ , ,): Control media playback (rewind, play, pause, fast forward).

MAINTENANCE

Cleaning

To maintain the remote control's appearance and functionality, clean it regularly. Use a soft, dry cloth to wipe the surface. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's finish or internal components.

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction. Dispose of used batteries according to local regulations.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent potential leakage and damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
Remote control is not working.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity.
Remote control range is reduced.	Weak batteries or obstruction between remote and TV.	Replace batteries. Ensure there are no objects blocking the line of sight between the remote's IR emitter and the TV's IR receiver.
Specific buttons are not responding.	Dirt or debris under the button, or internal malfunction.	Clean the remote surface. If the issue persists, the remote may require replacement.
Remote works for some functions but not others.	Compatibility issue with a specific TV model or function.	Verify your TV model is listed as compatible. Some advanced Smart TV functions might require the original Smart Remote.

SPECIFICATIONS

- **Brand:** ALLIMITY
- **Model Name:** BN59-01199F
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x 1.5V AAA Alkaline Batteries (not included)
- **Maximum Range:** Approximately 30 Feet (9 meters)
- **Compatible Devices:** Samsung LED LCD HDTV Smart TVs (various models, refer to product description for full list)
- **Special Feature:** No Programming Required
- **Item Weight:** Approximately 2 Ounces (56 grams)
- **Dimensions (L x W x H):** 5" x 1" x 0.5" (12.7 cm x 2.54 cm x 1.27 cm)

WARRANTY AND SUPPORT

This Allimity remote control is designed for reliability and performance. For specific warranty details, please refer to the purchase documentation or contact your retailer. If you experience any issues that cannot be resolved using the troubleshooting guide, please contact the seller or manufacturer for assistance. Provide your product model number (BN59-01199F) and details of the issue for efficient support.

Note: The manufacturer reserves the right to make changes to product specifications without prior notice.