

[Manuals.plus](#) /

> [Accutime](#) /

> Sonic Kids Camera User Manual

Accutime SNCC3009

Sonic Kids Camera User Manual

Brand: Accutime | Model: SNCC3009

INTRODUCTION

This manual provides essential information for the safe and effective use of your Sonic Kids Camera. Designed for young users, this interactive camera allows for capturing photos and videos, playing educational games, and enjoying music through its built-in MP3 player. Please read this manual thoroughly before operating the device.



Figure 1: Sonic Kids Camera Overview

The image displays the front of the Sonic Kids Camera, featuring a vibrant blue casing adorned with Sonic the Hedgehog artwork. A prominent black camera lens is centrally located, and the camera has ergonomic blue handles on both sides for easy gripping.

SETUP

1. Unboxing and Initial Charge

Carefully remove all components from the packaging. The package should include the Sonic Kids Camera, a USB charging cable, and a Micro SD card. Before first use, fully charge the camera using the provided USB cable. Connect the small end of the USB cable to the camera's charging port and the larger end to a standard USB power adapter (not included) or a computer USB port. The charging indicator light will show the charging status.



Figure 2: Package Contents

This image shows the Sonic Kids Camera, its retail packaging, and the included USB charging cable, illustrating what comes in the box.

2. SD Card Installation

The camera requires a Micro SD card to store photos and videos. A Micro SD card is included with your purchase. Locate the SD card slot on the side of the camera. Gently insert the Micro SD card into the slot until it clicks into

place. Ensure the card is inserted in the correct orientation to avoid damage. To remove, gently push the card in until it springs out.

OPERATING INSTRUCTIONS

1. Power On/Off

Press and hold the power button (usually located on the top or side of the camera) for a few seconds to turn the camera on or off. The 2-inch screen will illuminate upon startup.

2. Camera Functions

Navigate to the camera mode using the directional buttons. Press the shutter button to take a photo. The camera features 4x digital zoom, which can be adjusted using the zoom buttons. To record a video, switch to video mode and press the record button. The camera supports 1080p video recording. You can also apply various picture frames and effects to your photos and videos through the camera's menu options.

3. Game Functions

The camera includes several pre-loaded educational and fun games. Access the game menu from the main screen and select your desired game. Use the directional buttons for gameplay and the action button to confirm selections.

4. MP3 Player

The built-in MP3 player allows you to listen to music. Transfer MP3 files to the Micro SD card via a computer. Access the MP3 player mode from the main menu to play your favorite songs through the integrated speaker.



Figure 3: Interactive Camera Features

This graphic highlights the key functionalities of the Sonic Kids Camera, such as its 4x zoom camera, 1080p video recording, built-in games, MP3 player, and creative photo effects, all displayed on its 2-inch screen with an included SD card.

MAINTENANCE

1. Cleaning

To clean the camera, use a soft, dry cloth. For stubborn marks, slightly dampen the cloth with water. Do not use harsh chemicals or abrasive cleaners, as these can damage the camera's surface or internal components. Keep the lens clean for clear photos and videos.

2. Storage

When not in use, store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Protect it from dust and moisture. If storing for an extended period, ensure the battery is partially charged (around 50%) to

maintain battery health.

3. Battery Care

The camera uses a rechargeable Lithium Ion battery. To maximize battery life, avoid fully discharging the battery frequently. Charge the camera regularly, and do not leave it uncharged for prolonged periods. Use only the provided USB cable for charging.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Battery is depleted.	Charge the camera fully using the USB cable.
Cannot take photos/videos.	SD card is full or not inserted correctly.	Check SD card insertion. Delete old files or replace with a new SD card.
Battery drains quickly.	Frequent use of games/video recording; old battery.	Reduce screen brightness. Charge more frequently. If issue persists, contact support.
Screen is blank or frozen.	Software glitch.	Press and hold the power button for 10 seconds to force a restart.
Games are not loading.	Corrupted files or insufficient memory.	Restart the camera. Ensure SD card is functioning correctly.

SPECIFICATIONS

Product Dimensions: 5.71 x 1.69 x 3.5 inches

Item Weight: 0.634 ounces

Model Number: SNCC3009

Batteries: 1 Lithium Ion battery (included)

Optical Zoom: 4x

Video Resolution: 1080p

Screen Size: 2 inches

Included Accessories: USB Charging Cable, Micro SD Card

Manufacturer: Accutime Watch Corp.

First Available: July 14, 2022



Figure 4: Product Dimensions

This image illustrates the approximate dimensions of the Sonic Kids Camera, indicating a width of 7 inches and a height of 4 inches, providing a visual reference for its size.

WARRANTY AND SUPPORT

Warranty information for your Sonic Kids Camera is typically provided with your purchase documentation. Please refer to the packaging or any enclosed leaflets for specific warranty terms and conditions. For technical support, product inquiries, or warranty claims, please contact Accutime Watch Corp., the manufacturer of this product. Contact details can usually be found on the product packaging or the manufacturer's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question