

[Manuals.plus](#) /

› [Digipartspower](#) /

› Digipartspower 12V AC/DC Adapter Charger User Manual for Kenmark 15KN10E5 LCD TV

Digipartspower 15KN10E5

Digipartspower 12V AC/DC Adapter Charger User Manual

Model: **15KN10E5**

1. INTRODUCTION

The Digipartspower 12V AC/DC Adapter Charger is designed to provide reliable power for Kenmark 15KN10E5 LCD TVs and similar HD TV models. This adapter is engineered for high performance, durability, and portability, making it suitable for various environments. Its lightweight and compact design ensures ease of transport and use.

This product has undergone multiple tests to ensure compatibility and reliable operation. It serves as an ideal replacement or backup power source for your compatible device.

2. SAFETY INFORMATION

This Digipartspower AC/DC adapter incorporates intelligent security technology with multiple protection features to ensure safe operation:

- **OCP (Over Current Protection):** Prevents damage from excessive current.
- **OVP (Over Voltage Protection):** Safeguards against voltage surges.
- **OTP (Over Temperature Protection):** Protects against overheating.
- **SCP (Short Circuit Protection):** Prevents damage from short circuits.
- **PTC Protection:** Positive Temperature Coefficient protection.
- **Cyclic Protection:** Ensures stable power delivery.
- **Over-Discharge Protection:** Prevents excessive discharge.
- **Over-Charge Protection:** Protects against overcharging.
- **Over-Power Protection:** Manages power output to prevent overload.
- **Discharge Protection:** Controls discharge processes.
- **Temperature Protection:** Monitors and regulates internal temperature.

Multiple Safety Protect

Intelligent security technology



PTC
Protection




Over-Temperature
Protection



Cyclic
Protection



Over-Current
Protection

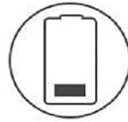

Over-Discharge
Protection



Over-Charge
Protection



Short-Circuit
Protection



Over-Voltage
Protection



Image: Multiple Safety Protection Features



Over-Voltage
Protection



Over-Charging
Protection



Over-Power
Protection



Short-Circuit
Protection



Discharge
Protection



Temperature
Protection

Image: Adapter with Specific Safety Protections

Important Note:

Products with electrical plugs are designed for use in the US. Outlets and voltage differ internationally, and this product may require an adapter or converter for use in your destination. Please check compatibility before purchasing.

3. SETUP

1. **Power Off Device:** Ensure your Kenmark 15KN10E5 LCD TV or compatible device is powered off before connecting the adapter.
2. **Connect to TV:** Connect the barrel connector of the Digipartspower AC/DC adapter to the power input port on your TV.
3. **Connect to Power Outlet:** Plug the adapter's main power connector into a standard electrical outlet.
4. **Verify Connection:** Verify that all connections are secure and firm before powering on your device.

4. OPERATING INSTRUCTIONS

Once the Digiartpower AC/DC adapter is securely connected to both your Kenmark 15KN10E5 LCD TV and a functional power outlet, you can power on your TV as usual. The adapter will automatically supply the necessary 12V power for operation.

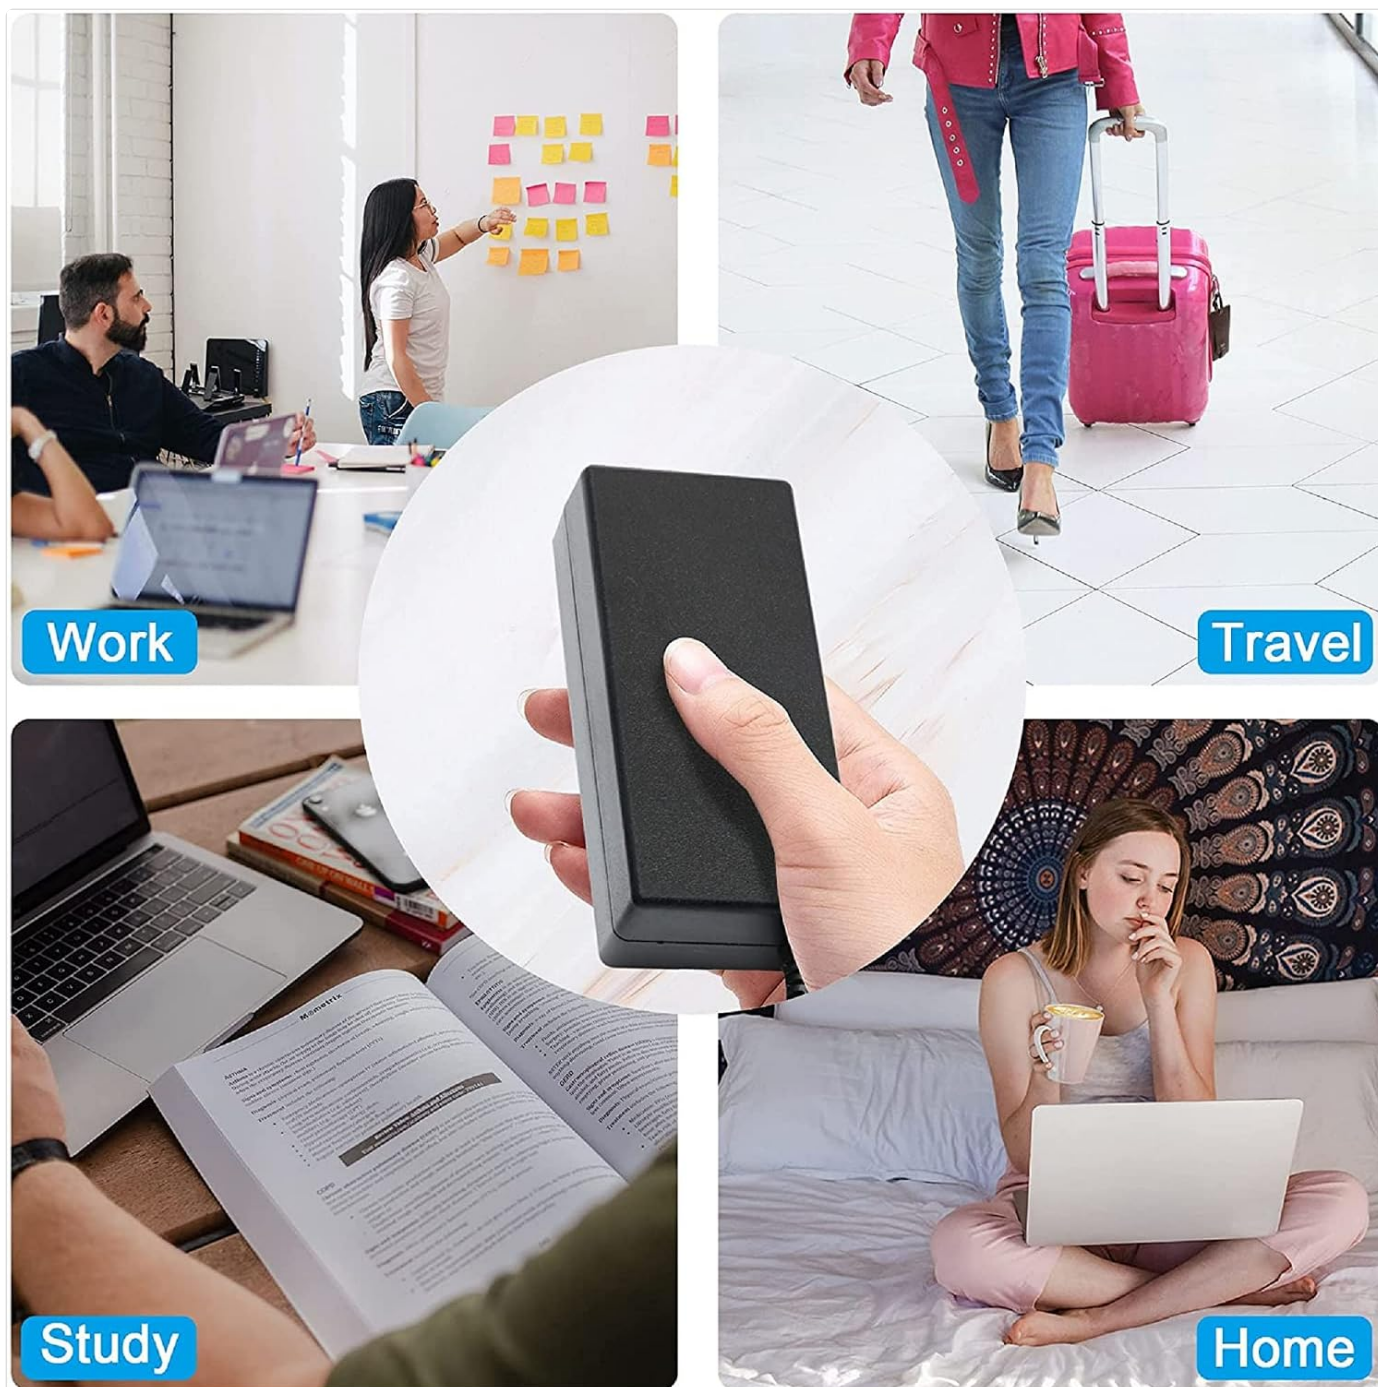


Image: Adapter in Various Usage Scenarios

5. MAINTENANCE

To ensure the longevity and optimal performance of your Digiartpower AC/DC adapter, follow these guidelines:

- **Cleaning:** Keep the adapter clean and free from dust. Use a soft, dry cloth for cleaning.
- **Environmental Conditions:** Avoid exposing the adapter to extreme temperatures, moisture, or direct sunlight.
- **Cord Care:** Do not bend, twist, or crimp the power cord excessively. The cord is designed with corrosion-resisting materials and tested bending features for durability, but extreme stress can cause internal damage.

- **Storage:** Store the adapter in a cool, dry place when not in use.
- **Inspection:** Regularly inspect the cord and connectors for any signs of wear, fraying, or damage. Discontinue use immediately if any damage is observed.



Image: High Quality Cord Construction

6. TROUBLESHOOTING

If your Kenmark 15KN10E5 LCD TV or compatible device does not power on after connecting the Digiartspower AC/DC adapter, consider the following:

- **Check Connections:** Ensure all connections between the adapter, the TV's power input, and the wall outlet are secure and fully inserted.
- **Verify Power Outlet:** Test the wall outlet with another functional device (e.g., a lamp or phone charger) to confirm it is supplying power.
- **Inspect Adapter:** Carefully examine the adapter unit and its cord for any visible signs of damage, such as cuts,

frayed wires, or bent pins. If damaged, discontinue use.

- **Compatibility:** Confirm that the adapter's output specifications (12V) precisely match the power requirements of your Kenmark 15KN10E5 LCD TV. Refer to your TV's manual for power specifications.
- **Device Issue:** If the adapter appears functional and correctly connected, the issue might lie with the TV itself.

If the issue persists after performing these checks, please contact customer support for further assistance.

7. SPECIFICATIONS

Feature	Detail
Brand	Digipartspower
Connector Type	Barrel Connector
Special Feature	Lightweight Design
Input Voltage	12 Volts
Specification Met	FCC
Power Source	Corded Electric
Main Power Connector Type	2 Pin
Manufacturer	Digipartspower
Additional Features	Lightweight Design
Mounting Type	Wall Mount
ASIN	B0B6P7TKT2

8. WARRANTY AND SUPPORT

The Digipartspower AC/DC Adapter is CE-/FCC-Certified, ensuring it meets high safety and quality standards. While specific warranty terms may vary by retailer, Digipartspower is committed to providing quick service and support.

For any product-related inquiries, technical assistance, or support, please refer to the contact information provided by your original retailer or visit the official Digipartspower store online for further details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question