

Manuals.plus /

- › **Collective Minds** /
- › Collective Minds Switch Up Game Enhancer CM00056-1 Instruction Manual

Collective Minds CM00056-1

Collective Minds Switch Up Game Enhancer CM00056-1 Instruction Manual

Enhance your Nintendo Switch gaming experience with your favorite controllers.

INTRODUCTION

The Collective Minds Switch Up Game Enhancer CM00056-1 is an accessory designed for Nintendo Switch gamers. It enables the use of various existing controllers, including PlayStation 4 (PS4), PlayStation 3 (PS3), Xbox One, Xbox 360, and Wii U Pro controllers, directly with your Nintendo Switch console. This adapter supports both wireless and wired connections, offering flexibility and enhanced control options for a wide range of games.

SETUP

Connecting the Switch Up Adapter

The Switch Up adapter can be connected to your Nintendo Switch console or dock. An OTG USB-C cable is included for direct connection to the Switch Lite or for alternative setups.

1. **For Nintendo Switch Dock:** Insert the Switch Up adapter into an available USB port on your Nintendo Switch dock.
2. **For Nintendo Switch (Handheld Mode) or Switch Lite:** Connect the included USB-C OTG cable to the USB-C port on your console, then plug the Switch Up adapter into the USB-A end of the OTG cable.

SWITCH UP



Image: The Switch Up adapter plugged into a Nintendo Switch dock, ready for use.

Controller Pairing and Connection

The Switch Up adapter supports both wireless (Bluetooth) and wired connections for compatible controllers.

- **Wireless Connection (Bluetooth):** The Switch Up adapter has built-in Bluetooth for wireless play with PS4, PS3, and Xbox One Bluetooth controllers. Follow the specific pairing instructions for your controller model to connect it to the Switch Up.
- **Wireless Connection (External Adapter):** Standard Xbox One and Xbox 360 controllers can be used wirelessly with the appropriate Microsoft wireless adapter (not included). Plug the Microsoft wireless adapter into the Switch Up, then pair your controller.
- **Wired Connection:** For lag-free control, you can connect your PS4, PS3, Xbox One, Xbox 360, or Wii U Pro controllers directly to the Switch Up adapter using a compatible USB cable.

SWITCH UP



Image: The Switch Up adapter shown alongside its included USB-C OTG cable, highlighting connectivity options.

OPERATING INSTRUCTIONS

Once your controller is successfully connected to the Switch Up adapter, it will function as a compatible input device for your Nintendo Switch. The Switch Up also offers advanced game-specific modes to enhance gameplay.

General Controller Use

After connecting your preferred controller (PS4, PS3, Xbox One, Xbox 360, or Wii U Pro) to the Switch Up, the Nintendo Switch will recognize it as a standard controller. You can then navigate menus and play games as usual.

SWITCH UP



Image: A user holding an Xbox controller, illustrating how it can be used with the Switch Up adapter for Nintendo Switch gaming.

Game-Specific Modes

The Switch Up adapter includes specialized modes for popular Nintendo Switch titles, offering unique enhancements:

- **Pokémon Sword and Shield Mode:** Features include automatic shiny chaining, Watt generation, easy cycling, and rare den farming.
- **Animal Crossing Mode:** Provides functionalities such as easy fishing, easy net use, and easy turbo actions.
- **Fortnite Mode:** Offers aim assist, rapid fire, smart fire, and dual fire capabilities for Battle Royale.
- **Zelda: Breath of the Wild Mode:** Includes Rupee/arrow generation, enhanced weapon modifications, horse modifications, and more.
- **Super Mario Odyssey Mode:** Features automatic boss battles, automatic coin/moon generation, and easy Mario combos.

SWITCH UP

MARIO ODYSSEY

- COIN + MOON GENERATOR
- EASY DIVE
- EASY HATTY
- EASY SWIM
- GROUND POUND +
- AUTO BOSS BATTLE

ZELDA BREATH OF THE WILD

- RUPEE + ARROW GENERATOR
- RAPID SPEAR
- BOMB PARRY
- HEAVY BOMB BOW
- BOW SPIN
- INFINITE SPRINT

Image: A visual representation of the enhanced features available for Super Mario Odyssey and Zelda: Breath of the Wild when using the Switch Up adapter.

Refer to the official Collective Minds website or product documentation for detailed instructions on activating and configuring these game-specific modes.

MAINTENANCE

To ensure the longevity and optimal performance of your Collective Minds Switch Up Game Enhancer, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to gently wipe the adapter. Avoid using liquid cleaners or abrasive materials, as these can damage the device.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Handling:** Handle the adapter with care. Avoid dropping it or subjecting it to strong impacts.

TROUBLESHOOTING

If you encounter issues with your Switch Up Game Enhancer, consider the following troubleshooting steps:

- **Adapter Not Recognized:** Ensure the Switch Up adapter is firmly seated in the USB port of your Switch dock or connected correctly via the OTG cable to your console. Try a different USB port if available.
- **Controller Not Connecting:**
 - For wireless controllers, ensure they are in pairing mode and within range of the Switch Up adapter.
 - For wired controllers, verify the USB cable is securely connected to both the controller and the Switch Up. Try a different USB cable if possible.
 - Ensure your controller's firmware is up to date.
- **Game Mode Issues:** If a specific game mode is not functioning as expected, ensure you have followed the activation instructions precisely. Check the Collective Minds support website for any firmware updates for the Switch Up adapter.
- **Power Cycle:** Disconnect the Switch Up adapter and your controller, then restart your Nintendo Switch console. Reconnect the devices and try again.

If problems persist, consult the official Collective Minds support resources for further assistance.

SPECIFICATIONS

Model Number	CM00056-1
Brand	Collective Minds
Compatibility	Nintendo Switch, Nintendo Switch Lite
Controller Support	PS4, PS3, Xbox One, Xbox 360, Wii U Pro controllers
Connectivity	Bluetooth (wireless), USB (wired)
Included Accessories	USB-C OTG Cable

WARRANTY AND SUPPORT

For information regarding product warranty, technical support, or to access the latest firmware updates and detailed guides, please visit the official Collective Minds website. Keep your purchase receipt for warranty claims.