

Hoover UH71300

Hoover WindTunnel Cord Rewind Pro Bagless Vacuum Cleaner

Model: UH71300 | Brand: Hoover

INTRODUCTION

The Hoover WindTunnel Cord Rewind Pro Bagless Corded Upright Vacuum Cleaner is designed for effective cleaning of both carpets and hard floors. It features powerful WindTunnel technology with Multi-Cyclonic filtration for consistent suction, a 5-level height adjustment for various floor types, and a convenient automatic cord rewind system. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your vacuum cleaner.

KEY FEATURES

- **WindTunnel Technology:** Provides powerful suction to lift and remove surface debris and deep-down embedded dirt.
- **Multi-Cyclonic Filtration:** Ensures no loss of suction during cleaning.
- **Automatic Cord Rewind:** Retracts the 25-ft power cord with the touch of a button for hassle-free storage.
- **5-Level Height Adjustment:** Allows for optimal cleaning on various floor types, from low carpet to hard floors.
- **Versatile Tools:** Includes a built-in 10-ft extension wand, crevice tool, pivoting dusting brush, and upholstery tool for cleaning hard-to-reach areas, stairs, and furniture.
- **Bagless Design:** Features an easy-to-empty dirt cup, eliminating the need for replacement bags.





The Hoover WindTunnel Cord Rewind Pro Bagless Vacuum Cleaner, shown upright with its hose and attachments.

WINDTUNNEL TECHNOLOGY

PROVIDES POWERFUL SUCTION



Illustration of the WindTunnel Technology in action, demonstrating powerful suction on a carpeted surface.

25FT AUTOMATIC CORD REWIND

RETRACTS WITH THE TOUCH OF A BUTTON



A user activating the 25-foot automatic cord rewind feature with their foot, showing the cord retracting.

CARPET & HARD FLOOR CLEANING

5-LEVELS OF HEIGHT ADJUSTMENT



Close-up of the vacuum's base transitioning from carpet to hard floor, highlighting the 5-level height adjustment dial.

CLEANS FLOORS AND SO MUCH MORE

TOOLS FOR CORNERS, CREVICES, STAIRS,
FURNITURE AND MORE



Collage showing the vacuum's various attachments being used for cleaning baseboards, high areas with the extension wand, and upholstery.

SETUP GUIDE

1. Unpacking

- Carefully remove all components from the packaging.
- Remove any protective plastic or cardboard inserts.
- Verify all parts are present: main vacuum body, handle, hose, crevice tool, pivoting dusting brush, telescoping extension wand, upholstery tool.

2. Assembly

1. Insert the handle into the top of the main vacuum body until it clicks securely into place.
2. Attach the flexible hose to the hose inlet on the vacuum body. Ensure a tight connection.

3. Store the included cleaning tools (crevice tool, dusting brush, or upholstery tool) on the designated storage clips on the vacuum.
4. Ensure the dirt cup is properly seated and locked onto the vacuum.

OPERATING INSTRUCTIONS

1. Power On/Off

- Plug the power cord into a suitable electrical outlet.
- Press the power button (usually located near the base or handle) to turn the vacuum on. Press again to turn off.

2. Height Adjustment

- Locate the 5-level height adjustment dial on the front of the vacuum's nozzle.
- Rotate the dial to select the appropriate height setting for your floor type:
 - **High Carpet:** For thick carpets or rugs.
 - **Low Carpet:** For low-pile carpets.
 - **Hard Floor:** For bare floors like hardwood, tile, or laminate.
- Adjust the height before turning on the vacuum for best results.

3. Using Attachments

- To use the hose and attachments, ensure the vacuum is in the upright position.
- Detach the hose from its storage clip and connect the desired tool (crevice tool, dusting brush, or upholstery tool) to the end of the hose or the telescoping extension wand.
- The vacuum's suction will divert to the hose for detailed cleaning.

4. Automatic Cord Rewind

- Once cleaning is complete, unplug the vacuum from the electrical outlet.
- Gently press the cord rewind button (typically located on the side or back of the vacuum) to automatically retract the power cord into the unit. Guide the cord to prevent tangling.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your Hoover vacuum cleaner.

1. Emptying the Dirt Cup

- Empty the dirt cup after each use or when debris reaches the MAX fill line.
- Press the release button to detach the dirt cup from the vacuum.
- Hold the dirt cup over a trash can and open the bottom flap to release debris.
- Close the flap securely and reattach the dirt cup to the vacuum.

2. Filter Cleaning/Replacement

- Refer to your specific model's instructions for filter location and cleaning frequency.
- Most filters can be rinsed under cold water. Allow them to air dry completely for at least 24 hours before reinserting.
- Replace filters as recommended by Hoover, typically every 6-12 months, depending on usage.

3. Brush Roll Cleaning

- Periodically check the brush roll for tangled hair, strings, or debris.
- Turn off and unplug the vacuum before attempting to clean the brush roll.
- Use scissors to carefully cut away any tangled material.

TROUBLESHOOTING

If you encounter issues with your vacuum, consult the table below for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum will not turn on.	Not plugged in; circuit breaker tripped; power button not pressed.	Ensure cord is securely plugged in; check household circuit breaker; press power button firmly.
Loss of suction.	Dirt cup full; filter clogged; hose or nozzle clogged; brush roll tangled.	Empty dirt cup; clean/replace filters; check hose/nozzle for obstructions; clean brush roll.
Vacuum not picking up debris.	Height adjustment incorrect; brush roll not spinning; clogs.	Adjust height setting; check brush roll for obstructions; clear any clogs.
Cord not rewinding.	Cord is jammed; rewind mechanism issue.	Gently pull out a small amount of cord and try rewinding again; ensure no kinks. If issue persists, contact support.

SPECIFICATIONS

Feature	Detail
Brand	Hoover
Model Name	Hoover WindTunnel Cord Rewind Pro Bagless Upright Vacuum Cleaner, For Carpet and Hard Floors, UH71300V, Black
Special Feature	Bagless
Filter Type	Cartridge
Included Components	Crevice Tool, Pivoting Dusting Brush, Telescoping Extension Wand, Upholstery Tool
Is Cordless?	No
Capacity	1.29 Liters
Recommended Uses For Product	Hard Floors, Carpets
Form Factor	Upright
Color	Black

Feature	Detail
Product Dimensions	15"L x 12"W x 35"H
Noise Level	79 dB
Manufacturer	Hoover
Number of Items	1
Controller Type	Push Button
Motor Horsepower	1.61 horsepower
Control Method	Touch
Style	Rewind
Number of Speeds	1
Portable	No
Number of Power Levels	1
Indoor/Outdoor Usage	Indoor
Global Trade Identification Number	00073502048610
UPC	073502048610
Item Weight	0.01 ounces
ASIN	B0B6Q1FDTJ
Item model number	UH71300
Specific instructions for use	Cleaning
Batteries required	No

WARRANTY & SUPPORT

Hoover products are manufactured with quality and reliability in mind. This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or visit the official Hoover website.

For further assistance, detailed instructions, or to view the complete user manual, please download the official PDF document:

[Download User Manual
\(PDF\)](#)

You can also visit the [Hoover Store on Amazon](#) for more product information and support.

© 2023 Hoover. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B6Q1FDTJ>

More documents and user manuals: <https://manuals.plus/>