

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Electactic](#) /

› [Electactic 24-Inch Electric Fireplace Stove Model S230B User Manual](#)

Electactic S230B

Electactic 24-Inch Electric Fireplace Stove

MODEL S230B USER MANUAL

1. Important Safety Instructions

Please read all instructions carefully before using this electric fireplace stove. Failure to follow these instructions may result in electric shock, fire, or personal injury.

- Always plug the fireplace directly into a wall outlet. Never use with an extension cord or relocatable power tap.
- Do not operate any fireplace with a damaged cord or plug, or if the heater malfunctions, has been dropped or damaged in any manner.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the fireplace.
- To prevent overheating, do not cover the heater.
- The air outlet is located at the top of the product. Ensure this area is not obstructed to maintain proper airflow and prevent safety hazards.
- This appliance is equipped with an automatic power-off function. If the fireplace is accidentally knocked over during use, it will automatically cut off power to enhance safety.

2. Product Overview

The Electactic 24-Inch Electric Fireplace Stove (Model S230B) is a free-standing infrared fireplace designed to provide warmth and ambiance. It features a realistic 3D flame effect with adjustable colors and brightness, two heating modes, and a convenient remote control.



Figure 1: Front view of the Electactic Electric Fireplace Stove with flames active.

3. Setup and Assembly

This section guides you through the initial setup and assembly of your electric fireplace stove.

3.1 Unpacking and Inspection

- Carefully remove all components from the packaging.
- Inspect the fireplace and all parts for any signs of damage. If any damage is found, do not use the appliance and contact customer support.
- Ensure all items listed in the 'What's in the Box' section are present.

Electactic

Black Electric Fireplace Stove



Figure 2: Product dimensions and included components.

3.2 Assembly of Legs

The fireplace stove requires minimal assembly, primarily attaching the four legs.

1. Carefully place the fireplace on a soft, non-abrasive surface to prevent scratching.
2. Attach each of the 4 legs to the bottom of the fireplace using the provided 8pcs M5*12 screws. A Phillips head screwdriver is required (not included).
3. Ensure all legs are securely fastened before placing the unit upright.

3.3 Placement

Choose a suitable location for your fireplace. Consider the following:

- Place the unit on a firm, level surface.
- Ensure there is adequate space around the unit for proper air circulation. Avoid placing it directly against a wall if it obstructs the rear air intake, as this can affect heating efficiency.
- Do not place the fireplace in an area where it could be easily tripped over or where the power cord could be damaged.

4. Operating Instructions

Your Electactic electric fireplace can be operated using the included remote control or the touch light panel on the unit.

4.1 Powering On/Off

- Plug the power cord into a standard 120V AC outlet.
- Press the **Power** button on the remote control or the touch panel to turn the appliance ON/OFF.

4.2 Adjusting Flame and Log Colors/Brightness

The fireplace features a curved LED screen for realistic 3D flame effects. You can customize the flame and log appearance.

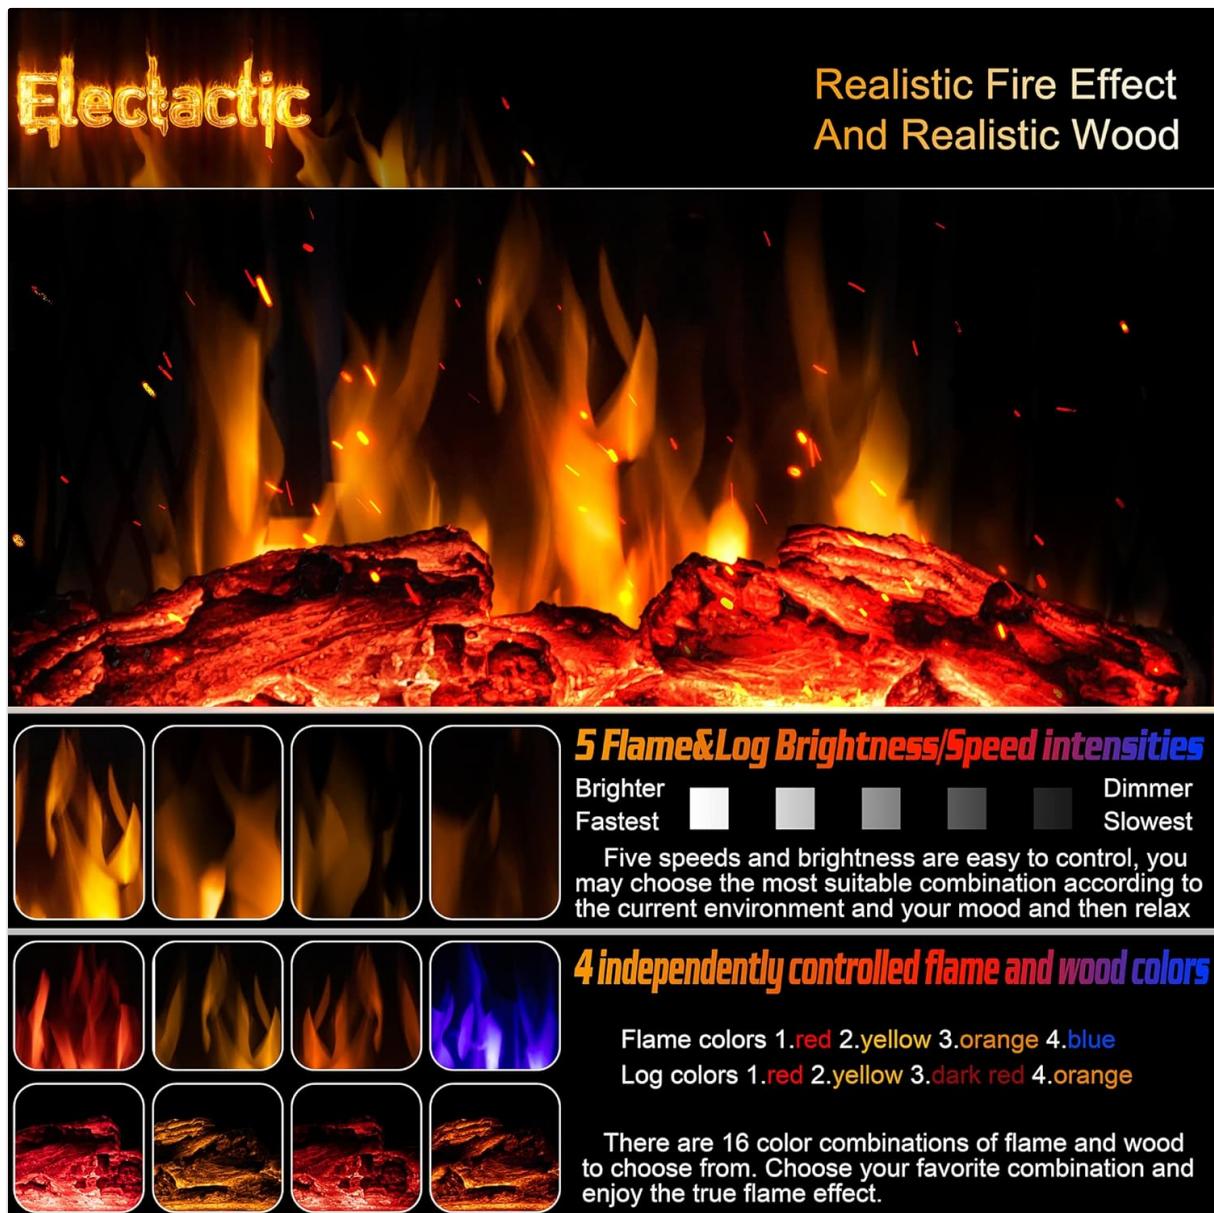


Figure 3: Flame and log color/brightness options.

- **Flame Colors:** Use the **Color A** button on the remote to cycle through 4 flame colors: Red, Yellow, Orange, Blue.
- **Log Colors:** Use the **Color B** button on the remote to cycle through 4 log colors: Red, Yellow, Dark Red, Orange.
- **Brightness:** Use the **Dimmer** button to adjust the flame and log brightness through 5 levels (L1-L5).
- **Flame Speed:** Use the **Flame Speed** button to adjust the flame movement speed through 5 levels (U1-U5).

- There are 16 different combinations of flame and log colors available.

4.3 Heating Functions

The fireplace offers two heating modes for efficient warmth.



Figure 4: Heating port location and power settings.

- Press the **Heater** button on the remote or touch panel to activate heating.
- The display screen will show the heating mode:**OFF** (no heater), **500W** (low heat), or **1500W** (high heat).
- The unit can heat up to 1,000 square feet.

4.4 Timer Function

Set a timer for automatic shut-off.



Remote&Touch Control

- Timer: Control the timer
- Heater: Control the heater
- Color A: Control the flame color
- Power: Turn the appliance ON/OFF
- Color B: Control the flame bed color
- Flame speed: Control the flame speed
- Dimmer: Control the flame and flame bed brightness



Figure 5: Remote control layout.

- Press the **Timer** button on the remote control.
- Cycle through the available timer settings (1-8 hours) to select your desired shut-off time.

4.5 Low Noise Operation

The fireplace operates at a low noise level, typically below 40dB, ensuring it does not disturb sleep or daily activities.



Safe And Efficient Heating



Figure 6: Illustration of low noise operation and timer convenience.

5. Maintenance

To ensure the longevity and optimal performance of your Electactic electric fireplace, follow these general maintenance guidelines:

- Cleaning:** Ensure the unit is turned off and unplugged before cleaning. Use a soft, damp cloth to wipe down the exterior surfaces. Do not use abrasive cleaners or sprays.
- Air Vents:** Periodically check and clean the air intake and outlet vents to ensure they are free from dust and debris. Blocked vents can reduce heating efficiency and pose a fire hazard.
- Storage:** If storing the fireplace for an extended period, unplug it and store it in a dry, cool location, preferably in its original packaging.

6. Troubleshooting

This section addresses common issues you might encounter with your electric fireplace.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Fireplace does not turn on.	Not plugged in; power outlet malfunction; power button not pressed.	Ensure the unit is securely plugged into a working outlet. Press the power button on the remote or touch panel.
No heat output.	Heater function not activated; low heat setting; obstructed air vents.	Press the heater button to select 500W or 1500W mode. Ensure air vents are clear.
Flame effect not visible or dim.	Brightness setting too low; unit off.	Adjust the brightness using the Dimmer button. Ensure the unit is powered on.
Unit automatically shuts off.	Overheat protection activated; unit was knocked over; timer expired.	Allow the unit to cool down. Ensure the unit is stable. Check timer settings.
Room not heating effectively.	Incorrect placement; large room size; low heat setting.	Ensure the unit is not placed directly against a wall, allowing for proper air intake. Select 1500W heating mode. Note that the unit is designed for rooms up to 1000 sq ft.

If you experience any issues not covered in this section, please contact customer support.

7. Specifications

Feature	Detail
Brand	Electactic
Model Name	S230B
Product Dimensions	23.5" L x 10.7" W x 24.3" H
Item Weight	33.2 Pounds
Material	Cast Iron
Power Source	Electric
Voltage	120VAC
Wattage	500W / 1500W
Amps	12.5 AMP
Heat Output	5100 BTU
Heating Coverage	Up to 1000 square feet

Feature	Detail
Special Features	4 Flame/Log Color, 5 Flame Speed, 5 Flame/Log Brightness, Remote control, Timer, Touch Button Light
Installation Type	Freestanding

8. Warranty and Support

8.1 Warranty Information

 
This product comes with a Free Return and Replacement warranty. Please refer to your purchase documentation for specific terms and conditions regarding returns and replacements.

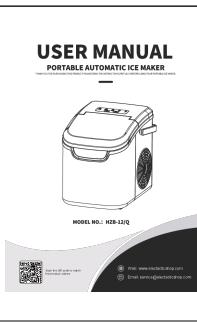
8.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact Electactic customer support through the retailer where the product was purchased. Keep your purchase receipt and model number (S230B) handy for faster service.

© 2025 Electactic. All rights reserved.

Related Documents - S230B

 <p>care & use ICE MAKER WITH WATER DISPENSERS MODEL NO.: HZB-15YLR</p> <p>Important Safety Information.....1 Before Using Your Unit.....2 Getting to Know Your Unit.....3 Using Your Unit.....5 Cleaning and Maintenance.....6 Troubleshooting Guide.....10</p> <p>For more information or to order replacement parts, visit www.electacticshop.com or call 1-800-555-1234. Email: service@electactic.com</p>	<p><u>Electactic HZB-15YLR Ice Maker with Water Dispenser: Care & Use Manual</u></p> <p>Official care and use manual for the Electactic HZB-15YLR Ice Maker with Water Dispenser. Learn about safety, operation, cleaning, and troubleshooting for your appliance.</p>
 <p>COFFEE MAKER INSTRUCTION MANUAL MODEL NO.: CM5418F-UL ITEM NO.: B08H9K00-STEEL</p> <p>For more information or to order replacement parts, visit www.electacticshop.com or call 1-800-555-1234. Email: service@electactic.com</p>	<p><u>Electactic CM5418F-UL Coffee Maker Instruction Manual</u></p> <p>Comprehensive instruction manual for the Electactic CM5418F-UL coffee maker, covering setup, operation, cleaning, maintenance, and troubleshooting. Learn how to make espresso, hot water, and frothed milk.</p>
 <p>Slow Juicer HGM-906 User Manual For more information or to order replacement parts, visit www.electacticshop.com or call 1-800-555-1234. Email: service@electactic.com</p> <p>For more information or to order replacement parts, visit www.electacticshop.com or call 1-800-555-1234. Email: service@electactic.com</p>	<p><u>Electactic HGM-906 Slow Juicer User Manual: Operation, Safety, and Maintenance Guide</u></p> <p>Comprehensive user manual for the Electactic HGM-906 Slow Juicer. Includes detailed safety precautions, component identification, operating instructions, cleaning and maintenance procedures, and troubleshooting guide.</p>

 <p>USER MANUAL PORTABLE AUTOMATIC ICE MAKER</p> <p>MODEL NO.: HZB-12/Q</p> <p>Scan the QR code to view the manual online.</p> <p>http://www.electacticshop.com</p> <p>www.electacticshop.com</p>	<p><u>User Manual: Portable Automatic Ice Maker HZB-12/Q</u></p> <p>This user manual provides instructions for operating, cleaning, and troubleshooting the HZB-12/Q portable automatic ice maker. It includes safety precautions, product features, and answers to frequently asked questions.</p>
 <p>USER MANUAL PORTABLE AUTOMATIC ICE MAKER</p> <p>MODEL NO.: HZB-12/U</p> <p>Scan the QR code to view the manual online.</p> <p>http://www.electacticshop.com</p> <p>www.electacticshop.com</p>	<p><u>Electactic Portable Automatic Ice Maker User Manual HZB-12/U</u></p> <p>Comprehensive user manual for the Electactic Portable Automatic Ice Maker, model HZB-12/U. Includes setup, operation, cleaning, maintenance, and troubleshooting guides.</p>
 <p>KETTLE USER MANUAL</p> <p>Model No.: OP-KT2218EB</p> <p>Read the boiler thoroughly before using and save it for future reference.</p> <p>http://www.electacticshop.com</p> <p>www.electacticshop.com</p>	<p><u>Electactic Kettle OP-KT2218EB User Manual - Safety, Operation, and Specifications</u></p> <p>Comprehensive user manual for the Electactic Kettle Model OP-KT2218EB. Includes important safety safeguards, how-to-use instructions, keep warm function, temperature conversion, plateau function, and product specifications. Learn how to safely operate and maintain your kettle.</p>