

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Lakeland](#) /

› [LAKELAND Dual Basket Air Fryer Instruction Manual](#)

Lakeland 26920

LAKELAND Dual Basket Air Fryer Instruction Manual

Model: 26920

INTRODUCTION

Thank you for choosing the Lakeland Dual Basket Air Fryer. This manual provides essential information for the safe and efficient operation of your new appliance. Please read it thoroughly before first use and keep it for future reference.

This 9-litre dual basket air fryer allows you to cook two different foods simultaneously at different temperatures and times, offering versatility and convenience for your cooking needs.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before use.
- Do not immerse the cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the baskets are properly inserted before operating.
- Avoid touching hot surfaces. Use handles or knobs.

PRODUCT OVERVIEW

The Lakeland Dual Basket Air Fryer features two independent cooking zones, each with its own basket and controls, allowing for flexible cooking.



Front view of the Lakeland Dual Basket Air Fryer, showcasing its sleek black design and dual control panels.

Components:

- **Main Unit:** Houses the heating elements and control panel.
- **Control Panel:** Digital display with touch controls for temperature, time, and cooking modes for each basket.
- **Cooking Baskets (x2):** Non-stick coated baskets for holding food.
- **Crisper Plates (x2):** Removable plates placed inside the baskets for air circulation.
- **Handles (x2):** Ergonomic handles for safe removal of baskets.



The Lakeland Dual Basket Air Fryer positioned on a kitchen counter, demonstrating its compact size and how it fits into a home environment.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.

- Cleaning:** Before first use, wash the cooking baskets and crisper plates with warm, soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
- Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls and other appliances to allow for proper air circulation. Ensure there is at least 15cm of clear space around the unit.
- Power Connection:** Plug the power cord into a grounded electrical outlet.
- Initial Run (Optional but Recommended):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C to burn off any manufacturing residues. A slight odor may be present, which is normal. Ensure good ventilation during this process.

OPERATING INSTRUCTIONS

Basic Operation:

- Prepare Food:** Place your ingredients into the cooking baskets. Do not overfill the baskets to ensure even cooking.
- Insert Baskets:** Slide the baskets firmly into the main unit until they click into place.
- Power On:** Press the power button on the control panel. The display will illuminate.
- Select Basket:** Choose which basket you want to program (Basket 1 or Basket 2).
- Set Temperature:** Use the temperature control buttons to adjust the desired cooking temperature. The temperature range is typically 80°C to 200°C.
- Set Time:** Use the timer control buttons to set the cooking time. The timer can usually be set from 1 to 60 minutes.
- Start Cooking:** Press the start/pause button to begin the cooking cycle.
- Shake/Flip (Optional):** For best results, especially with items like chips or vegetables, shake or flip the food halfway through the cooking time. The air fryer may pause automatically when a basket is removed.
- Finish Cooking:** The air fryer will beep when the cooking time is complete. Carefully remove the baskets using the handles.



The air fryer with both baskets pulled out, revealing cooked food such as chips and a piece of fish, ready to be served.

Using Dual Baskets:

The Lakeland Dual Basket Air Fryer allows you to cook two different items simultaneously. You can set independent temperatures and times for each basket.

- Program Basket 1 with its desired settings.

- Program Basket 2 with its desired settings.
- Press the start button. Both baskets will begin cooking according to their individual programs.
- Use the 'Sync Finish' function (if available on your model) to ensure both baskets complete cooking at the same time, even if they have different cooking times.



A close-up overhead shot of perfectly cooked sweet potato fries and steak, demonstrating the quality of food achievable with the air fryer.

Pre-set Functions:

Your air fryer may come with pre-set cooking functions for common foods. Refer to the icons on the control panel for specific programs like chips, chicken, fish, etc. Selecting a pre-set will automatically apply a recommended temperature and time, which can then be adjusted manually if needed.

MAINTENANCE AND CLEANING

Regular cleaning will ensure the longevity and optimal performance of your air fryer.

1. Unplug and Cool: Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.

2. Clean Baskets and Crisper Plates:

- Wash the baskets and crisper plates with hot, soapy water using a non-abrasive sponge.
- For stubborn food residue, soak the baskets in warm, soapy water for about 10-15 minutes before cleaning.
- The baskets and crisper plates are generally dishwasher safe, but hand washing is recommended to prolong the non-stick coating.
- Ensure they are completely dry before reinserting into the unit.

3. Clean Main Unit:

- Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
- Clean the interior of the air fryer with a damp cloth. If necessary, use a soft brush to remove any food debris from the heating element.
- Never immerse the main unit in water or any other liquid.

4. Storage: Store the air fryer in a cool, dry place with the power cord neatly wrapped.



A close-up view of one of the air fryer baskets, removed from the unit, filled with uncooked sweet potato cubes, ready for air frying.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; basket not properly inserted.	Ensure the power cord is securely plugged into a working outlet. Check if the baskets are fully pushed in until they click.
Food is not cooked evenly.	Baskets are overcrowded; food not shaken/flipped.	Do not overfill baskets. Shake or flip food halfway through cooking for even results.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food cooking.	Clean the baskets and crisper plates thoroughly after each use. For high-fat foods, consider using baking paper or draining excess fat.
Chips are not crispy.	Too much oil; not enough shaking; wrong potato type.	Use only a small amount of oil. Shake chips frequently. Use fresh, dry potatoes suitable for frying.

SPECIFICATIONS

- Brand:** Lakeland
- Model Number:** 26920
- Capacity:** 9 Litres (total)
- Power / Wattage:** 1700 watts
- Voltage:** 230V (AC)
- Material:** Stainless Steel
- Colour:** Black
- Product Dimensions:** 36 x 31 x 40 cm (L x W x H)
- Item Weight:** 9.38 kg
- Special Features:** Temperature Control, Dual Baskets

WARRANTY AND SUPPORT

Lakeland products are manufactured to the highest quality standards. For warranty information, product support, or to purchase replacement parts, please visit the official Lakeland website or contact their customer service directly.

Official Lakeland Website: www.lakeland.co.uk

Please retain your proof of purchase for any warranty claims.

© 2024 Lakeland. All rights reserved.

Related Documents - 26920

<p>LAKELAND AIR FRYER OVEN INSTRUCTION BOOKLET</p>  <p>Model 26921</p>	<p>Lakeland Air Fryer Oven 26921 Instruction Manual</p> <p>Comprehensive instruction booklet for the Lakeland Air Fryer Oven Model 26921. Learn about product features, operation, safety, cooking guides, recipes, and troubleshooting.</p>
<p>LAKELAND INSTRUCTION BOOKLET DIGITAL COMPACT AIR FRYER</p>  <p>Model 61772</p>	<p>Lakeland Digital Compact Air Fryer 61772 Instruction Manual</p> <p>Comprehensive instruction manual for the Lakeland Digital Compact Air Fryer (Model 61772), detailing features, operation, safety, cleaning, recipes, and troubleshooting for healthier cooking with hot air.</p>
<p>LAKELAND INSTRUCTION BOOKLET OMELETTE MAKER</p>  <p>Model 62158</p>	<p>Lakeland Omelette Maker Instruction Booklet and Recipes</p> <p>Comprehensive instruction booklet for the Lakeland Omelette Maker (Model: 62158), including product features, safety precautions, usage instructions, tips, recipes, FAQs, care, and electrical information.</p>
<p>LAKELAND BREAD MAKER PLUS INSTRUCTION BOOKLET</p>  <p>Model 33362</p>	<p>Lakeland Bread Maker Plus 33362 Instruction Manual and Recipes</p> <p>Comprehensive instruction manual and recipe guide for the Lakeland Bread Maker Plus (Model 33362), covering setup, operation, 15 programmes, troubleshooting, and care.</p>

LAKELAND

INSTRUCTION BOOKLET

MULTICOOKER



Model: 31788

[Lakeland Multicooker Model 31788: Instruction Booklet](#)

Comprehensive instruction booklet for the Lakeland Multicooker, model 31788, detailing its 20 cooking programmes, operation, safety, recipes, and care.

[Lakeland SuperChef 15312 Multifunctional Cooker User Manual](#)

Comprehensive user manual for the Lakeland SuperChef 15312 multifunctional cooker, detailing its features, operation, safety precautions, cooking functions, troubleshooting guide, and care instructions.