

[Manuals.plus](#) /

› [Daewoo](#) /

› Daewoo Rechargeable Bluetooth Party Speaker with LED Lights User Manual

Daewoo B0B6SQ3716

Daewoo Rechargeable Bluetooth Party Speaker

MODEL: B0B6SQ3716

Introduction

Thank you for choosing the Daewoo Rechargeable Bluetooth Party Speaker. This speaker is designed to provide powerful audio and vibrant LED lighting for various occasions. This manual provides essential information for safe operation, setup, and maintenance of your device. Please read it thoroughly before use and retain it for future reference.



Image: The Daewoo Rechargeable Bluetooth Party Speaker, showcasing its sleek design and illuminated LED rings.

Safety Information

- Do not expose the speaker to water or excessive moisture. This product is not water-resistant.
- Avoid placing the speaker near heat sources or in direct sunlight.
- Do not attempt to disassemble or modify the speaker. Refer all servicing to qualified personnel.
- Use only the specified charging cable and power source.
- Keep out of reach of children.
- Ensure proper ventilation around the speaker during use.

Package Contents

Please check that all items are present:

- Daewoo Rechargeable Bluetooth Party Speaker
- Micro USB Charging Cable
- User Manual

Product Overview & Controls

The Daewoo Party Speaker features powerful audio output, vibrant LED lights, and multiple connectivity options. Familiarize yourself with the control panel for optimal use.



Image: Close-up of the speaker's side control panel, indicating the Power On/Off switch, Volume Control, DC5V charging port, Mode button, track controls, LED Mode button, Repeat button, USB/TF Card slot, Mic In, AUX In, Echo control, and Mic Volume.

1. **Power On/Off Switch:** Toggles the speaker power.
2. **Volume Control:** Adjusts the main speaker volume.

3. **DC5V Charging Port:** Connects the Micro USB charging cable.
4. **Mode Button:** Switches between Bluetooth, USB, TF Card, and AUX input modes.
5. **Previous Track/Rewind:** Skips to the previous track or rewinds within a track.
6. **Play/Pause:** Plays or pauses audio playback.
7. **Next Track/Fast Forward:** Skips to the next track or fast forwards within a track.
8. **LED Mode Button:** Changes the LED light patterns or turns them off.
9. **Repeat Button:** Repeats the current track or playlist (functionality may vary by mode).
10. **USB/TF Card Slot:** Insert USB flash drives or TF (Micro SD) cards for audio playback.
11. **MIC IN:** Connect a microphone for karaoke or announcements.
12. **AUX IN:** Connect external audio devices using a 3.5mm audio cable.
13. **Echo Control:** Adjusts the echo effect for the microphone.
14. **MIC Volume:** Adjusts the microphone volume independently.

Setup

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the Micro USB charging cable to the DC5V port on the speaker and the other end to a compatible USB power adapter (not included) or a computer USB port. The charging indicator will illuminate. A full charge takes approximately 3-5 hours and provides about 3 hours of playback time.

2. Powering On/Off

Locate the Power On/Off switch on the control panel. Slide the switch to the 'ON' position to power on the speaker. Slide it to the 'OFF' position to power off the speaker.

Operating Instructions

1. Bluetooth Pairing

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED on the display.
2. On your smartphone, tablet, or other Bluetooth-enabled device, enable Bluetooth and search for available devices.
3. Select "DAEWOO SPEAKER" from the list of devices.
4. Once paired, the speaker will emit a confirmation tone, and the LED indicator will stop flashing.
5. You can now play audio from your device through the speaker. The speaker has a Bluetooth range of up to 10 meters.

2. USB/TF Card Playback

1. Insert a USB flash drive or TF (Micro SD) card containing MP3 audio files into the respective slot on the control panel.
2. The speaker will automatically switch to USB/TF mode and begin playing audio. If not, press the 'Mode' button to select the correct input.
3. Use the Previous/Next Track buttons to navigate through your music.

3. AUX Input

1. Connect one end of a 3.5mm audio cable (not included) to the AUX IN port on the speaker.
2. Connect the other end of the cable to the headphone jack or audio output of your external device.
3. Press the 'Mode' button until "AUX" is displayed or the speaker switches to AUX mode.
4. Play audio from your external device.

4. Microphone Usage

1. Connect a microphone (not included) to the MIC IN port.
2. Adjust the 'MIC Volume' knob to control the microphone's output level.
3. Use the 'Echo Control' knob to add or remove an echo effect to your voice.

5. LED Light Control

Press the 'LED Mode' button to cycle through different light patterns and colors. Press it repeatedly to find your preferred lighting effect or to turn the lights off.



LED lights displaying orange and pink hues.



LED lights displaying green hues.



LED lights displaying blue hues.

Maintenance

- **Cleaning:** Wipe the speaker's exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

Troubleshooting

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker using the Micro USB cable.
No sound from the speaker.	Volume is too low; Incorrect mode selected; Device not properly connected.	Increase speaker volume and source device volume; Press 'Mode' button to select correct input; Re-pair Bluetooth or re-connect AUX/USB/TF.
Bluetooth device cannot pair.	Speaker not in pairing mode; Device too far; Interference.	Ensure speaker is in Bluetooth mode (flashing LED); Move device closer to speaker (within 10m); Turn off other Bluetooth devices.
LED lights are not working.	Lights are turned off or in a static mode.	Press the 'LED Mode' button to cycle through light patterns or turn them on.

Specifications

Feature	Detail
Brand	Daewoo
Model Name	Daewoo Haut-parleur LED Bluetooth Party
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth

Feature	Detail
Power Source	Cable Electric (Rechargeable Battery)
Special Features	USB Port, LED Lights
Speaker Maximum Output Power	15 Watts PMPO (2 speakers)
Battery Capacity	1800 mAh
Battery Life	Approx. 3 hours
Bluetooth Version	JL4.2
Dimensions (L x W x H)	22.8 x 26.5 x 40.8 cm
Weight	2.74 kilograms
Water Resistance Level	Not Water Resistant

Warranty and Support

This product comes with a manufacturer's warranty. Please refer to the warranty card included in your package or contact Daewoo customer support for detailed information regarding warranty terms and service. For technical assistance or inquiries, please visit the official Daewoo website or contact their customer service department.

© 2023 Daewoo. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B6SQ3716>

More documents and user manuals: <https://manuals.plus/>