

NBCP B0B6VCFRXG

NBCP Wireless Guitar Controller for PC and PS3 - Instruction Manual

Model: B0B6VCFRXG

1. INTRODUCTION

This manual provides detailed instructions for setting up, operating, and maintaining your NBCP Wireless Guitar Controller. This controller is designed for an authentic music gaming experience on both PC and PlayStation 3 platforms.

Compatibility:

- **PC Platform:** Supports Guitar Hero 3, Guitar Hero 3 Legends Of Rock, Guitar Hero World Tour, Guitar Hero Aerosmith, and Clone Hero games.
- **PS3 Platform:** Supports Guitar Hero 3, Guitar Hero 4, Guitar Hero 5, Rock Band 1, and Rock Band 2.

2. WHAT'S IN THE BOX

- 1 x NBCP Wireless Guitar Controller (Main Body)
- 1 x Guitar Neck (Fretboard)
- 1 x Wireless USB Dongle
- 1 x Shoulder Strap
- 1 x Whammy Bar

Note: Standard LR6 (AA) batteries are required and not included. Users need to purchase them separately.

3. PRODUCT OVERVIEW

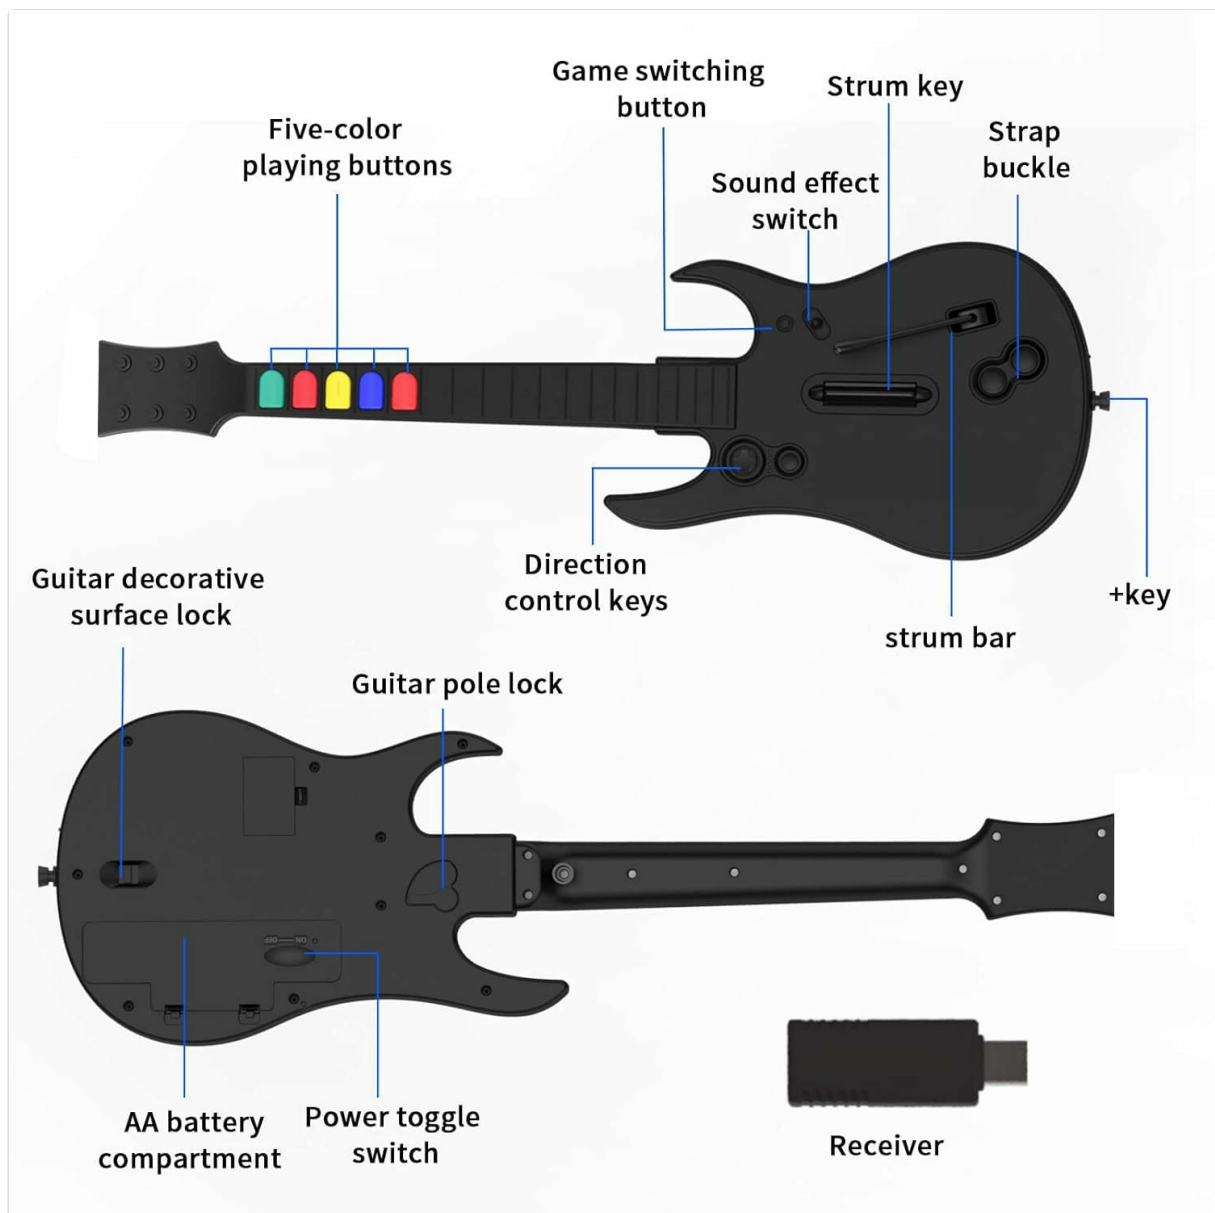


Figure 3.1: Labeled diagram of the NBCP Wireless Guitar Controller components.

1. **Five-color Playing Buttons:** Green, Red, Yellow, Blue, Orange fret buttons for gameplay.
2. **Game Switching Button:** Used to switch between game modes (e.g., Guitar Hero, Rock Band).
3. **Strum Key (Strum Bar):** Up and down strumming for note input.
4. **Strap Buckle:** Attachment point for the shoulder strap.
5. **Sound Effect Switch:** Adjusts sound effects.
6. **Direction Control Keys:** Navigation buttons.
7. **Guitar Decorative Surface Lock:** Secures the guitar body.
8. **Guitar Pole Lock:** Secures the guitar neck to the body.
9. **AA Battery Compartment:** Holds LR6 (AA) batteries.
10. **Power Toggle Switch:** Turns the guitar controller on/off.
11. **Receiver (USB Dongle):** Wireless receiver for PC/PS3 connection.

4. SETUP

4.1. Assembly

1. Carefully unpack all components.

2. Align the guitar neck with the main body and slide it into place until it clicks securely. Ensure the guitar pole lock is engaged.
3. Insert the whammy bar into its designated slot on the guitar body.
4. Attach the shoulder strap to the strap buckles on the guitar body if desired.

4.2. Battery Installation

1. Locate the AA battery compartment on the back of the guitar body.
2. Open the compartment cover.
3. Insert the required LR6 (AA) batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

4.3. Connecting to PC/PS3

The controller uses 2.4G Wireless Transmission Technology for connection.

1. Insert the wireless USB dongle into an available USB port on your PC or PS3 console.
2. Turn on the guitar controller using the power toggle switch.
3. The controller should automatically connect to the dongle. An indicator light on the guitar will confirm connection.



Figure 4.1: Wireless connection to PC.

FOR PS3



Figure 4.2: Wireless connection to PS3.

5. OPERATING INSTRUCTIONS

5.1. Game Mode Switching

The controller features a game switching button to optimize performance for different game types. Press the Game Switching Button (refer to Figure 3.1) to toggle between modes. If successfully switched to Rock Band game mode, the red light on the receiver will illuminate.

One-Click Switch Game Mode



Figure 5.1: One-click switch game mode.

5.2. PC Game Configuration (Clone Hero)

For PC games like Clone Hero, it is crucial to configure the guitar as a keyboard input, not a mouse or controller. Follow these steps for optimal setup:

1. Launch Clone Hero.
2. From the main menu, press the Spacebar on your computer keyboard to enter the key function setting interface.
3. Click on each action (e.g., Green Button, Red Button, Strum Up, Strum Down) in the 'Keyboard' column.
4. When prompted, press the corresponding button on your guitar controller to assign it. For 'Orange Button', press and hold the key for 1 second. For 'Select Button (Star Power)', tilt the guitar vertically.
5. For 'Whammy Axis +', continuously press the whammy bar and release it once the setting is successful.
6. Once all keys are assigned, click 'Done' to save your settings.

Video 5.1: Clone Hero setup tutorial for PC guitar. This video demonstrates the step-by-step process of configuring the guitar controller as a keyboard input in Clone Hero.

Video 5.2: Gaming Clone Hero Guitar for PC and PS3. This video showcases the guitar controller in action with Clone Hero

Support Various Guitar Games for PC/PS3



Figure 5.2: Compatible games for PC and PS3 platforms.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your guitar controller.

- **Cleaning:** If the metal probe of the guitar rod appears white or black, indicating an oxide coating, gently wipe it with an alcohol cloth or eraser.
- **Storage:** After playing, place the guitar flat on a desktop. Do not store the PC guitar vertically, as there is a bead explosion switch inside that can be activated, potentially causing computer abnormalities. If stored vertically, turn off the power switch promptly.
- **General Care:** Keep the controller away from extreme temperatures, moisture, and direct sunlight. Avoid dropping or subjecting it to strong impacts.

7. TROUBLESHOOTING

If you encounter issues with your NBCP Wireless Guitar Controller, refer to the following common problems and solutions:

- **No Guitar Indicator Light:**
Check if the positive and negative poles of the batteries in the guitar are installed correctly. Ensure the batteries are not depleted.
- **Rock Band Game Mode Not Working Properly:**
Verify that the guitar is successfully switched to Rock Band game mode. The red light on the receiver should be on when in this mode.
- **Pressure Bar Has No Function or is Abnormal:**
Do not touch the pressure bar before turning on the guitar's power switch. If this occurs, turn off the power switch and then turn it on again.
- **Guitar Stick Without Function:**
Check if the metal probe of the guitar rod is oxidized. Ensure the position probe of the guitar rod connected to the main body is not bent or blocked. If oxidation is present (white or black appearance), gently wipe the metal probe with an alcohol cloth or eraser.

8. SPECIFICATIONS

Feature	Detail
Model Number	B0B6VCFRXG
Brand	NBCP
Connectivity	2.4G Wireless
Compatible Platforms	PC (Windows), PlayStation 3
Power Source	LR6 (AA) Batteries (not included)
Product Dimensions	16.93 x 12.99 x 2.56 inches
Item Weight	3.05 pounds

9. WARRANTY AND SUPPORT

NBCP is committed to providing high-quality gaming accessories. If you have any questions or encounter issues with your product, please do not hesitate to contact us.

- **Satisfaction Guarantee:** We offer a 100% satisfaction guarantee. If there is a problem with your product, you may request a refund, which will be processed within 24 hours.
- **Customer Service:** Our customer service team is available 24/7 and aims to provide replies and troubleshooting assistance within 24-48 hours.