

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ProfiCook](#) /

› [ProfiCook PC-WKS 1228 Glass and Stainless Steel Kettle User Manual](#)

## ProfiCook PC-WKS 1228

# ProfiCook PC-WKS 1228 Glass and Stainless Steel Kettle User Manual

Model: PC-WKS 1228

[Safety Instructions](#)   [Components](#)   [Setup](#)   [Operating](#)  
[Instructions](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## INTRODUCTION

Thank you for choosing the ProfiCook PC-WKS 1228 Glass and Stainless Steel Kettle. This manual provides important information regarding the safe and efficient use of your appliance. Please read it thoroughly before first use and keep it for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions carefully before operating the appliance.
- Do not immerse the kettle, power base, cord, or plug in water or other liquids.
- This appliance is for household use only.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Always place the kettle on a firm, flat, heat-resistant surface.
- Do not operate the kettle if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Keep the appliance and its cord out of reach of children.
- Do not allow the power cord to hang over the edge of a table or counter, or touch hot surfaces.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Avoid contact with steam escaping from the spout or lid when water is boiling.
- Always ensure the lid is securely closed before operating.
- Do not fill above the maximum fill line (0.5L) or below the minimum fill line (0.2L) to prevent dry boiling or splashing.
- The kettle features dry-boil protection and automatic shut-off for safety.
- Only use the kettle with its supplied power base.
- Do not use the appliance for purposes other than its intended use.

## PRODUCT COMPONENTS

---

Familiarize yourself with the parts of your ProfiCook PC-WKS 1228 kettle:

- **Glass Body:** Heat-resistant safety glass with water level indicator (Min 0.2L / Max 0.5L).
- **Stainless Steel Housing:** Base and upper rim.
- **Lid:** With automatic filling opening for one-hand operation.
- **Handle:** Ergonomically designed for comfortable grip.
- **On/Off Switch:** Illuminated with blue LED when operating.
- **Power Base:** 360° rotatable connection with cord winder.
- **Concealed Stainless Steel Heating Element:** For efficient heating.
- **Anti-calc Filter:** Integrated in the spout.



Image: The ProfiCook PC-WKS 1228 kettle showing its glass body, stainless steel base, handle, and blue LED illumination during operation. Water level markings for 0.2L and 0.5L are visible.

# Glas- & Edelstahlgehäuse Blau beleuchteter Wassertank



0,5  
Liter



1100  
Watt



BPA  
Frei



Image: A visual representation of the kettle's key features: 0.5 liter capacity, 1100 Watt power, and BPA-free construction, alongside the kettle itself.

## SETUP AND FIRST USE

- Unpacking:** Carefully remove the kettle and all accessories from the packaging. Dispose of packaging materials responsibly.
- Initial Cleaning:** Before first use, fill the kettle with clean water up to the MAX (0.5L) mark. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
- Placement:** Place the power base on a stable, flat, heat-resistant, and dry surface. Ensure the power cord is not dangling or in contact with hot surfaces.
- Power Connection:** Unwind the power cord from the base to the desired length and plug it into a grounded electrical outlet (220-240V, 50-60Hz).

## OPERATING INSTRUCTIONS

### 1. Filling the Kettle:

Open the lid by pressing the button on the handle or use the automatic filling opening in the lid for one-hand

operation. Fill the kettle with the desired amount of water. Do not fill below the MIN (0.2L) mark or above the MAX (0.5L) mark. Overfilling may cause boiling water to splash out.



## Selbstschließende Einfüllöffnung im Deckel

Image: A hand filling the kettle directly from a tap, demonstrating the convenient automatic filling opening in the lid for one-hand operation.

- Closing the Lid:** Ensure the lid is securely closed after filling.
- Placing on Base:** Place the kettle firmly onto the power base. The 360° rotatable connection allows for easy placement from any angle.
- Switching On:** Press the On/Off switch located on the handle downwards. The blue LED illumination will light up, indicating that the kettle is heating.
- Boiling Process:** The water will begin to heat. The blue LED will remain lit during the boiling process.
- Automatic Shut-off:** Once the water has boiled, the kettle will automatically switch off, and the blue LED illumination will turn off. You can also manually switch off the kettle at any time by lifting the On/Off switch.
- Pouring Water:** Carefully lift the kettle from its base and pour the hot water. Be cautious of steam.
- Re-boiling:** If you need to re-boil water, wait a few moments for the internal thermostat to reset before pressing the On/Off switch again.



## **Komfortable 360° drehbare Steckverbindung**

Image: The kettle placed on its power base, illustrating the 360-degree rotatable connection for ease of use.

# Automatische & manuelle Abschaltung



Image: A close-up of the kettle's handle and base, highlighting the On/Off switch which provides both automatic and manual shut-off functionality.

## CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your kettle.

- Before Cleaning:** Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- Exterior Cleaning:** Wipe the exterior of the kettle and the power base with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- Interior Cleaning:** The interior of the glass body can be cleaned with a soft brush or sponge. Rinse thoroughly with clean water.
- Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas.
  - Fill the kettle with a mixture of water and white vinegar (e.g., 1 part vinegar to 2 parts water) or a commercial descaling solution.

- Boil the mixture and let it stand for at least 30 minutes, or longer for heavy deposits.
- Empty the kettle and rinse thoroughly several times with fresh water to remove any vinegar residue and smell.
- Repeat if necessary.

5. **Anti-calc Filter:** The integrated anti-calc filter can be removed for cleaning. Rinse it under running water and reinsert it correctly.
6. **Storage:** When not in use, store the kettle in a dry place. The power cord can be wound around the cord winder in the base.

## TROUBLESHOOTING

| Problem                                | Possible Cause  | Solution  |
|--|---|---|
| Kettle does not switch on.             | No power supply. Kettle not properly placed on base.  | Check if the plug is securely in the outlet. Ensure the kettle is correctly seated on the power base. |
| Kettle switches off before boiling.    | Too little water (below MIN mark). Limescale buildup. | Ensure water level is between MIN and MAX. Descaling the kettle.                                      |
| Water tastes strange or has particles. | New kettle residue. Limescale buildup.                | Perform initial cleaning steps (boil and discard water several times). Descaling the kettle.          |
| Kettle leaks.                          | Lid not closed properly. Overfilling.                 | Ensure the lid is securely closed. Do not fill above the MAX line.                                    |

If the problem persists after trying these solutions, please contact customer support.

## TECHNICAL SPECIFICATIONS

**Model:** PC-WKS 1228

**Model Number:** 501228

**Brand:** ProfiCook

**Capacity:** 0.5 Liters (500 Milliliters)

**Power:** 900-1100 Watts

**Voltage:** 220-240V, 50-60Hz

**Material:** Heat-resistant safety glass, Stainless steel

**Dimensions (L x W x H):** 10.7 x 17 x 18.7 cm

**Weight:** 750 g

**Special Features:** Blue LED illumination, 360° rotatable base, Water level indicator, Automatic/Manual shut-off, Dry-boil/Overheat protection, Concealed stainless steel heating element, BPA-free.

## WARRANTY AND CUSTOMER SUPPORT

ProfiCook products are manufactured with care and undergo strict quality controls. This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.

For technical assistance, spare parts, or warranty claims, please contact your retailer or the ProfiCook customer service department. Contact information can typically be found on the official ProfiCook website or in your product documentation.

**Availability of spare parts:** 1 Year (as per product specifications).

© 2024 ProfiCook. All rights reserved.