

[Manuals.plus](#) /

> [MOKOQI](#) /

> MOKOQI Dinosaur Night Light Projector Instruction Manual

MOKOQI 012-1361B

MOKOQI Dinosaur Night Light Projector

Model: 012-1361B

Brand: MOKOQI

INTRODUCTION

The MOKOQI Dinosaur Night Light Projector is designed to create a magical and calming environment for children. Featuring 17 vibrant color modes and 360-degree rotation, this projector displays captivating dinosaur and Christmas-themed patterns on walls and ceilings. It serves as an ideal nightlight, promoting peaceful sleep and stimulating imagination for children aged 3-8 years. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your projector.

KEY FEATURES

- **Dinosaur Light for Kids:** Projects soft, non-glaring dinosaur patterns, ideal for children aged 3-5 years, fostering happiness and aiding sleep.
- **Ideal Birthday Gift:** Creates a vivid dinosaur world, stimulating exploration and imagination for boys aged 3-10.
- **Easy Operation:** Features four intuitive buttons (A for timer, B for spin, C for color change, D for night light mode) for simple control.
- **Dual Power Supply:** Can be powered via USB connection or 4 AAA batteries (not included). *Important: Do not use USB and batteries simultaneously to prevent damage.*
- **Two Projector Film Designs:** Includes interchangeable films for Dinosaur patterns and Christmas elements, offering versatile projection themes.
- **17 Lighting Effects:** The 360-degree rotation LED light projector provides a wide range of visual effects for an immersive experience.



Figure 1: MOKOQI Dinosaur Night Light Projector in a child's room, projecting vibrant dinosaur patterns.

SETUP GUIDE

- 1. Unpacking:** Carefully remove the projector and all accessories from the packaging. Ensure all components are present: the projector unit, USB cable, and two film options (Dinosaur and Christmas).
- 2. Power Supply:**
 - **USB Connection:** Connect the provided USB cable to the projector's power input and plug the other end into a 5V 1A power adapter (not included) or a compatible USB port (e.g., computer, power bank).
 - **Battery Power:** Open the battery compartment on the bottom of the projector and insert 4 AAA batteries (not included), ensuring correct polarity.
 - *Caution: Do not use both USB power and batteries simultaneously, as this can shorten the product's lifespan.*



Figure 2: Powering the projector via USB or AAA batteries.

3. Film Installation:

- The projector comes with two interchangeable films: Dinosaur patterns and Christmas elements.
- To change films, gently remove the top dome. Place the desired film onto the internal projection surface, ensuring it sits securely.
- If using the Dinosaur film, ensure the Christmas element film cover is removed for optimal projection clarity.



Dinosaur Night Light

Figure 3: Interchangeable film designs for varied projections.

OPERATING INSTRUCTIONS

The MOKOQI Night Light Projector features four control buttons (A, B, C, D) located on its base for easy operation.

Button	Function	Description
A	Timer Setting	Press to set a countdown timer for automatic shut-off. The display will show the remaining time.
B	Rotation Function	Activates or deactivates the 360-degree rotation of the projected patterns.
C	Color Change	Cycles through 17 different color combinations for the projection.
D	Night Light Mode	Activates a soft, single-color night light mode.

Visual Demonstration

Your browser does not support the video tag.

Video 1: Demonstration of the MOKOQI Night Light Projector's timer and color changing functions. This video shows how to set the timer and cycle through various light colors, providing a clear visual guide for operation.

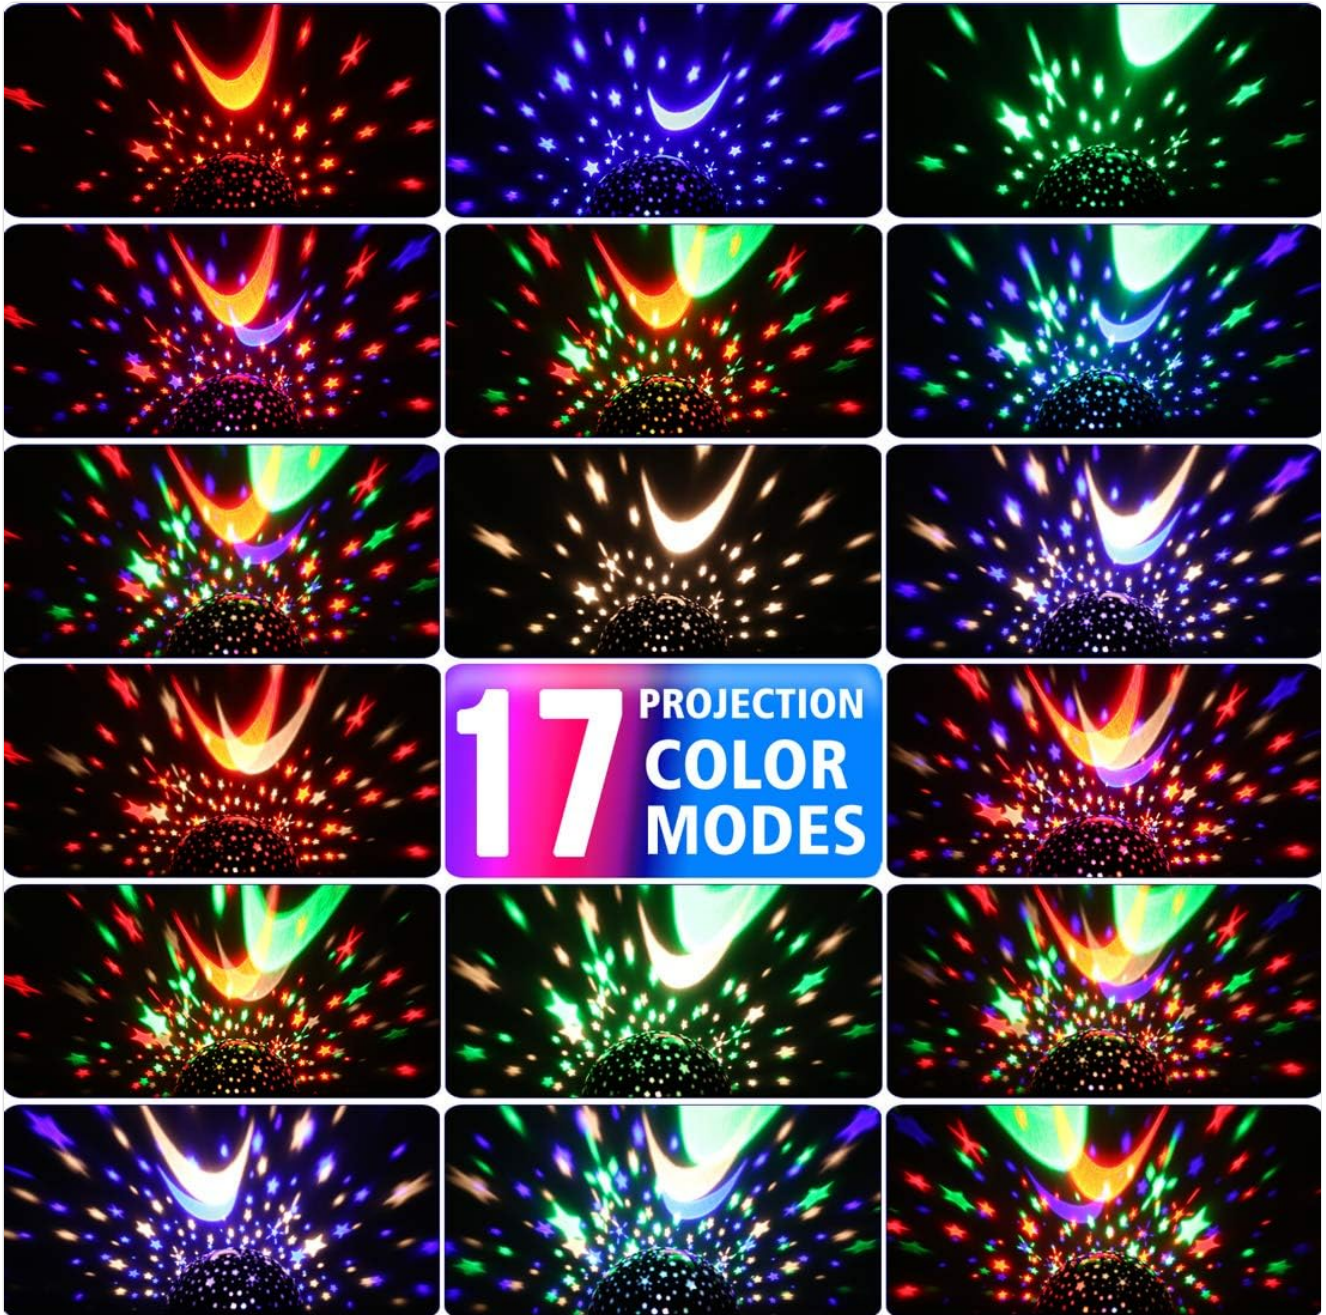


Figure 4: Visual representation of the 17 available projection color modes.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to gently wipe the surface of the projector. Do not use abrasive cleaners or solvents.
- **Avoid Water:** This product is not waterproof. Keep it away from water and high humidity to prevent damage.
- **Storage:** When not in use for extended periods, store the projector in a cool, dry place. If using batteries, remove them before storage to prevent leakage.
- **Film Care:** Handle the projection films carefully to avoid scratches or damage, which can affect projection clarity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Projector does not turn on.	No power, or incorrect power source usage.	Ensure USB cable is securely connected to a 5V 1A adapter or port. If using batteries, check that they are correctly inserted and not depleted. Do not use USB and batteries simultaneously.
Projection is blurry or unclear.	Incorrect film installation or damaged film.	Ensure the chosen film is properly seated and the clear protective cover (if any) is removed. Check the film for scratches or dust.
Rotation function is not working.	Rotation motor issue or incorrect button press.	Press button 'B' to activate rotation. Ensure the projector is on a stable, flat surface.
Light output is dim.	Low battery power.	Replace batteries or switch to USB power.

SPECIFICATIONS

Attribute	Detail
Brand	MOKOQI
Model Number	012-1361B
Product Dimensions	5.51"D x 5.63"W x 6.34"H
Item Weight	14.9 ounces
Material	Plastic
Light Source Type	LED
Power Source	Battery Powered (4x AAA, not included) / USB
Voltage	5 Volts
Brightness	2 Lumen
Special Feature	Color Changing, 360° Rotation
Control Method	Push Button
Age Range (Description)	3-5 years (Recommended)

WARRANTY AND SUPPORT

MOKOQI offers a non-hassle return policy within 30 days of purchase. For any issues or inquiries regarding your Dinosaur Night Light Projector, please contact MOKOQI customer support via email. We are committed to providing the highest standard of service.

