

DBFAIRY DMO-300

DBFAIRY 24-inch LED Christmas Snowflake Light Instruction Manual

Model: DMO-300

INTRODUCTION

This manual provides instructions for the safe and proper installation, operation, and maintenance of your DBFAIRY 24-inch LED Christmas Snowflake Light. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INFORMATION

Observe the following safety precautions to prevent injury or damage to the product:

- Ensure the product is unplugged before installation, maintenance, or when not in use.
- This product is designed for both indoor and outdoor use. However, the plug must be kept in dry conditions to prevent electrical hazards.
- Do not attempt to modify or repair the light. Contact the manufacturer for service.
- Keep away from heat sources and open flames.
- Do not hang the light in a manner that could cause damage to the power cord or the light structure.
- Use only with the provided 30V UL listed plug.

PACKAGE CONTENTS

Verify that all components are present:

- 1 x DBFAIRY 24-inch LED Christmas Snowflake Light (Model DMO-300)
- 1 x 30V UL Listed Power Adapter with 16.8ft Lead Cord

SETUP

1. **Unpacking:** Carefully remove the snowflake light from its packaging. Inspect for any damage.

2. **Placement:** Choose a suitable location for hanging the light. The integrated hanging circle allows for easy suspension. Ensure the 16.8ft lead cord can reach a power outlet without tension.
3. **Hanging:** Use a sturdy hook or appropriate mounting hardware (not included) to hang the snowflake light. The light is constructed with a durable metal frame wrapped in PVC rope light.
4. **Power Connection:** Plug the 30V UL listed power adapter into a standard electrical outlet. Ensure the outlet is protected from moisture if used outdoors.



Image: DBFAIRY 24-inch LED Snowflake Light installed on a house exterior, demonstrating typical outdoor placement.



Image: DBFAIRY 24-inch LED Snowflake Light illuminating a home's front porch, showcasing another common installation area.

SIZE SPECIFICATION

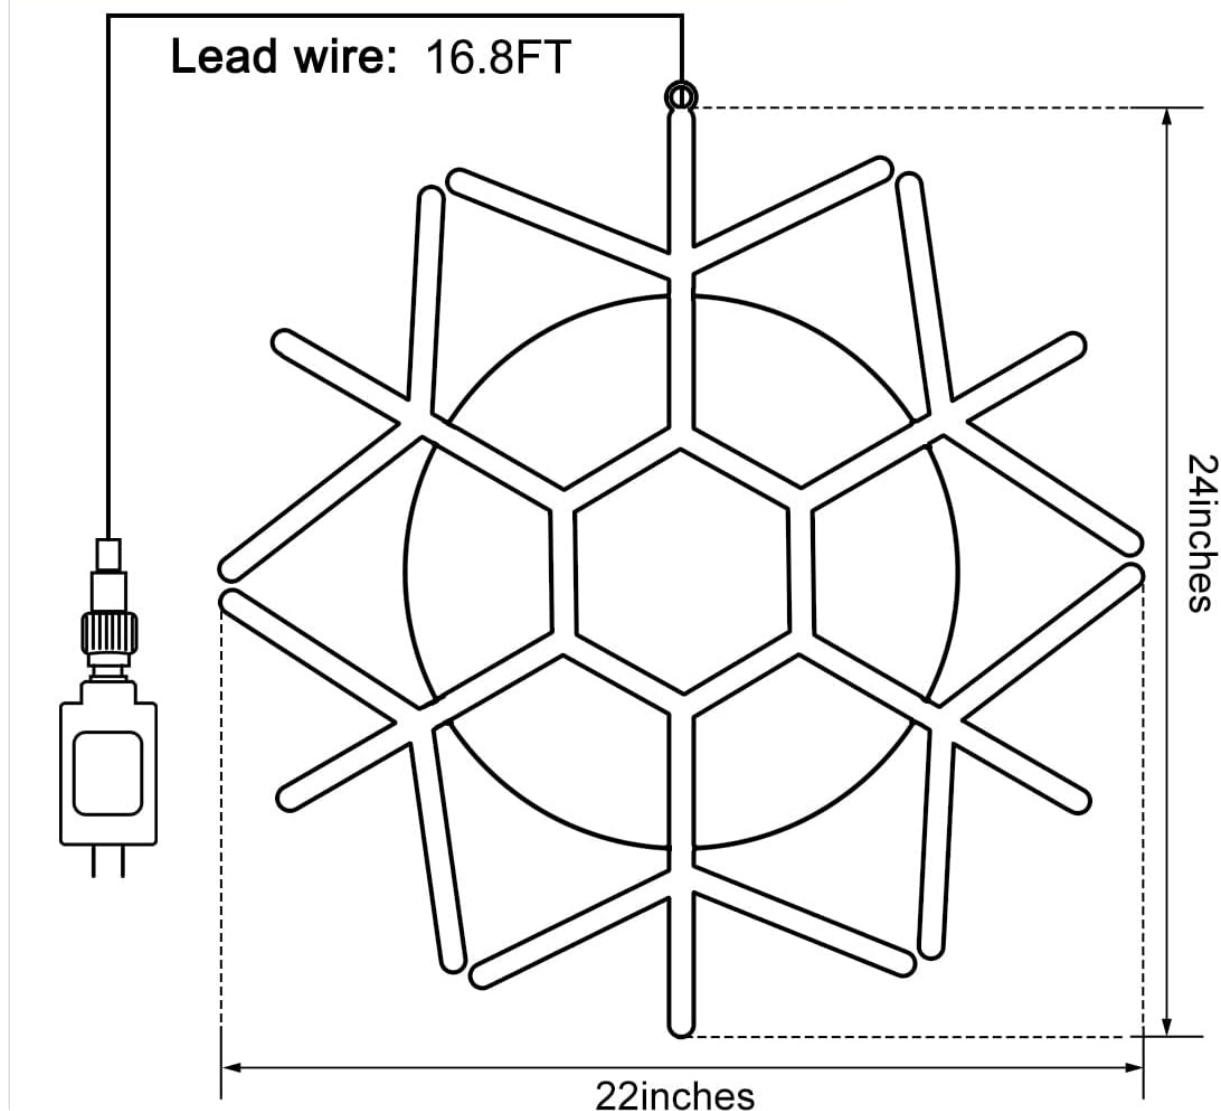


Image: Size specification diagram for the DBFAIRY LED Snowflake Light, indicating a 24-inch height, 22-inch width, and a 16.8ft lead wire for flexible placement.

OPERATING INSTRUCTIONS

The DBFAIRY LED Snowflake Light features a built-in timer function:

- **Activating the Timer:** Press the button located on the power adapter plug. The timer is active when the warm white indicator light on the plug illuminates.
- **Timer Cycle:** Once activated, the light will operate for 6 hours and then automatically turn off for 18 hours. This cycle repeats daily.
- **Deactivating the Timer:** Press the button on the plug again until the indicator light turns off. The light will then remain continuously on until manually unplugged or the button is pressed again to reactivate the timer.



Image: DBFAIRY LED Snowflake Lights on a porch and in a window, illustrating the automatic 6-hour on / 18-hour off timer function.

MAINTENANCE

- **Cleaning:** Disconnect power before cleaning. Wipe the light gently with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the light in its original packaging or a protective container in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the power cord and light for any signs of damage, such as frayed wires or cracked insulation. Discontinue use if damage is found.



Image: DBFAIRY LED Snowflake Lights demonstrating their IP65 waterproof rating, suitable for various outdoor weather conditions including rain and snow.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power to the outlet. Plug not fully inserted. Timer is active and currently in the 'off' cycle.	Check the power outlet with another device. Ensure the plug is securely inserted. Press the button on the plug to check the timer status or deactivate it.
Light flickers or dims.	Loose connection. Power fluctuation.	Check all connections, including the plug. If power fluctuations are common, consider a surge protector.
Timer function is not working as expected.	Timer not activated correctly. Power interruption reset the timer.	Ensure the indicator light on the plug is on. If power was interrupted, reset the timer by pressing the button on the plug.

SPECIFICATIONS

Feature	Detail
Model Number	DMO-300
Dimensions	24 inches (Height) x 22 inches (Width)
Light Color	Warm White
Number of LEDs	180
Voltage	30 Volts
Wattage	36 watts
Power Source	Corded Electric
Lead Cord Length	16.8 feet
Special Features	Built-in Timer (6H On/18H Off), Waterproof (IP67 rated for light, plug requires dry conditions)
Material	Plastic (PVC rope light), Metal (frame)
Bulb Type	LED
Color Temperature	2700 Kelvin
Manufacturer	Linhai Dema Lighting Co Ltd

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.