

SIBRILLE MF19195

SIBRILLE Modern Stepless Dimmable Standing Lamp User Manual

Model: MF19195

1. SAFETY INSTRUCTIONS

- Ensure the lamp is placed on a stable, level surface to prevent tipping.
- This product is designed for indoor use only. Do not expose to water or high humidity.
- Do not attempt to disassemble or modify the lamp. Refer all servicing to qualified personnel.
- Keep the power cord away from heat sources, sharp edges, and moving parts.
- Unplug the lamp from the power outlet before cleaning or performing any maintenance.

2. PRODUCT OVERVIEW

The SIBRILLE Modern Stepless Dimmable Standing Lamp is designed to provide versatile and comfortable lighting for various environments. It features a contemporary design with advanced control options.

Key Features:

- **Stepless Dimmable Brightness:** Adjust light intensity from 5% to 100%.
- **Adjustable Color Temperature:** Seamlessly transition from warm white (3000K) to cool white (6000K).
- **Rotatable Lamp Head:** Two adjustable lamp parts can be twisted to direct light as needed.
- **Dual Control Methods:** Operate via remote control or integrated touch controls on the lamp pole.
- **Magnetic Remote Holder:** Conveniently store the remote directly on the lamp pole.
- **Long Lifespan:** Built-in LEDs designed to last up to 50,000 hours.



Figure 2.1: SIBRILLE Modern Stepless Dimmable Standing Lamp with its remote control.



Figure 2.2: Detailed view of lamp features including its 69-inch height, 330-degree rotatable lamp head, touch control, remote control, magnetic remote attraction, and sturdy base.

3. SETUP

Assembly of the SIBRILLE floor lamp is straightforward and requires no special tools.

Assembly Steps:

1. Carefully unpack all components from the packaging.
2. Screw the individual pole sections together clockwise until they are securely tightened.
3. Attach the assembled pole to the lamp base, ensuring it is stable.
4. Connect the power cable to a suitable power outlet.

5. Insert two AAA batteries (not included) into the remote control. The remote is typically pre-paired with the lamp.

Once assembled, position the lamp in your desired location, ensuring the base is fully supported and the lamp is stable.

4. OPERATING INSTRUCTIONS

The SIBRILLE floor lamp offers flexible control over its lighting features.

Control Methods:

- **Remote Control:** The included remote allows for comprehensive control from a distance. It features buttons for power, brightness adjustment, color temperature adjustment, and preset scene modes. The remote can be magnetically attached to the lamp pole for easy access.
- **Touch Control:** The lamp pole has integrated touch controls for basic functions including ON/OFF, brightness adjustment, and color temperature adjustment.



Remote & Touch Control

Adjust Lighting Without Standing Up



50FT/15M



Magnetic Design



1H Timer



Color Adjustment

Brightness Adjustment

ON/OFF

Easily for the Young or Elder

Figure 4.1: Remote and Touch Control functions. The remote offers power, 1-hour timer, max brightness, brightness +/- , color temperature +/- , and preset modes (Leisure, Reading, Working, Soft Light, Night Light). The touch control on the lamp pole offers color adjustment, brightness adjustment, and ON/OFF.

Adjusting Brightness and Color Temperature:

- **Brightness:** Use the brightness +/- buttons on the remote or the touch control slider on the lamp pole to adjust the light intensity from 5% (dimpest) to 100% (brightest).
- **Color Temperature:** Use the color temperature +/- buttons on the remote or the touch control on the lamp pole to cycle through color temperatures from warm white (3000K) to cool white (6000K).

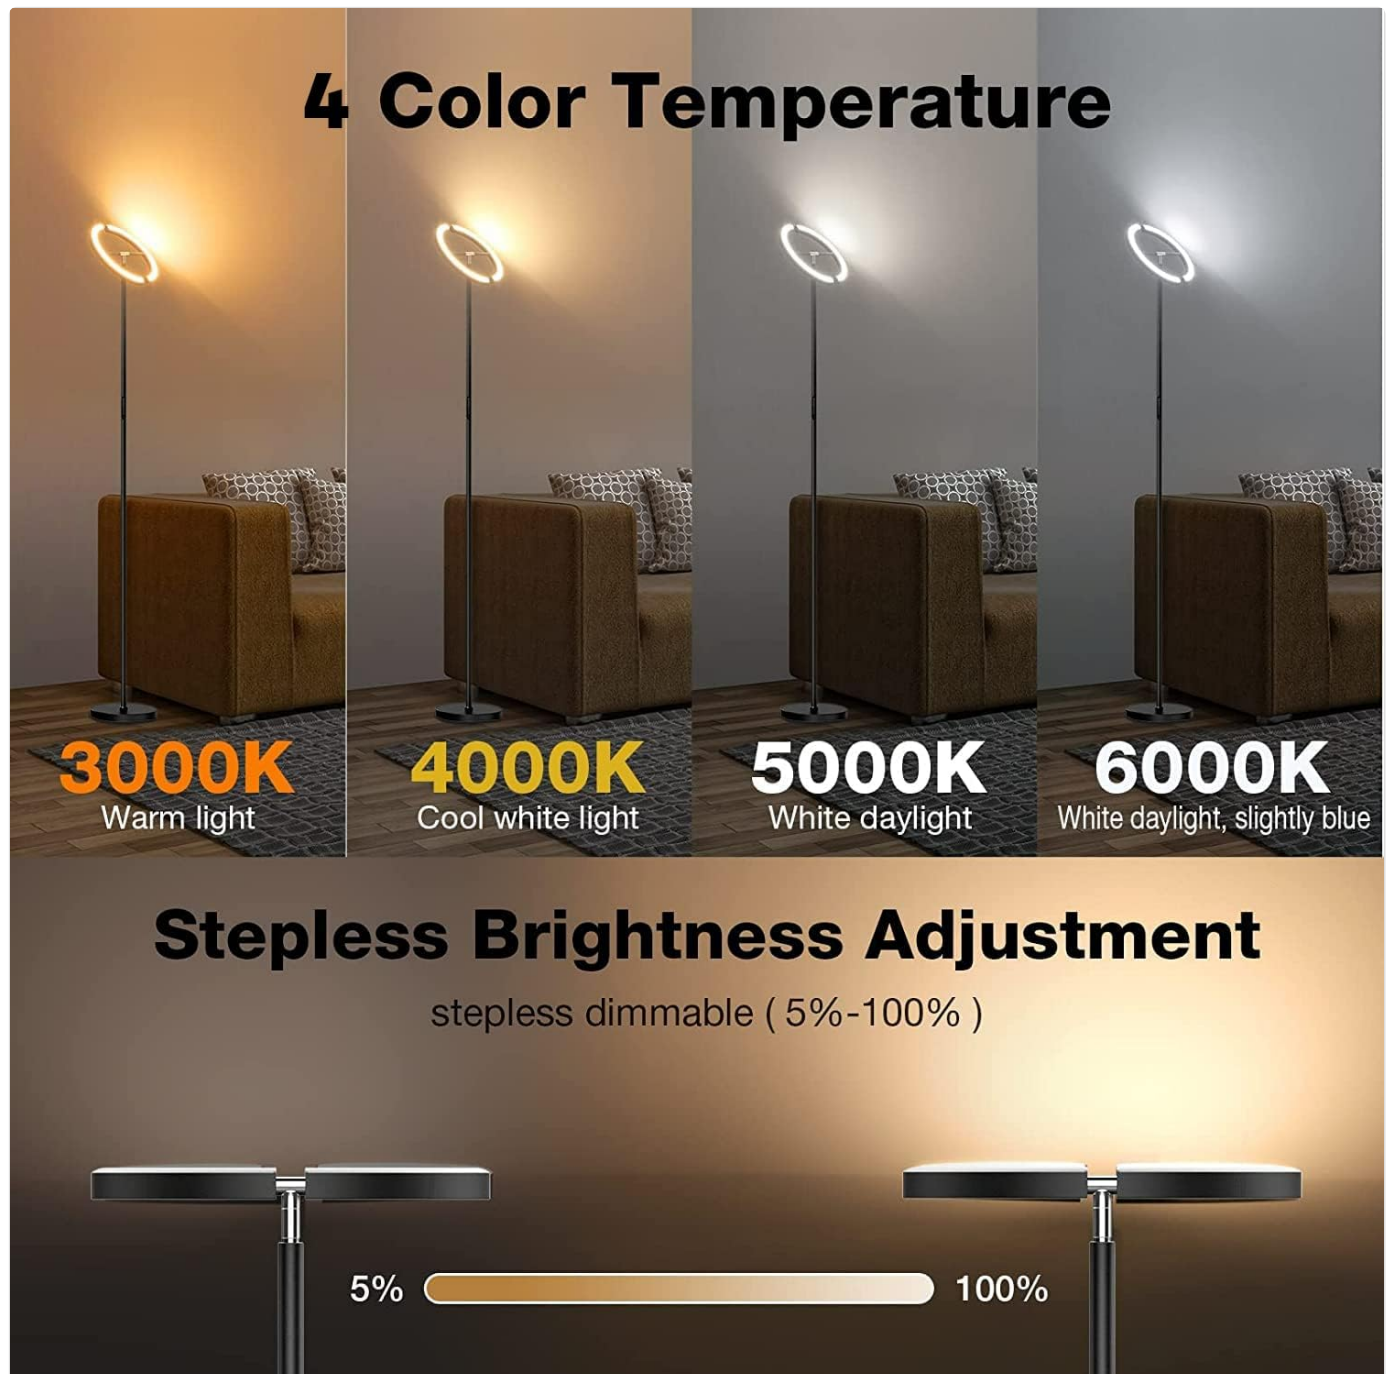


Figure 4.2: Visual representation of the four color temperature settings and the stepless brightness adjustment range.

Scene Memory Function:

The lamp includes a scene memory function, allowing you to quickly switch between optimized lighting settings for different activities.

- **Reading Mode (MEM1):** Optimized for reading, providing clear and comfortable light.

- **Working Mode (MEM2):** Bright and focused light suitable for work or tasks.
- **Free Time Mode (MEM3):** A balanced light setting for general relaxation.
- **Night Mode (MEM4):** A very dim, warm light for minimal illumination during the night.



Figure 4.3: Examples of the lamp's scene memory functions, adapting to various activities and times of day.

Rotatable Lamp Head:

The two light bars can be independently rotated up to 330 degrees, allowing you to direct light precisely where it's needed, whether for uplighting, task lighting, or a combination.

Direct the Light to Where Your Need



Reading mode



Work mode



Leisure mode



Breastfeed mode



Night light mode



Figure 4.4: The lamp's ability to direct light for specific needs, such as reading or working.

Official Product Videos:

Your browser does not support the video tag.

Video 4.1: Demonstrates the SIBRILLE Stepless Dimmable Floor Lamp for Living Room, showcasing its features and adjustability.

Your browser does not support the video tag.

Video 4.2: Overview of the SIBRILLE Modern Stepless Dimmable Floor Lamp, highlighting its functionality for various room settings.

5. MAINTENANCE

To ensure the longevity and optimal performance of your SIBRILLE floor lamp, follow these simple maintenance guidelines:

- **Cleaning:** Before cleaning, always unplug the lamp from the power outlet. Use a soft, dry cloth to wipe down the lamp's surfaces. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.
- **LED Lifespan:** The integrated LED lights are designed for a long lifespan of approximately 50,000 hours under normal use, requiring no bulb replacement.
- **Storage:** If storing the lamp for an extended period, ensure it is clean, dry, and stored in a cool, dry place away from direct sunlight.

6. TROUBLESHOOTING

If you encounter any issues with your SIBRILLE floor lamp, please refer to the following common problems and their solutions:

Problem	Possible Cause	Solution
Lamp does not turn on.	No power supply; loose connection.	Ensure the power cord is securely plugged into a working outlet. Check if the outlet has power.
Remote control is not responding.	Batteries are dead or incorrectly inserted; remote is out of range; remote needs re-pairing.	Replace remote batteries (AAA). Ensure remote is within 15m range. If issues persist, refer to the remote's specific pairing instructions (usually involves holding a button near the lamp).
Light flickers or dims unexpectedly.	Unstable power supply; internal component issue.	Try plugging the lamp into a different power outlet. If the problem continues, discontinue use and contact customer support.
Lamp pole feels loose after assembly.	Sections not fully tightened.	Gently re-tighten all screw-in sections of the lamp pole.

If you experience a problem not listed here or if the suggested solutions do not resolve the issue, please contact SIBRILLE customer support for assistance.

7. SPECIFICATIONS

Feature	Detail
Model Number	MF19195
Power Source	Corded Electric
Wattage	22 Watts
Brightness	Up to 1300 Lumens

Feature	Detail
Color Temperature	3000K - 6000K (Stepless)
Control Method	Remote Control & Touch Control
Material	Plastic, Metal
Product Dimensions	16.37"D x 13.18"W x 4.52"H (Base: 10" diameter, 1.2" height)
Item Weight	9.68 pounds
Average Life	50,000 Hours
Connectivity Technology	RF (Remote Control)
Assembly Required	Yes
Included Components	Bulb included (integrated LED)

8. WARRANTY & SUPPORT

SIBRILLE stands behind the quality of its products.

- **Product Warranty:** This SIBRILLE floor lamp comes with a 2-year product warranty. This warranty covers any quality-related problems that may arise during normal use.
- **Customer Support:** For any questions, concerns, or warranty claims, please contact SIBRILLE customer support through the platform where you purchased the product or refer to the contact information provided with your purchase receipt.

© 2025 SIBRILLE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details.](#)

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question