

HearthSong Z33302SICPK

HearthSong 6-Foot Lighted Hideaway Canopy and Backyard Play Space Instruction Manual

1. PRODUCT OVERVIEW

The HearthSong 6-Foot Lighted Hideaway Canopy is designed to provide a versatile play space for children, suitable for both indoor and outdoor use. This colorful and spacious canopy features a durable, weather-resistant polyester construction, two open windows for ventilation, and a tie-back doorway for easy access. It includes a strand of globe string lights to enhance the play experience.

Key Features:

- **Dimensions:** 6 feet high x 4 feet diameter.
- **Material:** Weather-resistant polyester fabric.
- **Design:** Two open windows and a tie-back doorway.
- **Lighting:** 126-inch long battery-operated outdoor globe string lights (3 AA batteries required, not included).
- **Versatility:** Suitable for indoor or outdoor installation.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

- Always supervise children during play.
- Ensure the canopy is securely installed to prevent accidental falls or collapse.
- Keep the canopy away from open flames or heat sources.
- Do not leave the canopy outdoors during inclement weather or for extended periods to prevent damage and ensure longevity.
- Batteries for the string lights should be installed and replaced by an adult. Do not mix old and new batteries, or different types of batteries.

3. SETUP INSTRUCTIONS

3.1 Unpacking and Preparation

1. Carefully remove all components from the packaging.
2. Verify that all parts are present: canopy fabric, string lights, and battery pack.
3. Ensure you have 3 AA batteries (not included) for the string lights and appropriate hanging hardware (sold separately) if installing outdoors.

3.2 Hanging the Canopy

The canopy is designed to be hung from a secure point. Hanging hardware is not included and must be purchased separately based on your installation location (e.g., ceiling hook for indoors, sturdy tree branch for outdoors).

1. Identify a suitable, sturdy overhead point for hanging. Ensure it can safely support the weight of the canopy and any potential interaction from children.
2. Attach appropriate hanging hardware (e.g., a robust hook) to your chosen location.
3. Locate the hanging loop at the top center of the canopy.
4. Securely attach the canopy's hanging loop to your installed hardware. Ensure the canopy hangs evenly and is at a safe height for children to enter and exit comfortably.



Image 1: The HearthSong Lighted Hideaway Canopy installed outdoors, providing a play space for children.

3.3 Installing the String Lights

The included globe string lights can be installed either inside or outside the canopy, depending on preference. For indoor use, installing them inside creates a cozy, illuminated space.

1. Open the battery compartment on the string light's battery pack.
2. Insert 3 AA batteries, ensuring correct polarity (+/-). Close the compartment securely.

3. Locate the small fabric ties positioned along the top interior or exterior rim of the canopy.
4. Thread the string lights through these ties, distributing the lights evenly around the canopy. Secure them by tying the fabric ties.
5. Position the battery pack in a convenient, accessible location, ensuring it is out of reach of small children but easy for an adult to operate.



Image 2: A close-up view of the globe string lights illuminating the interior of the canopy.

4. OPERATION

4.1 Using the Doorway

The canopy features a spacious tie-back doorway. To open, simply pull the two fabric panels apart. To keep the doorway open, roll each panel neatly and secure it using the attached fabric ties on the sides.

4.2 Using the Windows

Two open windows provide natural light and ventilation within the canopy. These windows are fixed and do not open or close.

4.3 Operating the String Lights

To turn the string lights on or off, locate the battery pack and press the power button. The lights are designed for simple on/off functionality.

5. MAINTENANCE

- **Cleaning:** Spot clean the polyester fabric with a damp cloth and mild soap. Do not machine wash or tumble dry. Allow to air dry completely before storage.
- **Storage:** When not in use, especially during periods of inclement weather or for long-term storage, disassemble the canopy and store it in a dry, cool place away from direct sunlight.

- **Battery Replacement:** Replace batteries in the string lights when they dim or stop working. Always use new AA batteries and dispose of old batteries responsibly.
- **Inspection:** Periodically inspect the canopy fabric, seams, and hanging loop for any signs of wear or damage. Address any issues promptly to ensure continued safe use.

6. TROUBLESHOOTING

- **Lights not working:** Check if batteries are correctly installed and not depleted. Ensure the power button on the battery pack is pressed.
- **Canopy appears unstable:** Re-check the security of the hanging hardware and the canopy's attachment point. Ensure the overhead support is strong enough.
- **Fabric tearing near hanging point:** This can occur with excessive force or prolonged outdoor exposure. Reinforce the hanging loop area if minor damage occurs, or discontinue use if structural integrity is compromised.

7. SPECIFICATIONS

Product Dimensions	48 x 48 x 72 inches (4 ft diameter x 6 ft height)
Item Weight	3.59 pounds
Model Number	Z33302SICPK
Manufacturer Recommended Age	3 - 10 months <i>(Note: Product description suggests suitability for imaginative play, which typically extends beyond 10 months. Please use discretion based on child's development.)</i>
Batteries Required	3 AA batteries (not included)
Material	Weather-resistant polyester

8. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your purchase packaging or visit the official HearthSong website. Keep your proof of purchase for any warranty claims.

Lighted Hideaway Canopy

by *HearthSong*.

- ▷ Create a backyard destination for kids
- ▷ Cozy spacious place to play, read, or daydream
- ▷ Approx. 6'H x 4' diam.
- ▷ 126"L Battery-operated lights can be hung inside OR outside

If hanging outdoors, do not leave outside during inclement weather, or for extended periods of time.



THIS PRODUCT IS INTENDED
FOR USE BY CHILDREN AGES

3
AND UP



Image 3: Product packaging for the HearthSong Lighted Hideaway Canopy, illustrating its features and intended use.