

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Techwood](#) /

› [Techwood TPZ-1805 1800W Pizza Oven Instruction Manual](#)

Techwood TPZ-1805

Techwood TPZ-1805 1800W Pizza Oven Instruction Manual

Brand: Techwood | Model: TPZ-1805

INTRODUCTION

Thank you for choosing the Techwood TPZ-1805 1800W Pizza Oven. This versatile appliance is designed to bring the joy of homemade pizza and a variety of other delicious dishes to your kitchen. With its powerful heating elements, adjustable thermostat, and convenient 180° opening, preparing meals is both easy and enjoyable. Please read this manual carefully before first use to ensure safe operation and optimal performance of your new appliance. Keep these instructions for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully before using the appliance.

- Always ensure the voltage indicated on the appliance corresponds to your mains voltage.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.

- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not use the appliance for other than intended use.
- This appliance is for household use only.

PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the main parts of your Techwood TPZ-1805 Pizza Oven:

- **Main Housing:** The primary body of the appliance.
- **Upper Heating Plate:** The top cooking surface.
- **Lower Heating Plate:** The bottom cooking surface, with non-stick coating.
- **Handle:** For opening and closing the appliance.
- **Adjustable Thermostat Knob:** To set the desired cooking temperature.
- **Power Indicator Light:** Illuminates when the appliance is powered on and heating.
- **Ready Indicator Light:** Illuminates when the set temperature is reached.



Figure 1: The Techwood TPZ-1805 Pizza Oven in its closed position, showcasing its compact design and control knob.



Figure 2: The Techwood TPZ-1805 Pizza Oven opened 180 degrees, demonstrating its dual cooking surfaces with various food items.

SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove the appliance from its packaging. Retain the packaging for future storage or disposal.
2. **Initial Cleaning:** Before first use, wipe the heating plates with a damp cloth and then dry thoroughly. Do not use abrasive cleaners or immerse the appliance in water.

3. **Placement:** Place the pizza oven on a stable, heat-resistant, and dry surface. Ensure there is adequate space around the appliance for ventilation. Do not place it directly under cabinets or near flammable materials.
4. **Power Connection:** Ensure the thermostat knob is in the 'OFF' position before plugging the appliance into a grounded 220-240V ~ 50/60Hz electrical outlet.

OPERATING INSTRUCTIONS

Preheating

1. Close the pizza oven and plug it into a suitable power outlet. The power indicator light will illuminate.
2. Turn the adjustable thermostat knob to your desired temperature setting. For most pizzas, a high setting is recommended.
3. Allow the appliance to preheat. The ready indicator light will turn off once the set temperature is reached, indicating it's ready for use. It may cycle on and off during cooking to maintain temperature.

Cooking

The Techwood TPZ-1805 features dual multifunction heating surfaces and a 180° opening, allowing for versatile cooking options.

- **For Pizza:** Place your pizza directly onto the lower non-stick heating plate. Close the lid. Cook for the recommended time based on your pizza type and desired crispiness. Monitor through the cooking process.
- **For Tarts, Grilling, Crepes, and More:** The appliance can be opened 180 degrees to utilize both heating plates simultaneously as a grill or griddle. Carefully open the lid fully until it lies flat. Place food items on the desired heating surface. Adjust the thermostat as needed for different recipes.
- Always use heat-resistant utensils (plastic or wood) to avoid damaging the non-stick coating.
- When cooking is complete, carefully remove food using appropriate utensils.

Automatic Shut-off

The appliance is equipped with an automatic shut-off function for safety. If the internal temperature exceeds a safe limit, the heating elements will temporarily turn off. They will resume heating once the temperature returns to a safe level.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your pizza oven.

1. **Cool Down:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Cleaning Heating Plates:** Wipe the non-stick heating plates with a soft, damp cloth or sponge.

For stubborn food residue, use a small amount of mild dish soap, then wipe clean with a damp cloth and dry thoroughly. Do not use abrasive pads, metal brushes, or harsh chemicals, as these can damage the non-stick coating.

3. **Cleaning Exterior:** Wipe the exterior housing with a soft, damp cloth. Do not use abrasive cleaners.
4. **Do Not Immerse:** Never immerse the appliance, power cord, or plug in water or any other liquid.
5. **Storage:** Once clean and dry, store the pizza oven in a cool, dry place. You can store it in its original packaging if desired.

TROUBLESHOOTING GUIDE

If you encounter any issues with your Techwood TPZ-1805 Pizza Oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; thermostat knob not set.	Ensure the appliance is securely plugged into a working outlet. Check the circuit breaker. Turn the thermostat knob to a desired temperature.
Food not cooking evenly.	Uneven food placement; insufficient preheating.	Ensure food is centered on the heating plate. Allow the appliance to fully preheat until the ready indicator light cycles off.
Smoke or odor during first use.	Protective coatings burning off.	This is normal for initial use. Ensure good ventilation. The odor should dissipate after a few minutes.
Non-stick coating is damaged.	Use of metal utensils or abrasive cleaners.	Always use wooden or heat-resistant plastic utensils. Clean with soft cloths and mild soap only.

If the problem persists after trying these solutions, please contact customer support.

TECHNICAL SPECIFICATIONS

Model Number	TPZ-1805
Power	1800 Watts
Voltage	220-240V ~ 50/60Hz

Product Dimensions (L x W x H)	45.6 x 19.5 x 35.6 cm
Item Weight	3.88 kg
Cooking Surface Diameter	30 cm
Material	Metal
Special Features	180° Opening, Dual Multifunction Heating Surfaces, Adjustable Thermostat, Indicator Light, Non-Stick Coating, Automatic Shut-off

WARRANTY AND SPARE PARTS

This Techwood appliance is designed for durability and performance. Spare parts for this model are generally available for up to 5 years from the date of purchase. For specific warranty terms and conditions, please refer to the warranty card included with your product or contact your retailer.

CUSTOMER SUPPORT

Should you have any questions, require assistance, or need to report a problem with your Techwood TPZ-1805 Pizza Oven, please contact the retailer where you purchased the product or refer to the official Techwood website for customer service contact information.