

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Link2Home](#) /

› [Link2Home Extend & Tilt TV Wall Mount \(Model: B0B72CCPY4\) Instruction Manual](#)

Link2Home B0B72CCPY4

Link2Home Extend & Tilt TV Wall Mount Instruction Manual

Brand: Link2Home | Model: B0B72CCPY4

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient installation, operation, and maintenance of your Link2Home Extend & Tilt TV Wall Mount. Designed for televisions ranging from 42 to 90 inches and supporting up to 154 pounds, this mount offers versatile viewing options with its extendable, swivel, and tilt features. Please read all instructions carefully before beginning installation.

Key Features:

- Universal TV Wall Mount for 42" to 90" screen sizes.
- Supports up to 154 pounds.
- Compatible with Flat and Curved Screen TVs & Monitors.
- Profile extends 3.1" to 5.3" from the wall.
- Open architecture for increased ventilation and easy access to wires.
- Adjustable tilt range: +5° to -12°.
- Adjustable swivel range: +5° to -5°.
- Screen level adjustment: +-0.98".
- Easy-grip knobs for quick, toolless tilt and lock.
- Anti-theft locking hole (padlock not included).
- Automatic click-in spring lock for secure hold.
- VESA compatibility: 200x200 mm to 600x400mm.
- Includes all necessary hardware and a built-in level.
- Mounts on wood studs, brick, concrete, and sheetrock/plasterboard walls.

2. SAFETY INFORMATION

- **Weight Capacity:** Do not exceed the maximum weight capacity of 154 lbs (70 kg). This mount is designed for use with specified maximum weights. Use with products heavier than the maximum weights indicated may result in instability causing possible injury.

- **Screen Size:** This mount is suitable for TVs between 42" and 90".
- **Mounting Surface:** Ensure the mounting surface can safely support the combined weight of the equipment and all attached hardware.
- **Professional Installation:** If you are unsure about the installation process or the suitability of your wall, consult a qualified professional.
- **VESA Compatibility:** Verify your TV's VESA mounting pattern (distance between screw holes on the back of the TV) is within the supported range of 200x200mm to 600x400mm.
- **Tools:** Use appropriate tools for installation. Always wear safety glasses.
- **Children:** Keep children away from the installation area.

3. PACKAGE CONTENTS

Your Link2Home Extend & Tilt TV Wall Mount package includes the following components and hardware:

- Wall Plate Assembly
- TV Brackets (Left and Right)
- Assorted TV Screws, Washers, and Spacers
- Lag Bolts and Wall Anchors (for various wall types)
- Built-in Level
- Cable Ties (for cord management)
- Instruction Manual



ADVANCED EXTEND & TILT



**Easy-Grip Knobs for
quick tilt and lock**



Image: Overview of the Link2Home Extend & Tilt TV Wall Mount components, showing the main wall plate, TV attachment arms, and bags of screws, washers, and spacers for different TV models and wall types.

4. SETUP AND INSTALLATION

Follow these steps carefully to install your TV wall mount:

Step 1: Attach TV Brackets to Your TV

1. Carefully place your TV face-down on a soft, clean surface to prevent scratches.
2. Identify the VESA mounting holes on the back of your TV.
3. Select the appropriate screws, washers, and spacers from the provided hardware kit that fit your TV's VESA pattern.
4. Attach the left and right TV brackets to the back of your TV, ensuring they are securely fastened. The hooks on the brackets should face upwards.



Link2Home Extend & Tilt TV Wall Mount for Any TV Type 42" - 90"

MB-649-TF

Extend, Swivel & Tilt
Holds up to 154 lbs.



Mounting
Hardware
Included

Image: The TV brackets are shown being screwed into the VESA mounting holes on the back of a television, illustrating the initial step of attaching the mount to the TV.

Step 2: Locate Mounting Position on Wall

1. Determine the desired height for your TV.
2. Use a stud finder to locate wood studs in your wall. Mark the edges and center of the studs. For brick or concrete walls, ensure you have the correct anchors.
3. Hold the wall plate against the wall at your desired height and use the built-in level to ensure it is perfectly horizontal. Mark the pilot hole locations.

Step 3: Mount Wall Plate to Wall

1. Drill pilot holes at the marked locations. The size of the drill bit will depend on your wall type (wood, brick, concrete).
2. If installing into concrete or brick, insert the appropriate wall anchors into the pilot holes.
3. Align the wall plate with the pilot holes and secure it to the wall using the provided lag bolts. Tighten all bolts firmly.



Image: The main wall plate of the TV mount is shown attached to a wall, indicating the completion of the wall mounting step.

Step 4: Hang TV on Wall Plate

1. With assistance, carefully lift the TV and hook the attached TV brackets onto the wall plate.
2. Ensure both TV brackets are properly seated and engaged with the wall plate. The automatic click-in spring lock will snap into place for a secure hold.

Installation Video:

Video: An official Link2Home installation guide demonstrating the steps to set up the Extend & Tilt TV Wall Mount. This video provides a visual walkthrough of the assembly and mounting process.

5. OPERATING INSTRUCTIONS

Your Link2Home Extend & Tilt TV Wall Mount offers flexible viewing angles:

Adjusting Tilt:

- To adjust the vertical tilt angle (+5° to -12°), loosen the easy-grip knobs on the TV brackets.
- Adjust the TV to your desired tilt angle.

- Tighten the easy-grip knobs to lock the TV in place.

Adjusting Swivel:

- The mount allows for a swivel range of $+5^\circ$ to -5° . Gently push or pull the side of the TV to achieve the desired horizontal viewing angle.

Extending/Retracting:

- The mount can extend from 3.1" to 5.3" from the wall. Gently pull the TV forward or push it back towards the wall.



Image: A visual representation of the mount's adjustable features, including tilt range ($+5^\circ$ to -12°), swivel range ($+5^\circ$ to -5°), and extension up to 5.3 inches, highlighting the easy-grip knobs for adjustment.

Accessing Wires:

- The extendable profile and open architecture provide easy access to cables and ports on the back of your TV.





Image: A person's hand is shown connecting a cable to the back of a television that is mounted on the wall, illustrating the ease of access to ports and wiring due to the mount's design.

6. MAINTENANCE

- **Regular Inspection:** Periodically check that all screws and bolts are securely tightened.
- **Cleaning:** Clean the mount with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Lubrication:** No lubrication is required for the moving parts.

7. TROUBLESHOOTING

- **TV Not Level:** Use the screen level adjustment feature by twisting the screws on the arms for micro-adjustment. Ensure the wall plate was installed level using the built-in level.
- **Difficulty Adjusting Tilt/Swivel:** Ensure the easy-grip knobs are sufficiently loosened before attempting to adjust the tilt. For swivel, apply gentle, even pressure.
- **TV Feels Loose:** Double-check that all mounting bolts on the wall plate and TV brackets are securely tightened. Ensure the automatic click-in spring lock is engaged.
- **Cannot Remove TV from Mount:** Pull the release strings located at the bottom of the TV brackets to disengage the locking mechanism.

8. SPECIFICATIONS

Specification	Detail
Brand	Link2Home
Model	B0B72CCPY4
Screen Size Compatibility	42" - 90"
Weight Capacity	Up to 154 lbs (70 kg)
VESA Compatibility	200x200mm to 600x400mm
Tilt Angle	+5° to -12°

Swivel Angle	+5° to -5°
Extension Profile	3.1" to 5.3"
Material	Metal
Color	Black
Mounting Type	Wall Mount
Product Dimensions	28.15 x 8.54 x 3.62 inches
Item Weight	10.38 pounds

9. WARRANTY AND SUPPORT

The Link2Home Extend & Tilt TV Wall Mount comes with a **Lifetime Warranty**. For any questions, technical support, or warranty claims, please refer to the contact information provided in your product packaging or visit the official Link2Home website.