

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Honda](#) /

› [Honda EU3200i 3200 Watt Portable Inverter Generator Instruction Manual](#)

Honda EU3200i

Honda EU3200i 3200 Watt Portable Inverter Generator Instruction Manual

Model: EU3200i

[Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

INTRODUCTION

Thank you for choosing the Honda EU3200i Portable Inverter Generator. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your generator. Please read it thoroughly before use.



Image: The Honda EU3200i Inverter Generator, a compact red and black unit with a top handle, shown from a three-quarter front view.

SETUP

1. Unpacking and Inspection

Carefully remove the generator from its packaging. Inspect for any damage during shipping. Report any damage to your dealer immediately.

2. Placement

Place the generator on a firm, level surface. Ensure adequate ventilation and keep it at least 3 feet (1 meter) away from buildings or other equipment. Never operate indoors or in enclosed areas due to carbon monoxide risk.

3. Add Engine Oil

Your generator is shipped without engine oil. Fill with the recommended oil type (refer to specifications) to the upper limit

mark on the dipstick. Do not overfill.

4. Add Fuel

Use fresh, unleaded gasoline with an octane rating of 86 or higher. Fill the fuel tank carefully, avoiding spills. Do not fill above the upper limit line. Ensure the fuel cap is securely tightened.



Image: A close-up of the Honda EU3200i control panel, showing the engine switch, AC outlets, circuit protectors, and CO-MINDER system.

OPERATING INSTRUCTIONS

1. Starting the Engine

1. Ensure the generator is on a level surface.
2. Turn the engine switch to the "ON" position.
3. If equipped, pull the recoil starter handle firmly until the engine starts.
4. Allow the engine to warm up for a few minutes before connecting electrical loads.

2. Connecting Electrical Loads

Plug your appliances into the AC outlets. Do not exceed the generator's rated output. The Honda Inverter Technology provides clean, stable power suitable for sensitive electronics.

3. Eco Throttle Operation

The Eco Throttle system automatically adjusts engine speed to match the load, improving fuel efficiency and reducing noise. To activate, ensure the Eco Throttle switch is in the "ON" position.



Image: A detailed view of the Honda EU3200i control panel, highlighting the LED indicators for fuel level, Eco Throttle, and CO-MINDER status.

4. CO-MINDER System

The integrated CO-MINDER system monitors carbon monoxide levels. If unsafe levels are detected, the generator will automatically shut down. Move the generator to an open, well-ventilated area if this occurs.

5. Using the Bluetooth App

The Honda EU3200i features Bluetooth connectivity. Download the official Honda My Generator app to monitor fuel levels, output, engine hours, and remotely stop the generator from your smartphone.

MAINTENANCE

Regular maintenance is crucial for the longevity and performance of your generator. Always refer to the detailed maintenance schedule in the full owner's manual.

1. Engine Oil Check and Change

Check the engine oil level before each use. Change the engine oil after the first 20 hours of operation, and then every 100 hours or every 6 months, whichever comes first.

2. Air Filter Cleaning

Clean the air filter every 50 hours or every 3 months, or more frequently in dusty conditions. A dirty air filter can reduce engine performance and increase fuel consumption.

3. Spark Plug Inspection

Inspect the spark plug every 100 hours or every 6 months. Clean or replace if necessary to ensure reliable starting and efficient engine operation.

4. Fuel System Maintenance

If storing the generator for an extended period, drain the fuel tank and carburetor, or use a fuel stabilizer to prevent fuel degradation and gumming.

TROUBLESHOOTING

- Engine will not start:** Check fuel level, engine oil level, spark plug condition, and ensure the engine switch is ON.
- No power output:** Check if circuit protectors have tripped. Reset if necessary. Ensure the generator is not overloaded.
- Engine stops unexpectedly:** Low oil shutdown (Oil Alert), CO-MINDER activation, or lack of fuel. Address the cause before restarting.
- Overload indicator lit:** Reduce the electrical load connected to the generator. If the light remains on, disconnect all loads and restart.

SPECIFICATIONS

Feature	Detail
Brand	Honda
Model Name	EU3200i
Wattage	3200 watts (Starting), 2600 watts (Running)
Fuel Type	Gasoline

Power Source	Fuel Powered
Item Weight	65 Pounds
Voltage	120V
Special Feature	Electric Start, Bluetooth Connectivity, CO-MINDER
Engine Type	4 Stroke, 208 Cubic Centimeters
Tank Volume	5 Gallons
Product Dimensions	12" L x 18" W x 22" H



Image: Diagram showing the dimensions of the Honda EU3200i generator.

WARRANTY & SUPPORT

Warranty Information

This Honda EU3200i generator comes with a **3-year limited warranty**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

Customer Support

For technical assistance, parts, or service, please contact Honda Power Equipment customer support. You can find contact information on the official Honda website or in your full owner's manual.

© 2023 Honda Power Equipment. All rights reserved.