



[Manuals.plus](#) /

› [TURNMEON](#) /

› TURNMEON 6Ft Black Santa Claus Inflatable Christmas Decoration Instruction Manual - Model SAN-272

TURNMEON SAN-272

TURNMEON 6Ft Black Santa Claus Inflatable Christmas Decoration Instruction Manual

Model: SAN-272

1. INTRODUCTION

Thank you for choosing the TURNMEON 6Ft Black Santa Claus Inflatable Christmas Decoration. This product is designed to enhance your outdoor holiday display with its festive design and integrated LED lighting. This manual provides essential information for safe setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your inflatable decoration.



Image 1: The TURNMEON 6Ft Black Santa Claus Inflatable Christmas Decoration illuminated in a snowy outdoor setting.

2. SAFETY INFORMATION

Important Safety Warning:

- Secure the inflatable using the included stakes, rope, and sandbag to prevent it from becoming a projectile in high winds.
- Always follow the manufacturer's instructions for proper inflation and deflation.
- Keep the inflatable away from heat sources, open flames, and sharp objects.
- Ensure all electrical connections are dry and protected from moisture.
- Do not operate the inflatable in extreme weather conditions such as heavy rain, snow, or strong winds.

3. SETUP INSTRUCTIONS

1. **Unpack the Inflatable:** Carefully remove the inflatable and all accessories (power adapter, stakes, sandbags, tethers) from the packaging.
2. **Position the Inflatable:** Choose a flat, clear area in your yard or garden, free from debris and sharp

objects.

3. **Close the Zipper:** Locate the zipper on the back or bottom of the inflatable and ensure it is fully closed to prevent air leakage during inflation.
4. **Connect Power:** Plug the power adapter into the inflatable's built-in blower and then into a standard outdoor-rated electrical outlet. The inflatable will begin to inflate automatically.
5. **Secure the Inflatable:** Once fully inflated, use the provided ground stakes and tethers to secure the inflatable to the ground. Attach the tethers to the designated loops on the inflatable and anchor them with stakes. For added stability, fill the included sandbags with sand or water and place them inside the base of the inflatable.



Image 2: Detailed diagram illustrating the components and two methods for securing the inflatable: ground stakes with tethers and internal sandbags.

Setup Video

Video 1: A seller-provided video demonstrating the inflation process and how to secure the 6Ft Black Santa Claus inflatable.

4. OPERATING INSTRUCTIONS

The TURNMEON inflatable is designed for simple operation. Once properly set up and plugged into a power source, the built-in blower will automatically inflate the decoration, and the internal LED lights will illuminate.

- **Automatic Inflation:** The inflatable will inflate within minutes of being plugged in.
- **LED Illumination:** The integrated LED lights will turn on automatically when the unit is powered, providing a festive glow.
- **Power On/Off:** To turn the inflatable on or off, simply plug or unplug the power adapter from the electrical outlet.

5. MAINTENANCE

- **Cleaning:** To clean the inflatable, wipe it gently with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the inflatable is completely dry before storing.
- **Storage:** To deflate, unplug the power adapter and open the zipper to release air. Once deflated, fold the inflatable neatly and store it in a cool, dry place away from direct sunlight and pests.
- **Material:** The inflatable is crafted from heavy-duty waterproof polyester, designed to resist rain, wind, and tearing. However, prolonged exposure to extreme weather may affect its lifespan.

6. TROUBLESHOOTING

If you encounter issues with your TURNMEON inflatable, please refer to the following common solutions:

- **Inflatable Not Inflating:**
 - a. Check that the power adapter is securely plugged into both the inflatable and the electrical outlet.
 - b. Ensure the electrical outlet is functional. Test with another device.
 - c. Verify that the zipper on the inflatable is fully closed.
 - d. Inspect the blower for any obstructions or damage.
- **Inflatable Not Standing Upright:**
 - a. Confirm the inflatable is fully inflated.
 - b. Ensure all ground stakes and tethers are properly installed and taut.
 - c. Check if the internal sandbags are filled and positioned correctly to provide adequate weight.
- **LED Lights Not Working:**
 - a. Ensure the inflatable is receiving power.
 - b. Check for any loose connections to the LED lights.

Troubleshooting Video (Fan Issue)

Video 2: A user-submitted video demonstrating a fan malfunction, which can be a common troubleshooting point for inflatables.

7. SPECIFICATIONS

Feature	Detail
---------	--------

Brand	TURNMEON
Theme	Black Santa Claus Inflatable
Cartoon Character	Black Santa Claus
Color	Black (Character), Red (Costume)
Material	Polyester
Dimensions (L x W x H)	28.8 x 27.6 x 72 inches (6 feet tall)
Item Weight	1.9 pounds
Model Number	SAN-272
Special Features	Easy Setup, Foldable, Built-in LED Lights, Waterproof Material

8. WARRANTY AND SUPPORT

For warranty information or further assistance, please contact TURNMEON customer support directly. You can also visit the official TURNMEON store for more products and information: [TURNMEON Store](#).